



SERVICE MANUAL



FOCUS - 25/30/45 km/t
MATRIX - 25/30/45 km/t

CARL ANDERSEN MOTORCYKLER A/S

Niels Bohrs Vej 15, Stilling
Postboks 680
DK-8660 Skanderborg

Telefon. 8694 6177

Telefax. 8694 4447

www.ca-mc.dk

email: info@ca-mc.dk


TEKNISK DATA

01-05-2006

Værksted - manual

		30 km/t	45 km/t
Focus 30/45 km/t	Godk. Nr.:	e3*2002/24*274*02	e3*2002*/24*274*02
Matrix-30/45 km/t	Godk. Nr.:	e3*2002/24*274*02	e3*2002*/24*274*02
VIN kode (1-3 ciffer)	17 cifre i alt		TSY
Motor:			
Type/mærkning			KW1E40QMB-4
Type		2-Takt, AC	2-Takt, AC
Volumen		49,2 cc	49,2 cc
Cylinderdiam.		40,0 mm	40,0 mm
Effekt i kW / HP		1,1 / 1,5	2,1 / 2,9
Karburator:	Mikuni		
Type mrk.		IIF-25	16-5681 / 16-5684 / IIF-45
Hoveddyse		45	47,5
Tomgangsdyse		15 - 22	15 - 22
Gasspjælds højde		28 mm	25 mm
Nåleposition		3 fra top	3 fra top
Svømmer højde		18,5 mm	18,5 mm
Luftskrue (omdr. fra bund)		1,5 - 2	1,5 - 2
Tomgang (omdr.)		1800	1800
Tomgangsdyse		15,0 - 22,5	15,0 - 22,5
Hjul / Dæk:			
Forhjul (fælg / dæk)			3.50*12 - 120/70*12
Baghjul (fælg / dæk)			3.50*12 - 130/70*12
Dæktryk foran/bag >100 kg			1,9 / 2,0 (bar)
Dæktryk foran/bag =MAX			1,9 / 2,3 (bar)
Bremsevæske -			DOT 4
Transmissionsolie -	100ml		SAE 80W/90
Elektriske komponenter:			
Batteri 12V-5A			YTX5L-BS
Opladning batteri v/max.			14V
Ladeeffekt (Amp.)			0,4 A
Sikring			8 A
Forpære Focus / Matrix			35/35W-12V, BA20D / H4 spec
Bagpære lys/stop			21/5W-12V, BAY15D
Blinklys			10W-12V, BA15S
Stator/svinghjul/div. :	Ladestrøm		14 V +- 0,5
Lysspole	grøn/rød - sort		1 Ohm (+- 0,4)
Ladespole	hvid - sort		1 Ohm (+- 0,4)
Fødespole (indv)	sort/rød - jord		800 Ohm
Pick-up spole (imellem poler)	blå/hvid		500 Ohm (+- 50)
Tændspole primær (imellem + og -)			0,5 - 0,5 Ohm
Tændspole sek.(imellem + og t-rør			1,4 K Ohm
Tændrørshætte			5 K Ohm
Tændrør (årgang 04 / 05-06)			BR8HS / BR7ES
Fortænding /omdr.			13 grader v/2000
Resistor (lys)			6,6 Ohm
Benzinmåler tank (max / min)			5,5 - 7,0 Ohm / 84 - 86 Ohm
Oliemåler tank (svømmer)			Kontakt = ok, når svømmer er i bund
Elektrisk choker			< 35 Ohm
Fartbegrænsning: iht. komponentmærkat			
Afstandskive i variomatik		4,0 mm	3,2 mm
Forrør mrk.		D30	D45 / CP1-T
Gasspjælds højde		28 mm	25 mm

Index	
General principles	1
Termly maintenance and repair	2
Engine	3
Fuell and lubricate system	4
Electrical system	5
Frame	6
Maintenance information	7

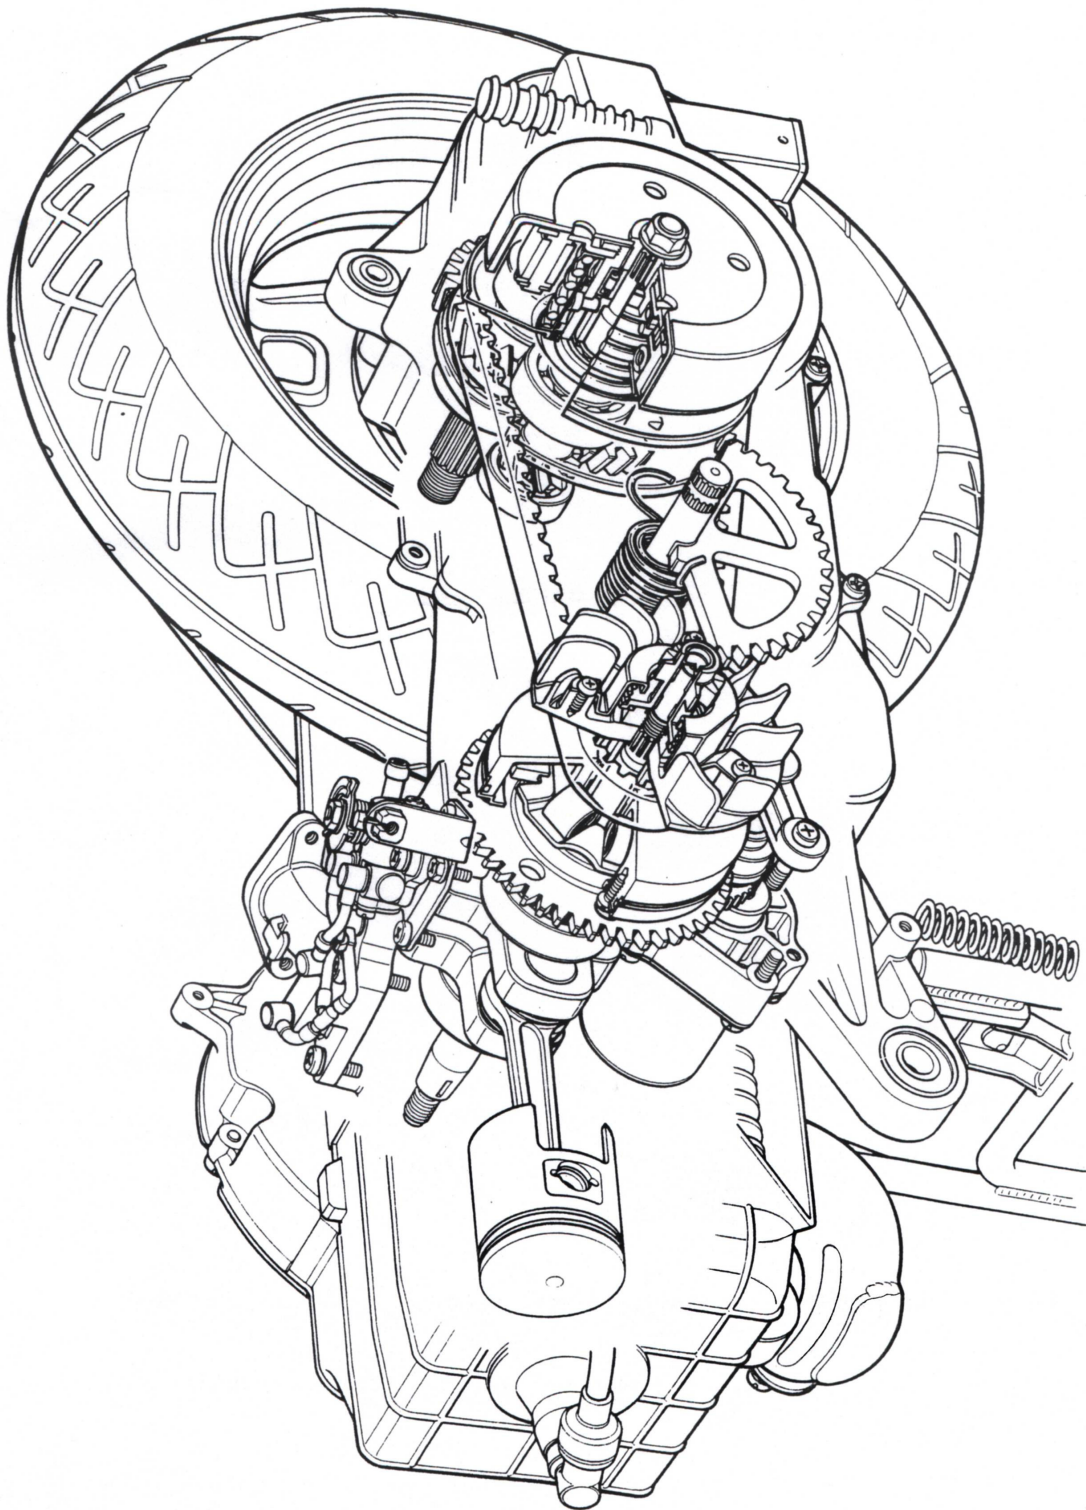

GENERAL PRINCIPLES

CONTENTS

TYPE IDENTIFICATION	1-1
FUEL AND ENGINE OIL	1-1
BREAK-IN PROCEDURE	1-1
PRECAUTIONS AND GENERAL INSTRUCTIONS	1-2
MAINTENANCE TOOLS	1-3
SPECIFICATIONS	1-4


1-1 GENERAL PRINCIPLES

TYPE IDENTIFICATION

ENGINE NUMBER

ENGINE NUMBER① is carved on rear crankcase as Shown in figure.

Both FRAME NUBER AND ENGINE NUMBER are Designed specially for registering your scooter and ordering spare parts.

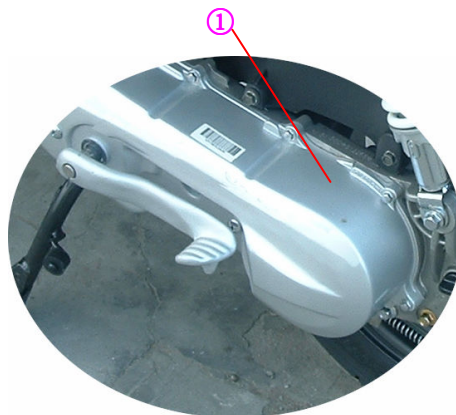

FUEL AND ENGINE OIL

Be sure to use specified fuel and engine oil.
Some specifications are as follows:

FUEL

Unleaded, the minimum octane number is 90 or more.

ENGINE OIL

For QIANJIANG CCI SYSTEM, we recommend special engine oil, you can choose high quality two-stroke engine oil (without being diluted) if without special oil.



GEAR OIL

Use high quality, all-purpose SAE90 engine oil for scooter.

BREAK-IN TIME

General requirements are as follows:

- ◆ Limit break-in speed:
 - At the first **1000KMS** (600 miles) mileage, play throttle less than **4/5 throttle**;
 - After mileage exceeds **1000KMS** (600 miles), play full throttle;
- ◆ Don't run engine too long during break-in time, and try to change throttle position.

1-2 GENERAL PRINCIPLES

PRECAUTIONS AND GENERAL INSTRUCTIONS

Correctly abide by the following items when disassembling and assembling scooter:

- ☐ Don't run engine indoors with little or no ventilation;
- ☐ Be sure to replace new bushings, circlips, O-rings and cotter pins with new ones;

CAUTION

- ◆ It is forbidden to use the circlip removed from shaft, only use new one;
 - ◆ Be very careful to install new circlip for fear that the end hatch of circlip exceeds required sliding surface for shaft;
 - ◆ After installing circlip, inspect whether it has been completely clipped into the groove.
-
- ☐ Fix bigger diameter bolt first when tightening cylinder head or cylinder, and tighten to specified torque gradually from inside to outside at diagonal order.
 - ☐ Use special tools for some special requirements;
 - ☐ Use original components and recommended engine oil;
 - ☐ Keep each other's safety when several persons do;
 - ☐ Inspect looseness and operating state of components after reassembling them.;
 - ☐ Take high care of gasoline, which is explosive, and never use gasoline as lotion.

The words like warning, notice, note may turn out incessantly in the manual, which means:

WARNING—The personal safety of the rider may be involved. Disregarding the information could result in injury to the rider.

CAUTION—These instructions point out special service procedures or precautions that must be followed to avoid damaging the machine.

NOTE—it provides some special information, which keeps maintenance easier and important instructions clearer..

REPLACEMENT COMPONENTS

Be sure to use genuine QIANJIANG components or their equivalent.. Genuine QIANJIANG components are high quality parts which are designed specially for QIANJIANG vehicle.

CAUTION

Damage to the scooter may result from use of replacement components which are not

Equivalent in quality to genuine QIANJIANG parts, and it can lead to performance problems.

1-3 GENERAL PRINCIPLES

SPECIFICATIONS

DIMENSION AND NET WEIGHT

OVERALL LENGTH.....1830mm
OVERALL LENGTH.....695mm
OVERALL HEIGHT.....1160 mm
WHEELBASE.....1295mm
NET WEIGHT.....92kg

CHASSIS

Front shock absorber.....spring, without damp
Rear shock absorber.....spring, oil damp
Turning angle.....48° (toward the left\toward the right)
Front wheel.....120/70-12
Rear wheel.....130/70-12
Front brake.....Disc ϕ 190
Rear brake.....Drum ϕ 110

ENGINE

Type.....two-stroke, forcible wind cooling
Intake system.....piston-reed valve
Cylinder QTY.....1
Bore.....40.0mm
Stroke.....39.6mm
Discharge49.8mL
Compression ratio.....6.9:1
Carburetor.....flat inhale stopper style
Air cleaner.....dry
Starting system...electricity start and kicking start
Lubricating system.....pressure lubricating

Turning signal indicator light...12V/3W

CAPACITY

FUEL TANK.....5.2L
ENGINE OIL TANK.....1L
GEAR OIL.....0.1L

Transmission system

Clutch system dry auto acentric
Gearshift mechanism..... CVT stepless
Operating mode of gears shift mechanism... Automatic acentric
Stepless shift range..... 0.86~2.64

***the above data may be modified without any notification.**

ELECTRIC

Ignition mode.....CDI
Ignition timing.....15° at 1500RPM
Spark plug.....BP8HS
Storage battery.....YTX5L-BS
Generator.....AC magneto
Fuse.....8A
Headlight12V—35/35W
Turning light.....12V/10W
Taillight12V—21/5W
Meter light.....12V/1.7W
Oil level signal indicator light...12V/3W

TERMLY MAINTENANCE AND REPAIR

CONTENT

Periodic maintenance and service schedule.....	2-1
Maintenance and service procedures.....	2-2
Storage battery.....	2-2
Spark plug.....	2-3
Cylinder head nut and exhaust pipe bolt.....	2-3
Cylinder head and cylinder.....	2-4
Fuel level line.....	2-4
Air cleaner.....	2-5
Throttle cable.....	2-5
Engine idle speed.....	2-5
Oil pump.....	2-6
Gear oil.....	2-7
Braking.....	2-7
Tire	2-10
Steering.....	2-10
Front shock absorber.....	2-11
Rear shock absorber.....	2-11
Vehicle bolts and nuts.....	2-11

Periodic maintenance and service schedule

The following table lists all required intervals for maintenance and service, following which, you are assured to have your scooter perform in the best way.

Note

Do more frequent maintenance when often riding on bad road

Periodic maintenance table

Interval	Mile	600	4000	7500	11000	15000
	Kilometer	1000	6000	12000	18000	24000
	Months.	2	12	24	36	48
Storage battery		I	I	I	I	I
Cylinder head nut and exhaust pipe bolt		T	T	T	T	T
Cylinder head and cylinder		—	C	C	C	C
Spark plug		—	R	R	R	R
Air cleaner	Clean every 3000KM(2000 miles)					
Idle speed rpm		I	I	I	I	I
Throttle cable play		I	I	I	I	I
Oil pump		I	I	I	I	I
Gear oil		I	—	I	—	I
Fuel line		I	I	I	I	I
	Replace every 4 years					
Brake		I	I	I	I	I
Brake hose		I	I	I	I	I
	Replace every 4 years					
Brake fluid		I	I	I	I	I
	Replace every 2 years					
Steering		I	I	I	I	I
Front fork		I	I	I	I	I
Rear shock absorber		I	I	I	I	I
Tire		I	I	I	I	I
Vehicle body bolt and nut		T	T	T	T	T

Note

- ◆ I=inspect, clean, adjust, lubricate, or replace if necessary;
A=adjust; C=clean; R=replace; T=tighten

Maintenance and adjustment procedures

The section describes the servicing procedures for each item of the Periodic Maintenance requirements.

Storage battery

Inspect at initially 1000KM (600 miles, 2 months),
and every 6000KM (4000 miles, 12 months) thereafter

- ☐ Uncover seat, and then remove the battery box cap in the Middle of helmet barrel.



- ☐ Disconnect negative pole line end, positive end, and then remove battery;

- ☐ Measure the voltage between the two ends of battery with voltage gauge, charge if the voltage is below 12V



Cylinder head nuts and exhaust pipe bolts

Tighten at initially 1000 km (600 miles, 2 months), and every 6000 km (4000 miles, 12 months)

If cylinder head nuts are not tightened to the specified torque, may result in leakage of compressed fuel-air mixture and reduce output, tighten the cylinder head nuts in the following procedures::

1. Remove the frame lower covers.
2. Remove the cylinder head cover bolt.
3. Remove spark plug cap.
4. Tighten the nuts evenly one by one to the their specified torque. Tighten the nuts in the order indicated.

Tightening torque:




Cylinder head nut: 15-18N.m

Exhaust pipe bolt: 15-18N.m

Cylinder and cylinder head

Remove carbon every 6000 km (4000 miles, 12 months)

Carbon deposits in the combustion chamber and the cylinder head will raise the compression ratio and may cause preignition and overheating. Carbon deposited at the exhaust port of the cylinder will prevent the flow of exhaust gases, reducing the output. Remove carbon deposits periodically.

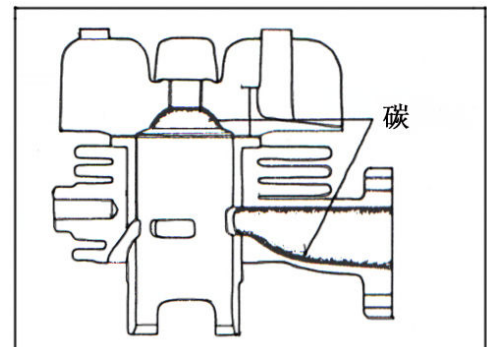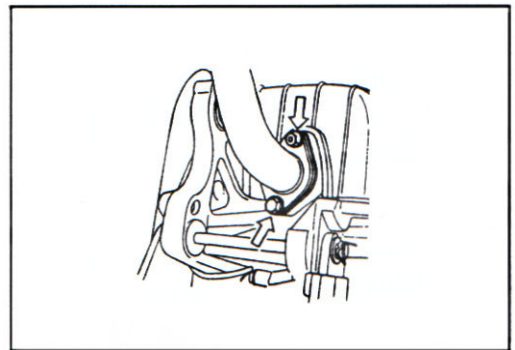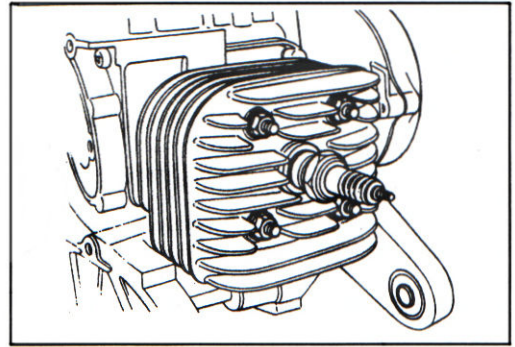

SPARK PLUG

Neglecting the spark plug maintenance eventually leads to difficult starting and poor performance. If the spark plug is used for a long time, the electrode gradually burns away and carbon builds up along the inside part. In accordance with the periodic table, the plug should be removed for inspection, cleaning and to reset the gap.

- Carbon deposits on the spark plug will prevent good sparking and cause misfiring. Clean the deposits off periodically.
- If the center electrode is fairly worn down, the plug should be replaced and the plug gap set to the specified gap using a thickness gauge.

Thickness gauge

Spark plug gap: 0.6-0.7 mm (0.024-0.028 inch)

Check the spark plug for burnt condition. If abnormal replace the spark plug as indicated in the chart.

NGK	TROCH	REMARKS
BPR7HS	E8RTC	If the standard plug is apt to get wet, replace with the plug.
BPR8HS	E7RTC	Standard
BPR9HS	E6RTC	If the standard plug is apt to overheat, replace with the plug.

- Tighten the spark plug to the specified torque.

Spark plug


Tightening torque:15-18N.m

NOTE:

- To check the spark plug, first make sure that the fuel used is unleaded gasoline, and if plug is either sooty with carbon or burnt white, replace it.
- Confirm the thread size and reach when replacing the plug.

FUEL LINE

Inspect at initially 1000 km (600 miles,2 months) and every 6000 km (4000 miles,12 months), replace every 4 years.

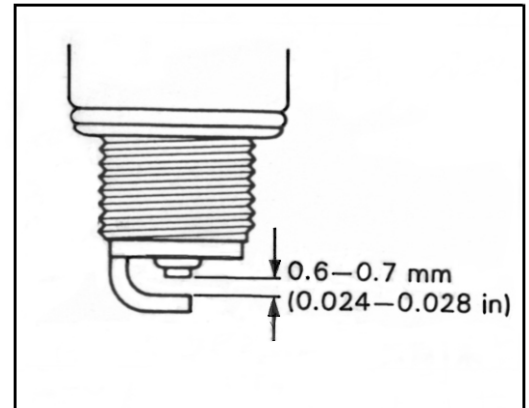


AIR CLEANER

Clean every 3000KM (2000 miles)

If the air cleaner is clogged with dust, intake resistance will, be increased with a resultant decrease in power output and an increase in fuel consumption. Check and clean the element in the following manner.

- ❑ Remove clamp ① and screw ②, take down air cleaner
- ❑ Unscrew tapping screw③, remove air cleaner cap④。
- ❑ Fill a washing pan of a proper size with Non-flammable cleaning solvent. Immerse the air Cleaner in the cleaning solvent and wash them clean.
- ❑ Squeeze the cleaning solvent out of the washed element
By pressing it between the palms of both hands: do not twist or wring the air cleaner filter core element or it will develop tears.,
- ❑ Immerse cleaned filter core of air cleaner in CCI or CCI SUPER oil, and squeeze the oil out of the core, which may be slightly wet with oil.
- ❑ Install air cleaner filter core in the reverse order of removal.

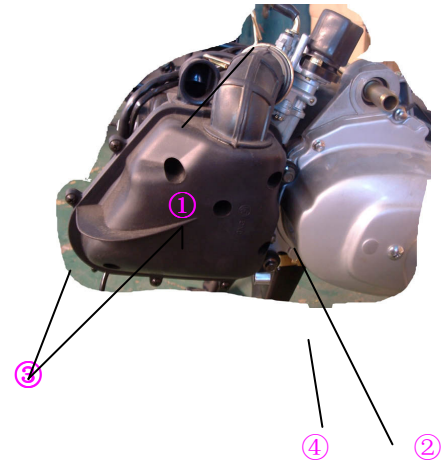

CAUTION:

- ◆ Before and during the cleaning operation, inspect the core for tears. A tore core must be replaced
- ◆ Be sure to position the filter core, so that no incoming air will bypass it. remember, rapid wear of piston rings and cylinder bore is often caused by defective or poorly fitted filter core.

A Non-flammable cleaning solvent

B CCI or CCI SUPER oil

THROTTLE CABLE

Adjust at initially 1000KM (600 miles, 2 months), and every 6000 km (4000 miles, 12 months)

- ❑ Loosen locknut ①, and adjust throttle cable play by turning adjuster ② in or out to obtain the following cable play. After adjusting the calbe play, tighten the locknut.

Cable play: 0.5-1.0MM (0.02.-0.040 inch)


Engine idle speed

Adjust at initially 1000KM (600 miles, 2 months) and every 6000 km (4000 miles, 12 months) thereafter.

- ❑ Adjust the throttle cable play.
- ❑ warm up the engine.

Note:

Warm up engine for 10 minutes.

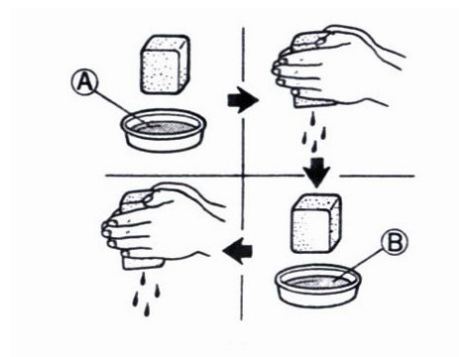


Connect an electric tachometer to the connecting portion of the magneto lead wire as shown in the illustration. Use the selector key "C" position.

Tachometer

Adjust the throttle stop screw to obtain the idle r/min as follows:

Idle speed: 1400 ± 100 r/min

- Finally adjust the throttle cable play.

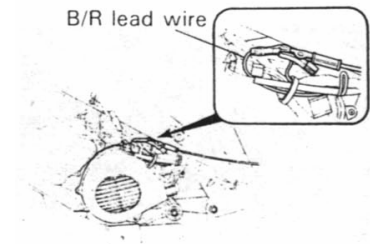

OIL PUMP

Inspect at initially 1000KM (600 miles, 2 months) and every 6000 km (4000 miles, 12 months) thereafter.



The engine oil is fed by the oil pump to the engine. The amount of oil fed to it is regulated by engine speed and oil pump control lever which is controlled by amount of throttle opening.

Check the oil pump in the following manner to confirm correct operation for Throttle valve full opening position.

- Turn the throttle grip full open.
- Check whether the red mark ① on the oil pump control lever is aligned with the index mark ② when the throttle valve is positioned as above.
- If the marks are not aligned, loosen lock nuts ③ and turn the adjuster ④ in or out to align the marks.
- After align the marks, tighten the locknuts.

Caution:

Oil pump cable adjustment must be done after throttle cable adjustment.

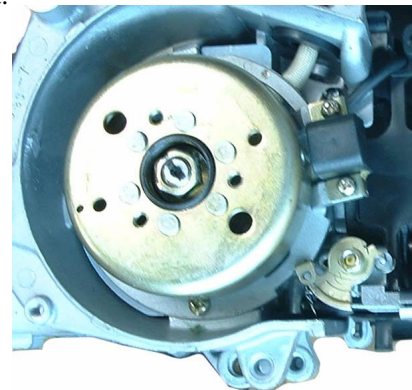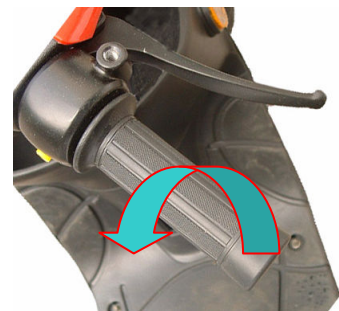

GEAR OIL

Inspect at initially 1000 km (600 miles, 2 months) and every 6000 km (4000 miles, 12 months) thereafter.

Inspect gear oil periodically as follows:

- ☐ Remove the cover and hose
- ☐ Remove the kicking starter lever
- ☐ Remove clutch cover
- ☐ Remove oil level bolt and inspect oil level, if oil level is below oil hole, Add oil until oil flows from the level hole.
- ☐ Tighten oil level bolt to the specified torque.

Tightening torque: 9-15N.m

(0.9-1.5 kg-m , 6.5-11.0 lb-ft)



BRAKES

Inspect at initially 1000 km (600 miles, 2 months) and every 6000 km (4000 miles, 12 months) thereafter, replace brake fluid every 2 years, replace brake hose every 4 years.

Front brake fluid level

- ☐ Keep the scooter upright and place the handlebar straight.
- ☐ Check brake fluid level by observing the lower limit line on the brake fluid reservoir.
- ☐ When the level is below the lower limit line, replenish with Brake fluid that meets the following specification.

Specification and classification: DOT4

QIANJIANG BRAKE FLUID

WARNING:

The brake system of the scooter is filled with a glycol-based brake Fluid. Do not use or mix different types of fluid such as silicone-based and petroleum-based. Do not use any brake fluid taken from old, used or unsealed containers. Never reuse the brake fluid left over from the last servicing and stored for long periods.




the lowest line

WARNING:

Brake fluid, if it leaks, will interfere with safe running and immediately discolor painted surfaces. Check the brake hoses for cracks and hose joints for leakage before riding.

Brake pads

Wearing condition of brake pads can be checked by observing the limit Line ① marked on the pad. When the wear exceeds the limit mark, replace the pads with new ones.

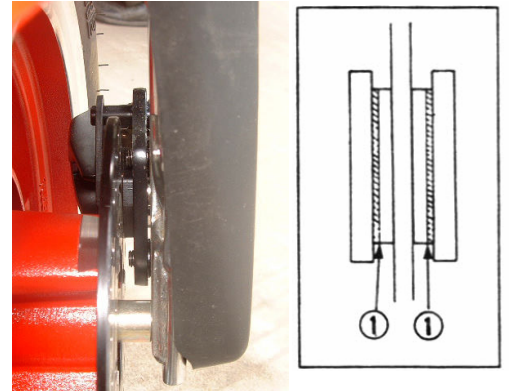

Bleeding air from the brake fluid circuit

Air trapped in the fluid circuit acts like a cushion to absorb a large proportion of the pressure developed by the master cylinder and thus interferes with the full braking performance of the brake caliper. The presence of air is indicated by “sponginess” of the brake lever and also by lack of braking force. Considering the danger to which such trapped air exposes the machine and rider, it is essential that, after remounting the brake and restoring the brake system to the normal condition, the brake fluid circuit be purged of air in the following manner:

- ☐ Fill up the master cylinder reservoir to the upper end of the inspection window. Replace the reservoir cap to prevent entry of dirt.
- ☐ Attach a pipe to the caliper bleeder valve, and insert the free end of the pipe into a receptacle.
- ☐ Bleed air from the bleeder valve.

Squeeze and release the brake lever several times in rapid succession. And squeeze the lever fully without releasing it. Loosen the bleeder valve by turning it a quarter of a turn so that the brake fluid runs into the receptacle: this will remove the tension of the brake lever causing it to touch the handlebar grip. Then, close the valve, pump and squeeze the lever, and open the valve. Repeat the process until the fluid flowing into the receptacle no longer contains air bubbles.



NOTE: when bleeding the brakign system, replenish the brake fluid reservoir if necessary. Make sure that there is always some fluid visible in the reservoir.

- Close the bleeder vavle, disconnect the pipe. Fill the reservoir with brake fluid to the upper end of the inspection window.

BLEEDER VALVE

TIGHTENING TORQUE: 6-9N.m(0.6-0.9kg-m,4.5-6.5lb-ft)

CAUTION:

Handle brake fluid with care: the fluid reacts chemically with paint, plastics, rubber materials, etc.

Rear brake

Turn adjusting nut ① so that the the play ② of Brake lever is 15-25MM as shown in the illustration.



Brake shoe wear:

The vehicle is equipped with the brake lining limit Indicator ③ on the rear brake.

Inspect brake lining limit as follows:

1. First check if the brake system is properly Adjusted.
2. when operating the brake, check to see that the tip of indicator ③ is within the range ④.
3. if the tip of indicator is beyond the range, the brake shoe assembly should be raplaced with a new set of shoe.



Tire

Inspect at initially 1000KM (600 miles, 2 months) and every 6000KM (4000 miles, 12 months) thereafter

Tire pressure:

If the pressure is too high, the scooter will tend to ride stiffly and have poor traction. Conversely, if tire pressure is too low, stability will be adversely affected. Thereafter, maintain the correct tire pressure for good roadability and to prolong tire life.

CAUTION:

Caution:



The standard air pressure of tires is 175/196Kpa, The use of other Than standard may cause handling instability. It is highly recommended to use a QIANJIANG genuine tire.

Tire tread condition:

Operating the scooter with the excessively worn tires will decrease riding stability and consequently invite dangerous situation. It is highly recommended to replace the tire when the remaining depth of tire tread reaches the following specification.

Front and rear: 1.6MM (0.064IN)

Tire depth gauge

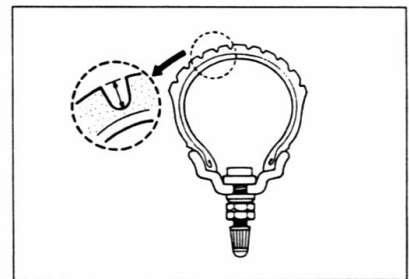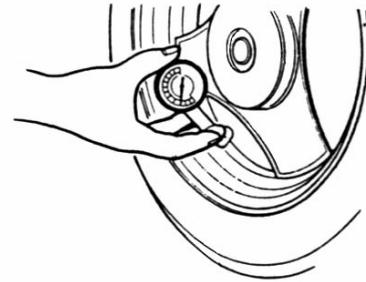

Steering

inspect at initially 1000KM (600 miles, 2 months) and every 6000KM thereafter.

Steering should be adjusted properly for smooth turning of handlebars and safe running. Too stiff steering prevents smooth turning of handlebars and too loose steering will cause poor stability.

Check that there is no play in the front fork assembly by supporting the machine so that the front wheel is off the ground, with wheel straight ahead, grasp lower shock absorber near the axle and pull forward. If play is found, perform steering bearing adjustment.



Front shock absorber

Adjust at initially 1000KM (600 miles, 2 months) and every 6000 km (4000 miles, 12 months) thereafter.

Inspect the front shock absorber for oil leakage or other damage, and replace the defective parts, if necessary.

Rear shock absorber

Adjust at initially 1000KM (600 miles, 2 months) and every 6000 km (4000 miles, 12 months) thereafter.

Inspect front shock absorber for oil leakage and other damage, and replace the defective parts if necessary.

No.	Item	N•m	Kg-m
1	Front axle nut	55-60	5.5-6
2	Handle tightenging nut	37-44	3.7-4.4
3	Steering stem locknut	37-44	3.7-4.4
4	Disc brake caliper fixing bolt	22-29	2.2-2.9
5	Disc brake master cylinder hose fixing bolt	22-29	2.2-2.9
6	Disc brake fixing bolt	5-9	0.5-0.9
7	Front shock absorber fixing bolt	37-44	3.7-4.4
8	Engine pivot fixing nut	55-60	5.5-6
9	Engine bracket fixing nut	37-44	3.7-4.4
10	Rear wheel fixing nut	100-130	10-13
11	Rear brake rocker arm fixing bolt	5-9	0.5-0.9
12	Rear shock absorber under fixing bolt	22-29	2.2-2.9
13	Start pedal mounting screw	15-20	1.5-2
14	Rear shock absorber top fixing bolt	37-44	3.7-4.4



LUBRICATION

Proper lubrication is important for smooth operation and long life of each working part of the scooter. The major lubrication points are indicated below:

NOTE:

1. Lubricate exposed parts which are subject to rust with engine oil.
2. Before lubricating each part, clean off any rusty spots and wipe off any grease, oil dirt or grime.

WARNING: Be careful not to apply too much grease to the rear brake camshaft, otherwise brake slippage will result from the presence of grease in brake drum.

- ①steering stem bearing
- ②front wheel bearing
- ③engine bracket
- ④rear brake camshaft
- ⑤side stand
- ⑥rear brake shaft and rear brake caliper
- ⑦speedometer cable and gear box
- ⑧main stand

A lubrication



ENGINE

CONTENS

Engine components removal with the engine in place

Engine removal and remounting

Engine removal

Engine remounting

Engine disassembly

Engine components inspection and servicing

Bearings

Oil seals

crankshaft

automatic clutch inspection

cylinder head

cylinder

piston

reed valve

engine remounting

oil seals

bearings

bushings

crankshaft

crankcase

rear axle shaft

transmission

starter pinion and starter gear

Movable driven and clutch

Movable drive

Kicking starter

Piston

Oil pump and oil pump driven gear

Intake pipe

Magneto

Engine components removable with the engine in place

The parts listed below can be removed and reinstalled without removing the engine from the frame.

Engine left side

Kicking starter lever

Clutch brake pad kit

Driver left face

V-belt

Driver belt right face

Electric starter gear

Super clutch

Driven face

Engine center

Carburetor

Intake pipe

Reed valve

Oil pump

Worm wheel

Cylinder head

Cylinder

Piston

engine right side


cooling fan

Magneto


Starter motor

ENGINE ASSY.


- Remove the muffler
- Remove cooling fan cover
- Remove cylinder cover
- Remove cooling fan

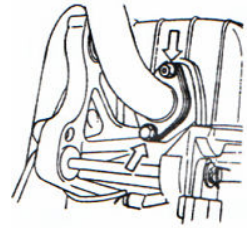


- Remove magneto nut with special tools.

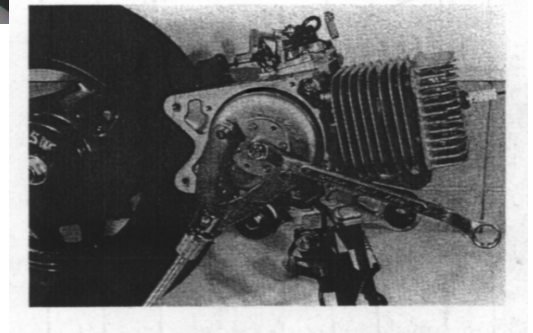



- remove magneto rotor and half circle key with special tools.

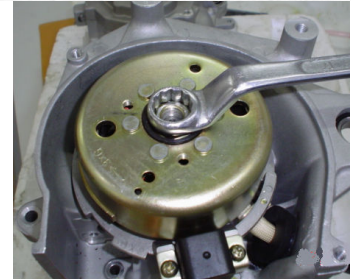


- remove magneto stator and paper gasket

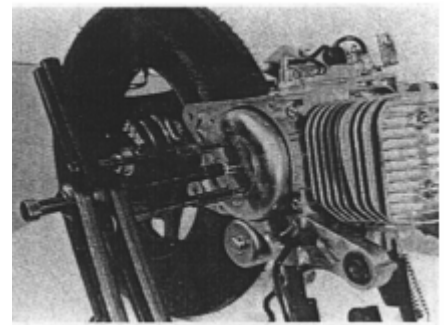


- remove oil pump

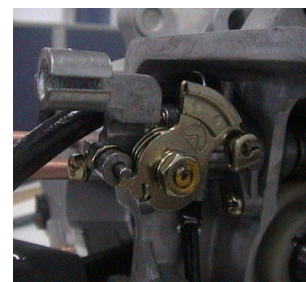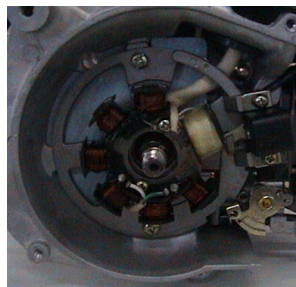


Remove worm wheel and oil seal press board

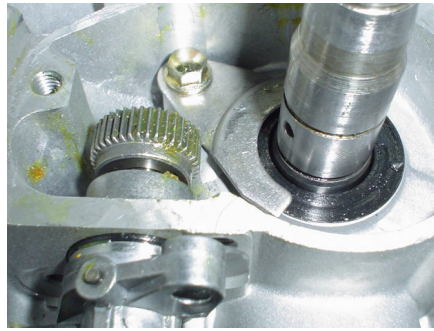

- remove cylinder head and cylinder

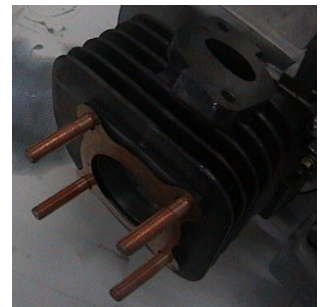


- Place a cloth stopper beneath the piston and remove the circlip with a plier.
- remove the piston pin and piston.
-

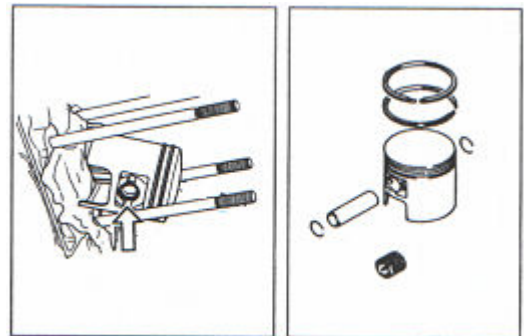

- Remove the kick starter lever.
- Remove side cover




- Remove movable ratchet wheel and clip

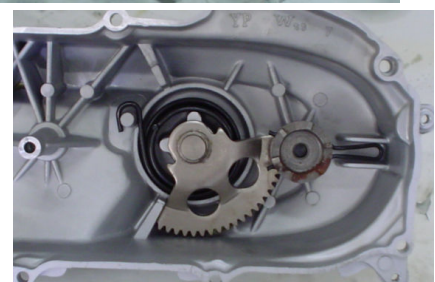


- Remove starting driven ratchet wheel by removing the nuts.



- Remove fan⑤ and V-belt⑥.
- Disassemble the movable drive face⑦.

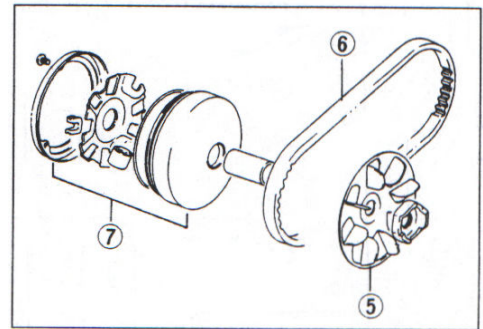


- Remove electric gear press board, electric gear And super clutch

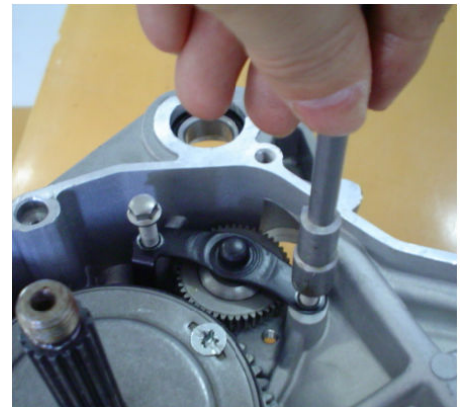

- Remove starter motor




- Remove the clutch housing with the special tool.

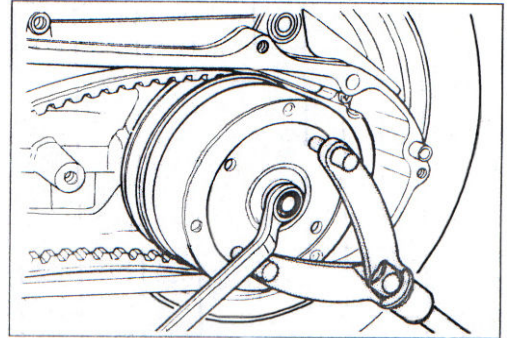


- drain gear oil




- remove rear axle nut
- remove rear wheel

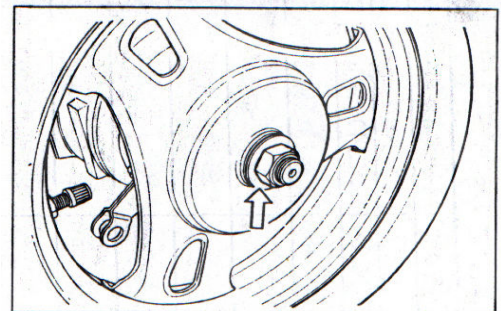


- remove brake shoe⑤ and rear axle⑥。

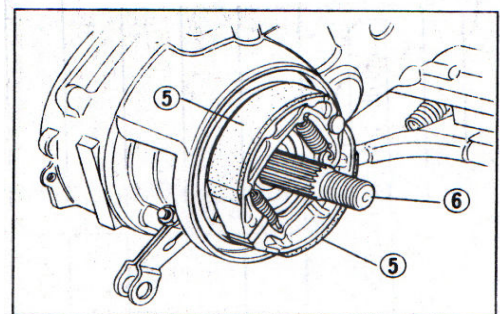



- Remove the rear brake cam lever①, indicator plate② and camshaft③.

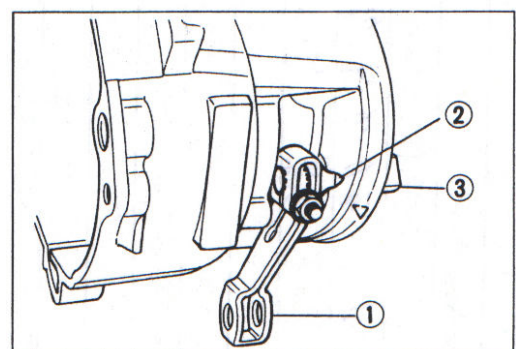

- remove spring④
- remove cotter pin⑤ and shaft⑥
- remove main stand⑦

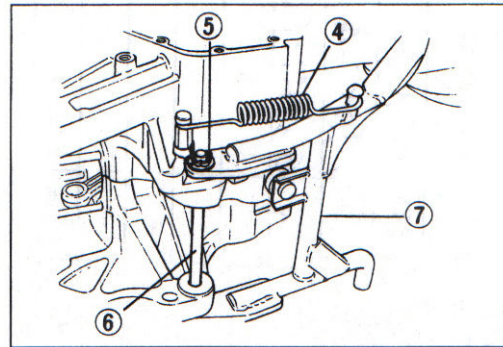

- remove gearcase cover

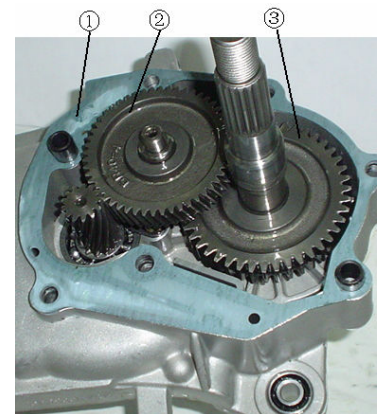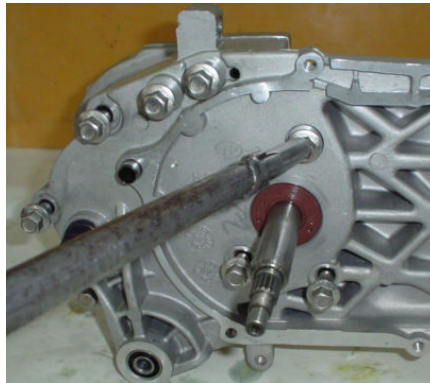

- Remove paper gasket① and middle gear assy.②,
Remove output gear assy.③




- remove carburetor


- remove intake pipe



- remove reed valve and paper gasket.

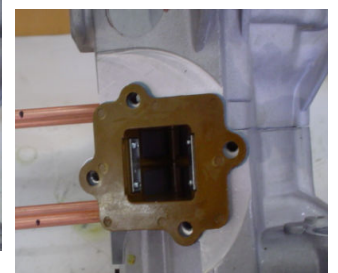


- Remove crankcase fixing shaft

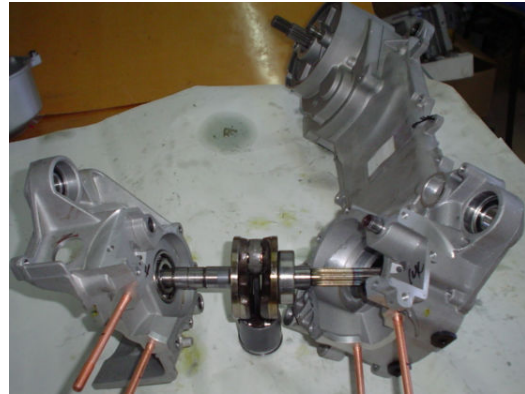

- disassemble crankcase with special tools

- Remove crankcase with special tools

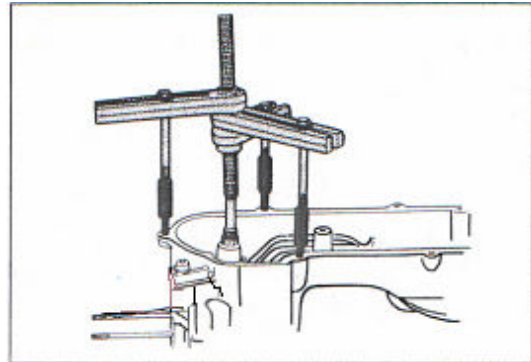

- Remove crankshaft bearing with special tools

Sliding shaft

Warning: use a new sliding shaft.

Unscrew clutch shoe nut with special tools.

- Remove the nut while holding down clutch shoe assy. by both hands as shown in the illustration.






WARNING: Gradually back off the clutch shoe assy. pressed down by hands to counter the clutch spring load. Releasing the hand suddenly may cause the following parts to fly apart.

- ① nut
- ② clutch shoe
- ③ spring

CAUTION:

Do not attempt to disassemble the clutch shoe assy. Otherwise the clutch shoe may be damaged.


- Using a screwdriver or the like, pry up the movable driven face spring guide.
- Remove the pins④, movable driven face⑤ and fixed driven face⑥.

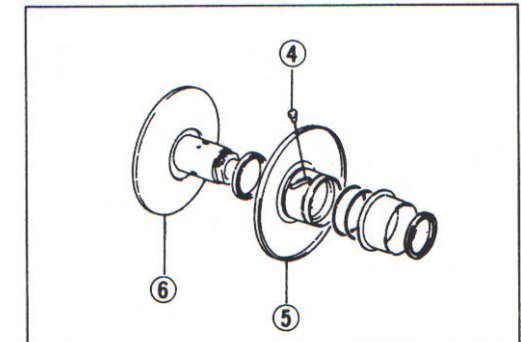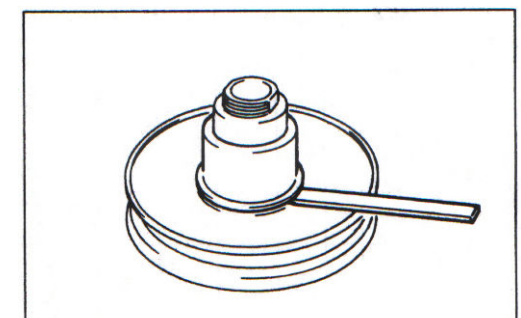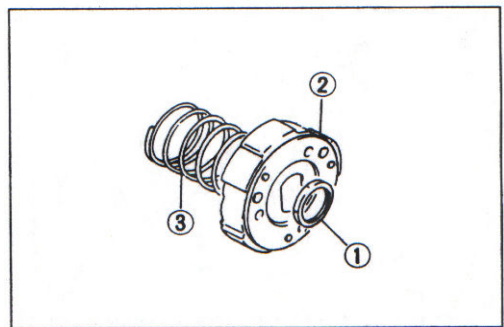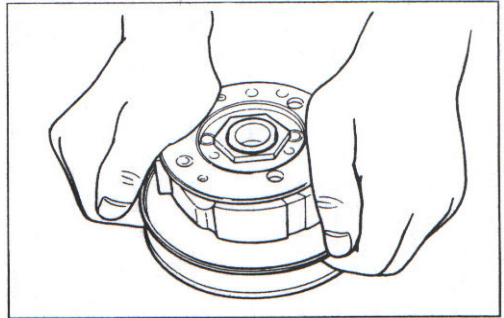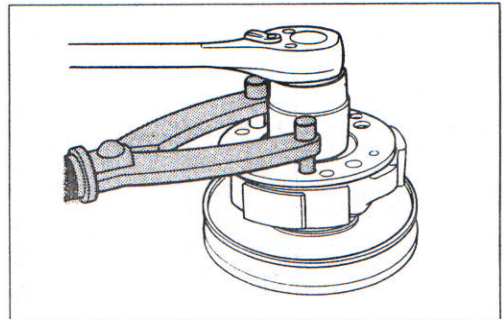


Remove circlip

- Remove bearing with special tool.

CAUTION: Replace the removed bearing with a new one.

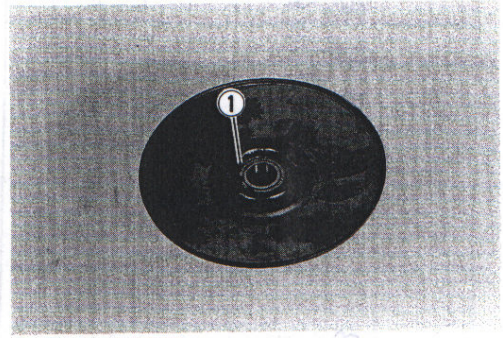


- Remove bearing with special tool.

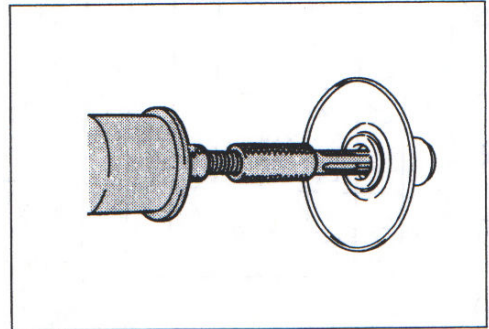

CAUTION: Replace the removed bearing with a new one.

- Remove the spacer

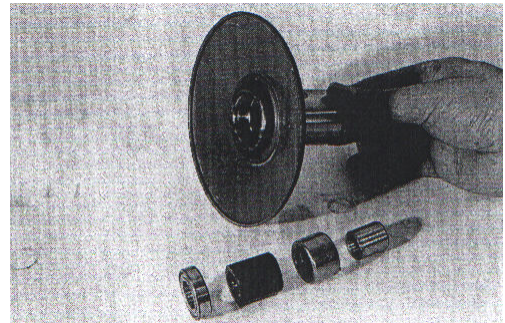


Remove the oil seal from the gearcase cover with the special tool.

CAUTION: Replace the removed oil seal with a new one.



- Remove gearcase cover bearing with special tool

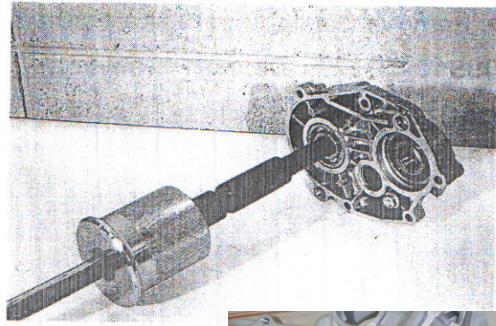


Remove left crankcase oil seal

- do it with special tool

warning: use a new oil seal


- remove left crankcase bearing with special tool

warning: use a new one

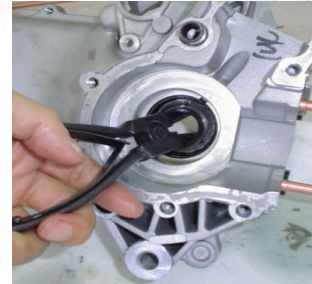


- remove left crankcase shock absorber bushing with special tool

warning: use a new bushing

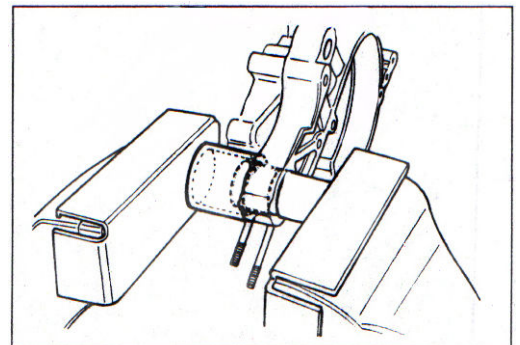


wrap the oil seal with two appropriate size of sheet irons and clamp it, shown as fig.

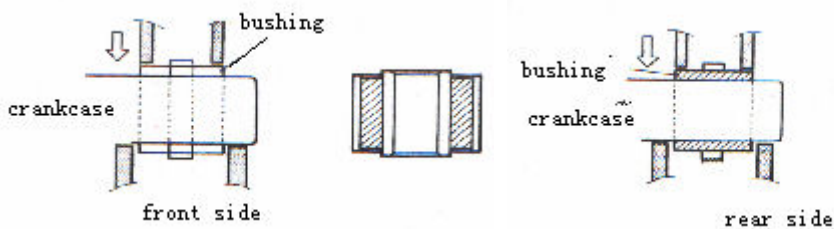


- Remove right crankcase oil seal with special tool

Warning: use a new oil seal

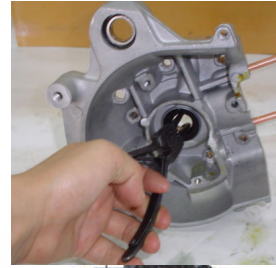

- remove right crankcase bearing
sliding bearing

warning: use a new bearing


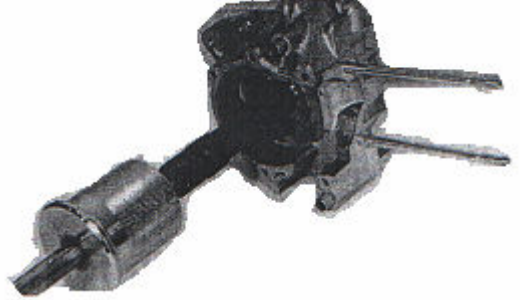


ENGINE COMPONENTS INSPECTION AND SERVICING

BEARINGS

Clear bears with solvent and lubricate with engine oil before inspecting.

Turn the inner ring and check to see that the inner rieng turns smoothly. If it does not turn lightly, quietly and smoothly, or if noise is heard, the bearing is defective and must be replaced with a new one.

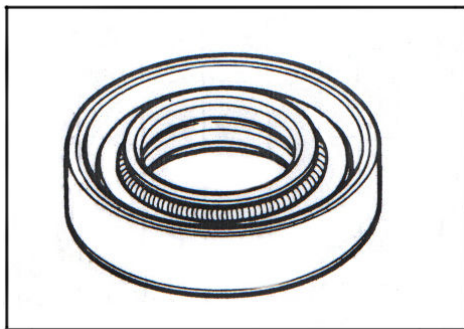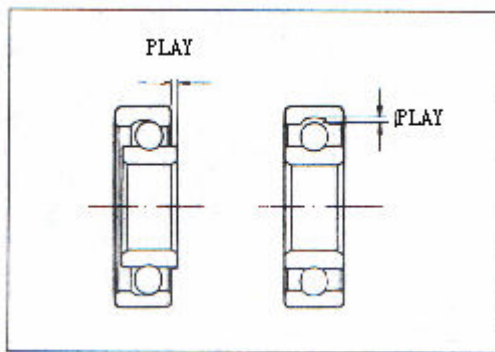

OIL SEAL

Damage to the lip of the oil seal may result in leakage of the fuel-air mixture or oil. Inspect for damage and be sure to replace the damaged seal if found.


CRANKSHAFT

CRANKSHAFT RUNOUT

Support crankshaft by “V” block, with the dial gauge rigged to read the runout as shown.

Service limit: 0.05mm(0.002in)


Excessive crankshaft runout is often responsible for abnormal engine vibration. Such vibration shortens engine life.

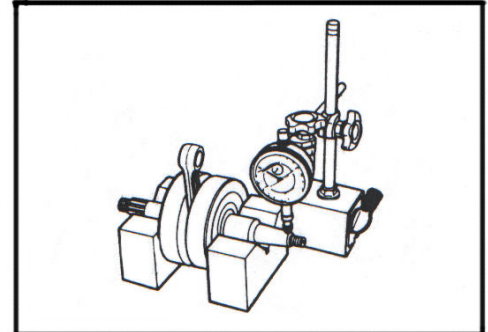

Condition of big end bearing

Turn the crankshaft with the connecting rod to feel the smoothness of rotary motion in the big end. Move the rod up and down while holding the crankshaft rigidly to be sure that there is no rattle in the big end.

Wear on the big end of the connecting rod can be estimated by checking the movement of the small end of the rod. The method can also check the extent of wear on the parts of the connecting rod's big end. If wear exceeds the limit, replace connecting rod, crank pin and crank pin bearing.

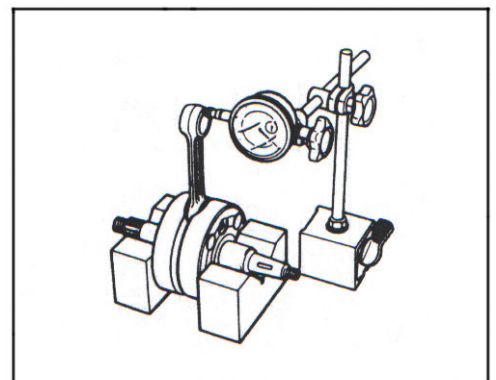

Service limit: 3.0mm(0.12in)

Connecting rod small end inside diameter

Measure the connecting rod small end diameter with a caliper gauge.

Service limit: 14.040mm

Automatic clutch inspection

The scooter is equipped with an automatic clutch and variable ratio belt drive transmission. The engagement of the clutch is governed by engine RMPS



and centrifugal mechanism located in the clutch.

To insure proper performance and long lifespan of the clutch, it is essential that the clutch engages smoothly and gradually. Two inspection checks must be performed to thoroughly check the operation of the drivetrain. Follow the procedures listed.

1. Inspect initial engagement

Warm up the scooter to normal operating temperature.


Remove the right frame side cover.

Connect an electric tachometer to the connecting portion of the magneto lead wire (black with red tracer).

Seated on the scooter with the scooter on level ground, increase the engine RPMs slowly and note the RPM at which the scooter begins to move forward.

Tachometer

Standard	2900r/min
tolerance	$\pm 300\text{r/min}$

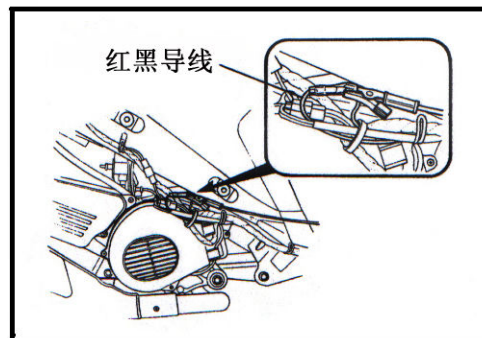

2. Clutch "LOCK-UP" inspection

Perform the inspection to determine if the clutch is engaging fully and not slipping.

Warm the engine to normal operating temperatures.

Connect the electric tachometer to the magneto lead wire.

Apply the rear brake as firm as possible.



Briefly open the throttle fully and note the maximum engine RPMs sustained during the test cycle.

CAUTION:

Do not apply full power for more than 10 seconds or damage to the clutch or engine may occur.

LOCK-UP R/MIN

Standard	5800r/min
Tolerance	$\pm 400\text{r/min}$

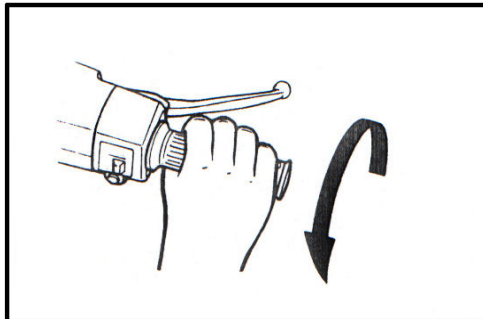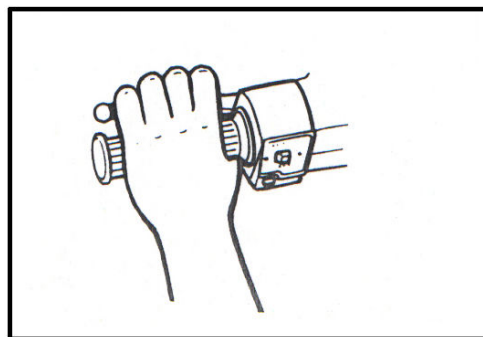

If the engine R/MIN doesn't coincide with the specified r/min range, then disassemble the clutch.

Clutch shoe---inspect the shoes visually for chips, cracking, uneven wear and burning, and check the thickness of the shoes with vernier calipers. If the thickness is less than the following service limit, replace them as a set.


Clutch springs -----visually inspect the clutch springs for stretched coils or broken coils.

Service limit:: 2.0mm(0.08in)

CAUTION : clutch shoes or springs must bechanged as a set and never individually.

Clutch wheel—inspect visually the condition of the inner clutch wheel surface for scrolling, cracks, or uneven wear. Measure inside diameter of the clutch wheel with inside calipers. Measure the diameter at several points to check for an out-of-round condition as well as wear.

Service limit:110.50mm(4.350in)

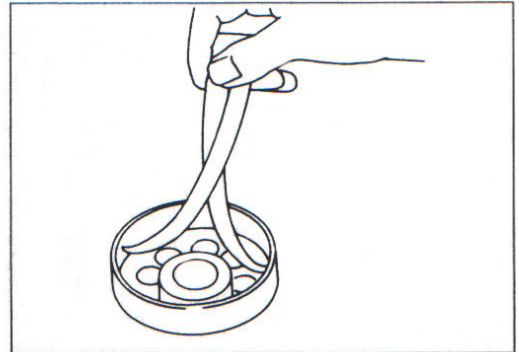

测量离合器盘的内径

DRIVE BELT



Remove the drive belt and check for cracks, wear and separation. Measure the drive belt width with a vernier calipers. Replace it if the belt width is less than the service limit or and defect has been found.

Service limit: 16.0mm(0.630in)

CAUTION; Always keep the drive belt away from any geasy matter.


Drive face

Inspect the belt contact surface of the dirve faces for wear, scratches or any abnormality . if there is something unusual, replace the drive face with a new one.

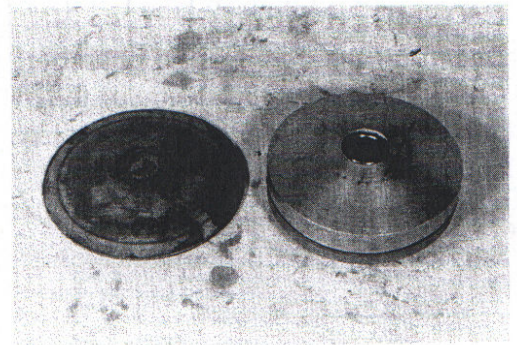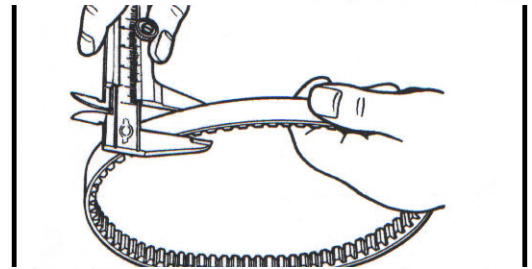


Roller and sliding surface

Inspect each roller and sliding surface for wear or damage.

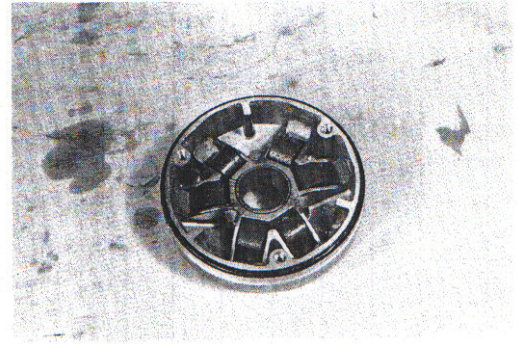

Driving face spring

Measure the free distance of the driven face spring. If the length is shorter than the service limit, replace the spring with a new one.
service limit: **104.5mm(4.11in)**

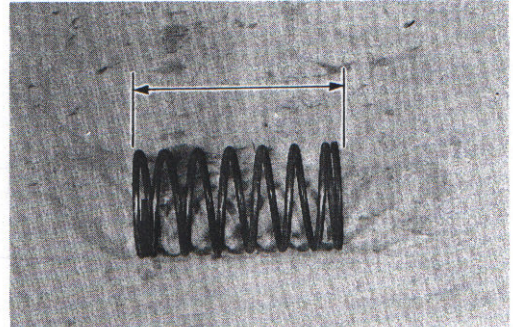


Driven face pin and oil seal

Turn the driven face and check to see that the driven faces turn smoothly. If any stickiness or hitches are found, visually inspect the lip of oil seal, driven face sliding surface and sliding pins for wear or damage.

Driven face

inspect the belt contacting surface of both driven faces for any scratches, wear and damage.


Replace driven face with a new one if there are any abnormality.

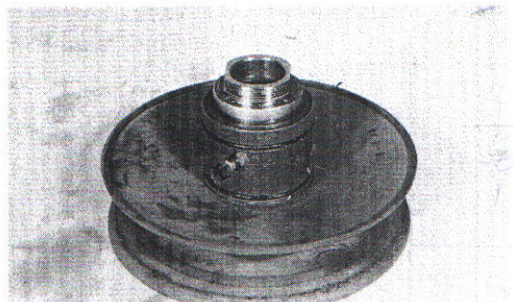


Cylinder head

Decarbon the combustion chamber.

Check the surface of the cylinder head as shown in the illustration for distortion with a straightedge and thickness gauge, taking a clearance reading at several places.

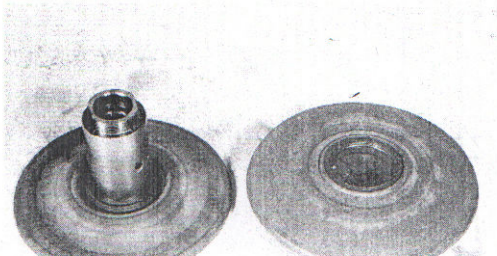

service limit: **0.05mm(0.002in)**

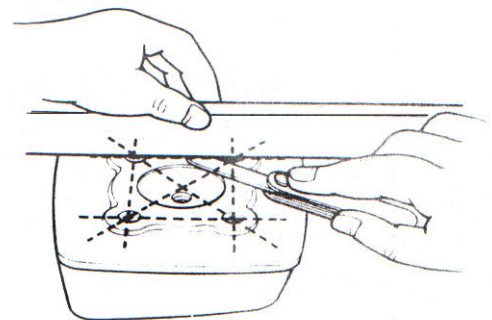

If the largest reading at any portion of the straightedge exceeds the limit, rework the surface by rubbing it against emery paper laid flat on the surface plate in a lapping manner. The surface must be smooth and perfectly flat in order to secure a tight joint: a leaky joint can be the cause of reduced power output and increased fuel consumption.

CYLINDER

Decarbon exhaust port and upper part of the cylinder, taking care not to damage the cylinder wall surface. The wear of the cylinder wall is determined from diameter reading taken at 20mm from the top of the cylinder with a cylinder gauge. If the wear thus determined exceeds the limit indicated below, rework the bore to the next oversize by using a boring machine or replace the cylinder with a new one. Oversize pistons are available in two sizes: 0.5mm and 1.0mm.

(cylinder gauge)

service limit: 40.075mm(1.5778in)

after reworking the bore to an oversize, be sure to chamfer the edges of ports and smooth the chamfered edges with emery paper. To chamfer, use a scraper, taking care not to nick the wall surface.

NOTE:

Minor surface flaws on the cylinder wall due to seizure or similar abnormalities can be corrected by grinding the flaws off with fine-grain emery paper. If the flaws are deep grooves or otherwise persist, the cylinder must be reworked with a boring machine to the next oversize.

PISTON






cylinder and piston clearance

cylinder -piston clearance is the difference between piston diameter and cylinder bore diameter. Be sure to take the measured diameter at right angles to the piston pin. The value of elevation \textcircled{A} is prescribed to be 20mm from the skirt end.

(micrometer)

service limit: 39.885mm(1.5703in)


As a result of the above measurement, if the piston-to-cylinder clearance exceeds the following limit, overhaul the cylinder and use an oversize piston, replace both cylinder and piston. The measurement for the bore diameter should

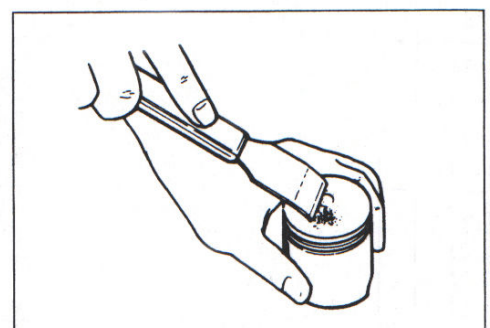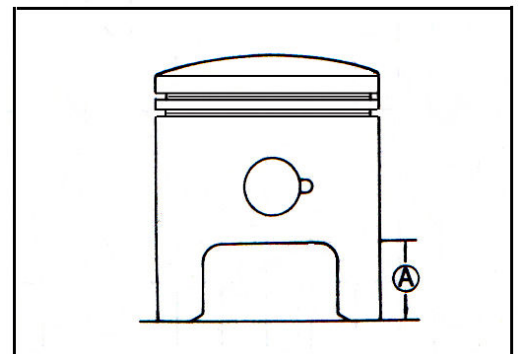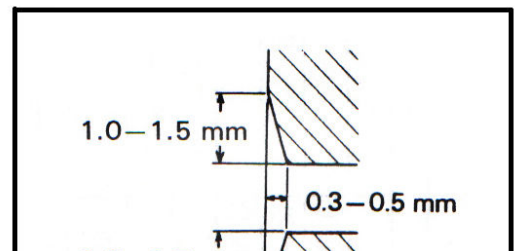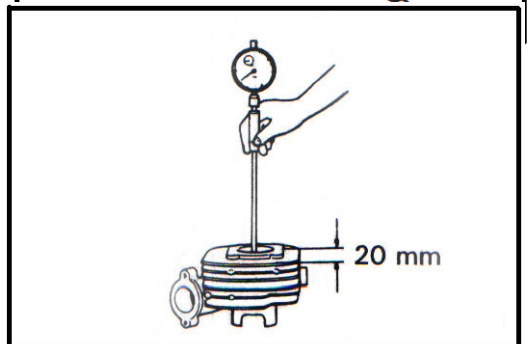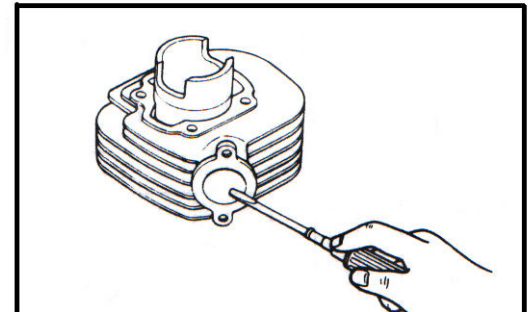

be taken in the intake-to-exhaust port direction and at 20mm from the cylinder top surface.


Unit: mm

	Standard	service limit
Cylinder	40.005-40.020	40.075
Piston	39.94-39.955	39.885
Cylinder to piston	0.06-0.07	0.120

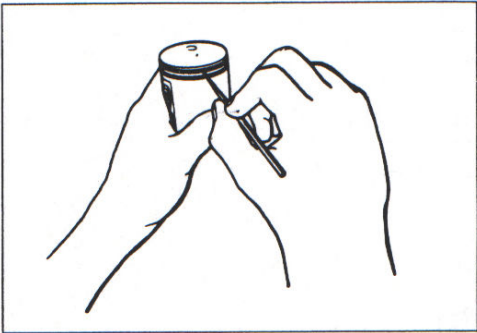

Decarboning

Decarbon the piston and piston ring grooves, as illustration. After cleaning the grooves, fit the rings and rotate them in their respective grooves to be sure that they move smoothly. Carbon in groove is liable to cause the piston ring to get stuck in the groove, and the condition will lead to reduce engine power output.

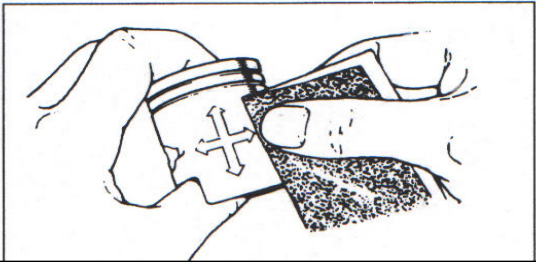

Grind piston surface evenly with emery pa

A piston whose sliding surface is badly grooved ore scuffed due to overheating must be replaced. Shallow grooves or minor scuff can be removed by grinding with emery paper of about #400

Piston pin bore

Use a caliper gauge to measure the piston pin bore inside diameter,.

If reading exceeds the following service limit, replace it with a new one.

(Dial caliper)



Limit service: 12.30mm(0.4736in)

Piston pin outside diameter:

Use a micrometer to measure the piston outside diameter at three positions.


(Micrometer (0-25mm))

service limit: 11.980mm(0.4717in)

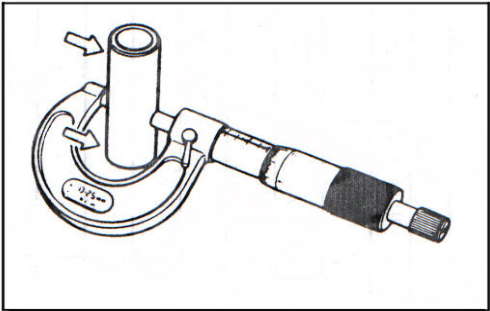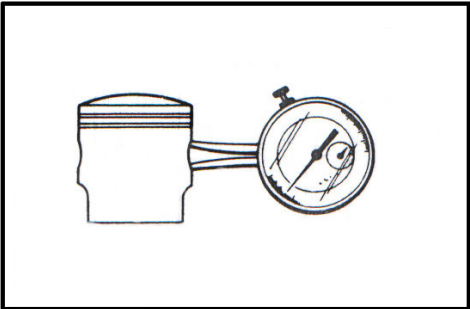

Piston rings

Check each ring for end gap, reading the gap with a thickness gauge shown in the illustration. If the end gap is found to exceed the limit, indicated below, replace it

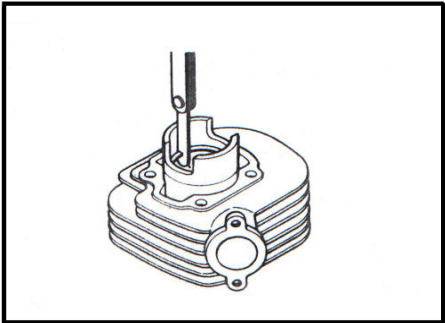

with a new one.

The end gap of each ring is to be measured with the ring fitted squarely into the cylinder bore and held at the least worn part near the cylinder bottom, as shown in the illustration.

Service limit: 0.75mm(0.030in)

As the piston ring wears, its end gap increases reducing engine power output because of the resultant blow by through the enlarged gap. Here lies the importance of using piston rings with end gaps within the limit. Measure the piston ring free end gap to check the spring tension.

service limit: 3.6mm(0.14in)

Fix the piston ring in the piston ring groove, measure the ring side clearance with the thickness gauge while matching the sliding surface of piston and ring.




Standard clearance

1st: 0.04-0.06mm(0.0016-0.0024in)

2nd: 0.02-0.04mm(0.0008-0.0016in)


Reed valve

Check the clearance A between reed valve and its seat and the dimension B. If the clearance A is noted to exceed 0.2mm, replace the reed valve assembly. The dimension B is at least 1mm.

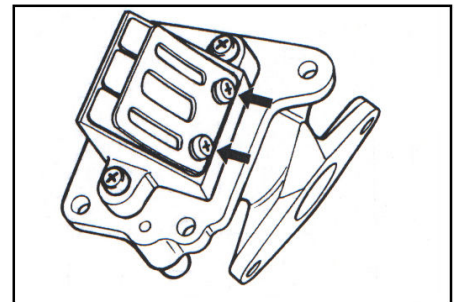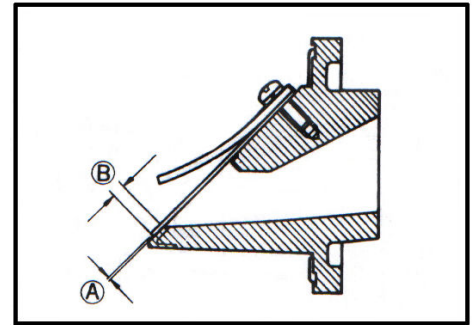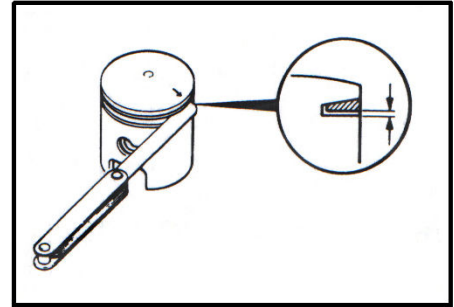

ENGINE Reassembly

Reassembly is generally performed in the reverse order of disassembly, but there are a number of reassembling steps that demand or deserve detailed explanation or emphasis. These steps will be taken up for respective parts and components.

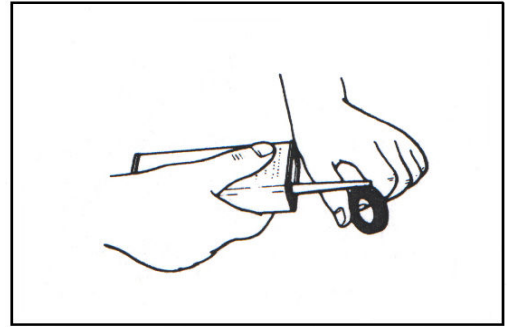

Oil seals



fit the oil seals to the crankcase following the procedure below. Replace removed oil seals with new ones.

- Lubricate the edge of oil seal



- Install oil seal into crankcase carefully with special tool.



Oil seal installation

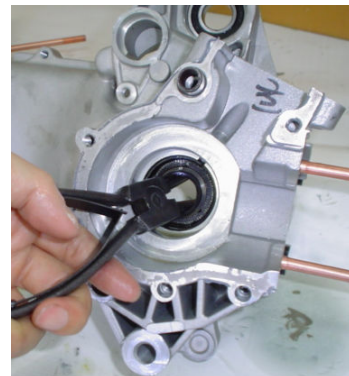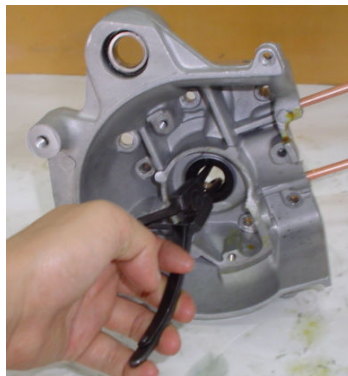

Bearing

Install new bearing with special tool

Install bearing

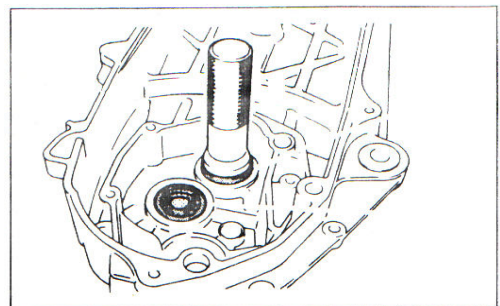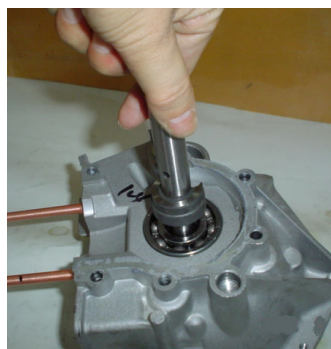

shock absorber bushing

positon




Install shock absorber bushing



Install crankshaft bearing

Press bearing into cankshaft

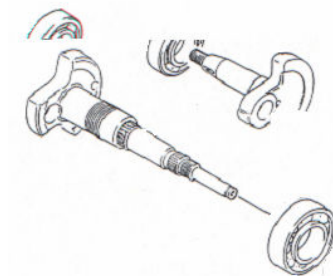


Install crankshaft




- Decide the length between the webs referring to the figure at right when rebuilding the crankshaft.

Standard width between webs: $38 \pm 0.1\text{mm}$ ($1.496 \pm 0.004\text{in}$)

- when mounting the crankshaft into crankcase, it is necessary to pull its left end into the crankcase with the special tool.

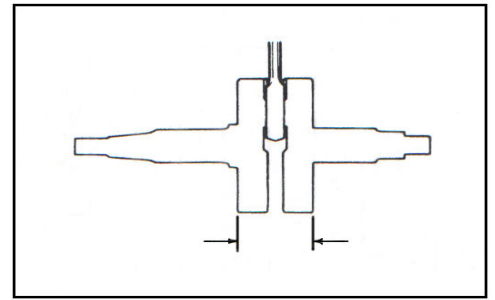


CAUTION: Never fit the crankshaft into the crankcase by driving it with a plastic hammer. Always use the special tool, otherwise crankshaft alignment accuracy will be affected.

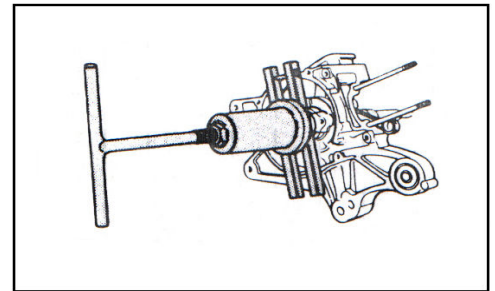


CRANKCASE

- Wipe the crankcase mating surfaces with cleaning solvent.
- Apply QIANJIANG NO.1215 evenly to the mating surface of the right half of the crankcase
- Tighten the crankcase screws securely.
- Check if crankshaft rotates smoothly.


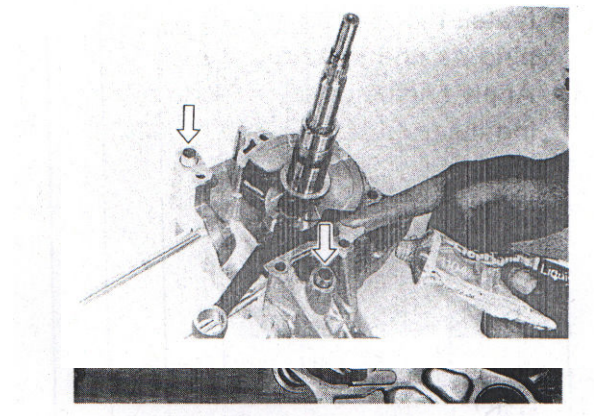


Install gearcase bearing


Install new bearing and oil seal into gearcase cover with special tool, and tighten anchor pin.

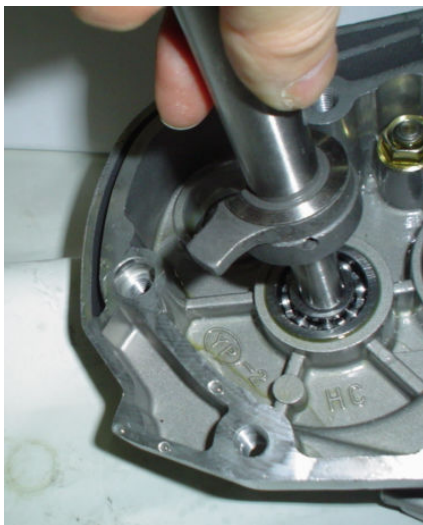

- install output axle
- gearshift
- install middle gear, position pin by installing middle gear axle①, gasket② and thrust gasket③

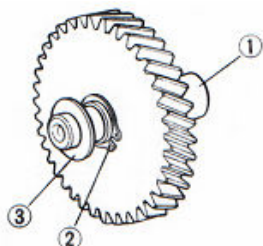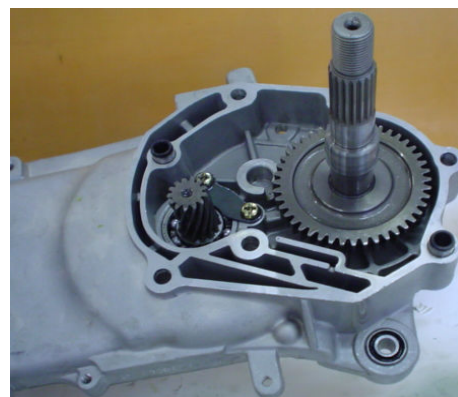


- install gearcase cover into crankcase and lock bolt.

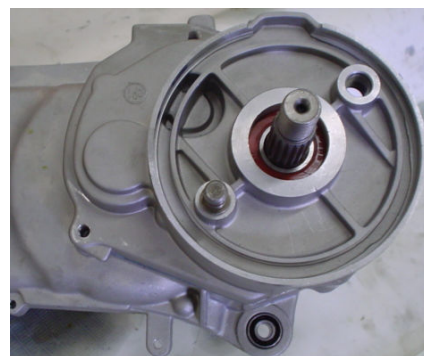


- tighten each screw



- screw oil drain nut①
- tightening torque: 4-7 N.m**
(0.4-0.7kg-m,3.0-5.0 lb-ft)

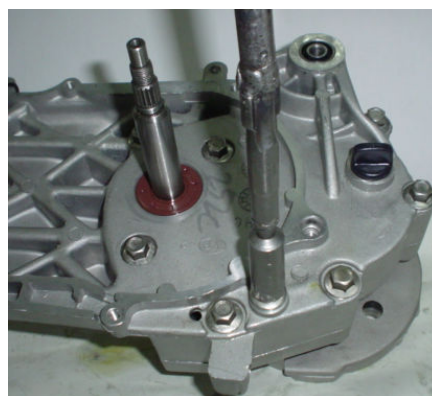


Movable driven and clutch

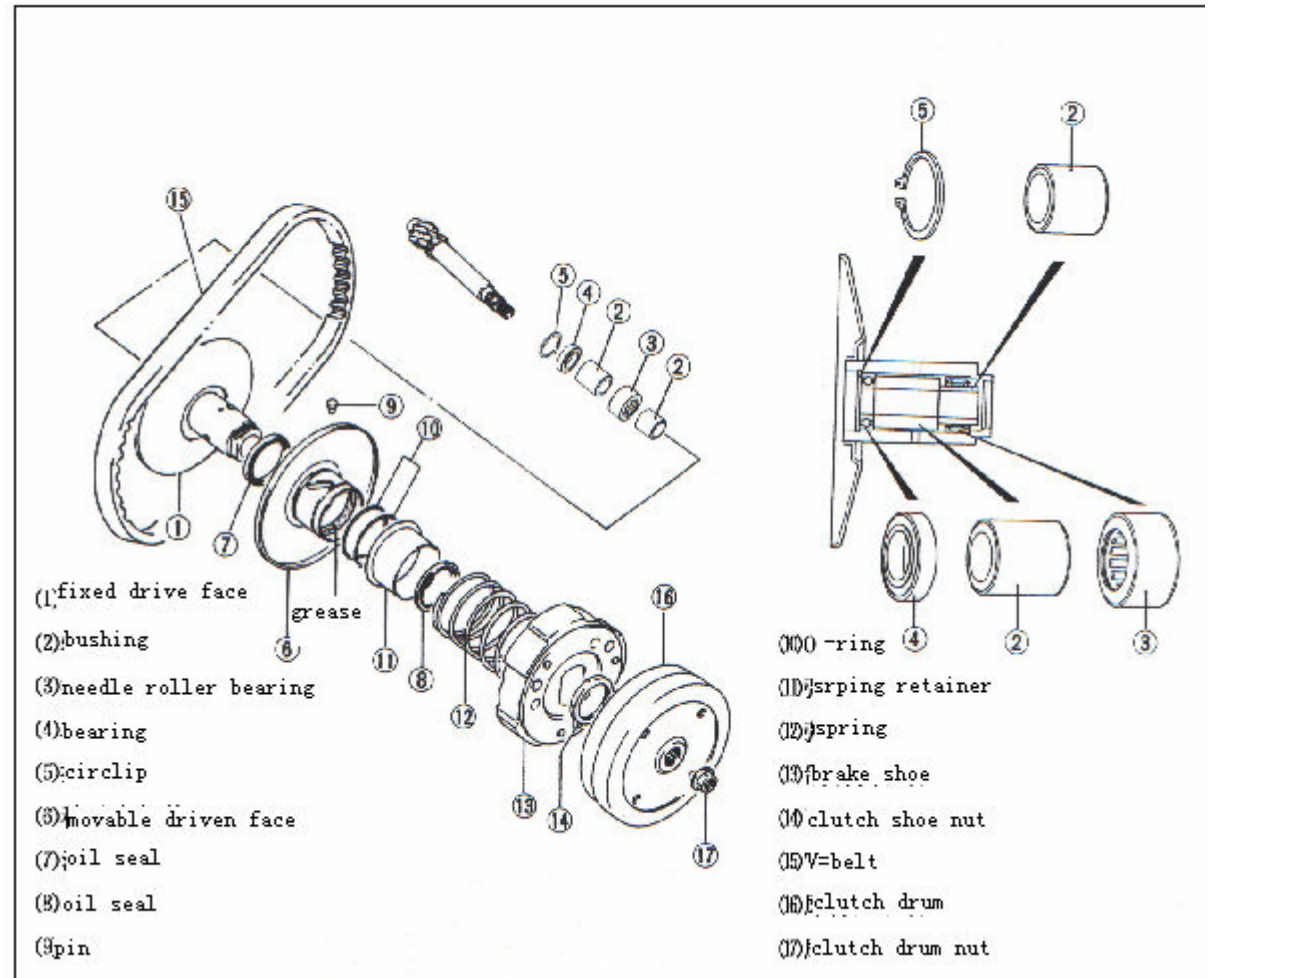


- install the bearing② in the fixed driven face① with the special tool.


- install sliding bearing ③。

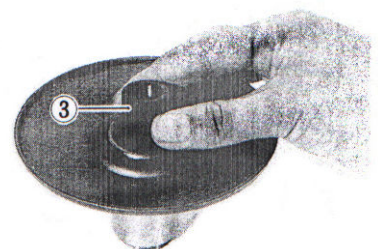

- Install the bearing ① with special tool

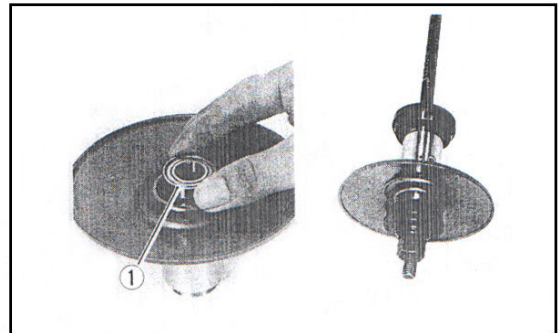


- install the spacer ② and circlip③.

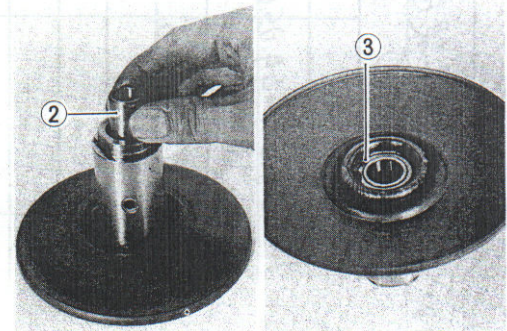


- install the new oil seals④ and ⑤ to the movable driven face with the special tool.
- apply grease to the lip of oil seals and groove of inside of movable driven face.

QIANJIANG special super grease

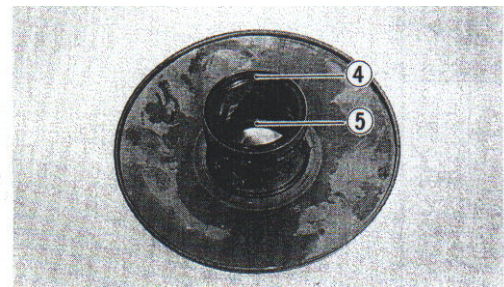


NOTE:

When reinstalling the movable face to the fixed face, make sure that the oil seal is positioned properly.

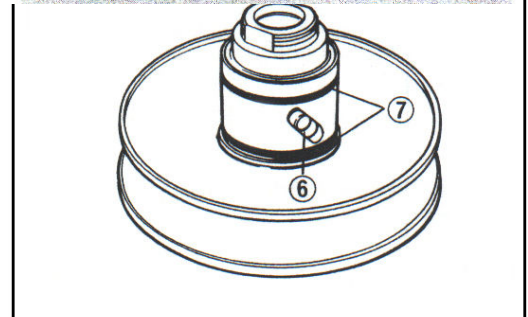


- install the pin ⑥ at three places on the driven face hub.
- Apply grease lightly to the cam part where the pins are placed.
- Install two O-RINGS⑦.

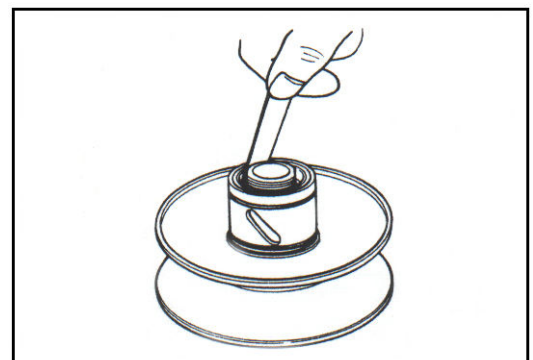


- Install the movable driven face seat①.

- install the clutch shoe assembly② and nut ③.

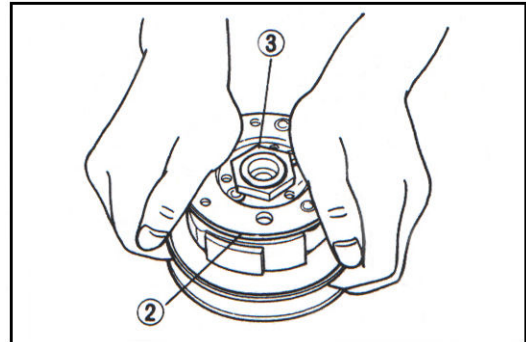

- tighten the nut③ to the specified torque with the special tool.

tightening torque: 40-60 N.M
(4.0-6.0kg.m 29.0-43.5lb-ft)

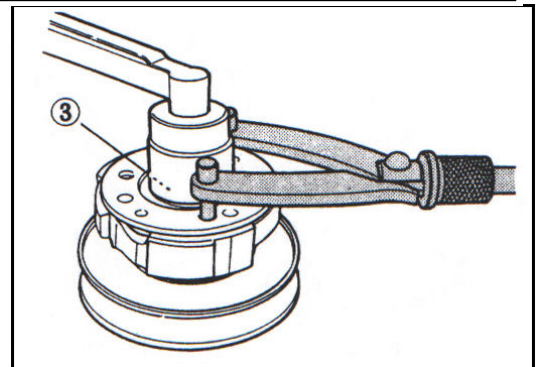


- insert the V-belt between the driven faces as deep inside possible while pulling the movable driven face all the way outside to provide the maximum ble clearance.

CAUTION:

the belt should be positioned so that the arrows on the belt periphery point the normal turning direction.


The V-belt contact face on the driven faces should be thoroughly cleaned to be free from oil.

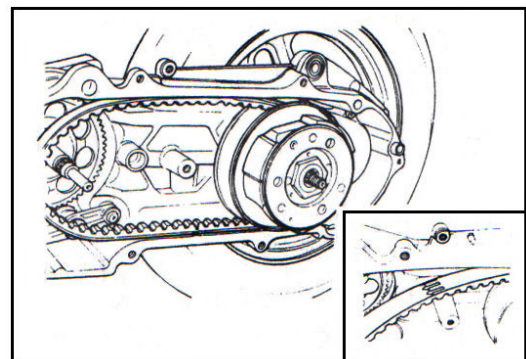


- Thoroughly clean the clutch housing to be free from oil and position it over the clutch shoe assembly.
- tighten the clutch housing nut to the specified torque with the special tool.

Torque: 40-60 N.M
(4.0-6.0kg.m 29.0-43.5lb-ft)


- (1)movable drive face
- (2)roller
- (3)movable drive plate
- (4)damper
- (5)O-ring
- (6)movable drive face cover
- (7)spacer
- (8)fixed drive fan
- (9)kicking starter
- (10)kick starter driven gear
- (11)spring
- (12)gasket
- (13)retainer
- (14)V-BELT

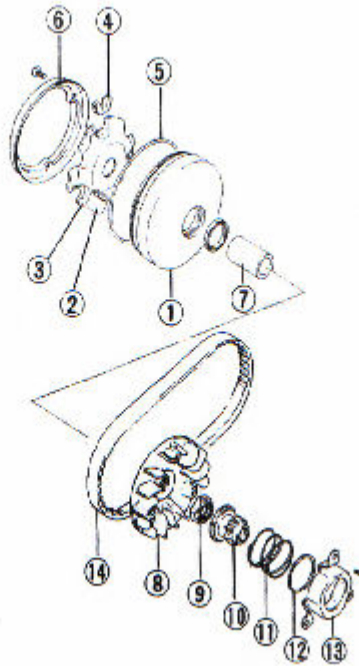

- Apply grease to all the sliding and rolling surfaces for six roller weights. For each weight, approximately 1.5g of grease should be used.
QIANJIANG supre grease

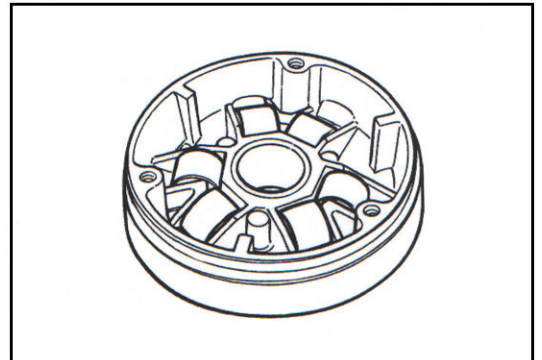


- Mount the three dampers (1) on the movable drive plate (2) and install it on the movable drive face.
- Position the O-RING on the movable drive face.

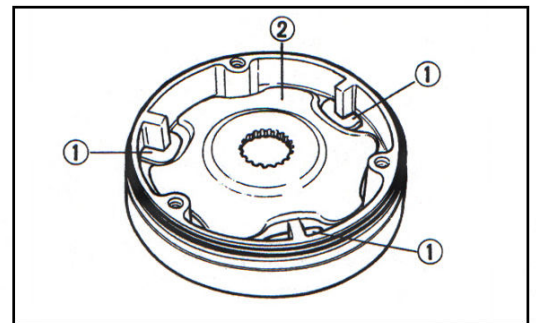

- Install the movable drive face cover (3).

NOTE:


1. Make sure that the movable drive plate is fully positioned inside, or the weight roller may come off.

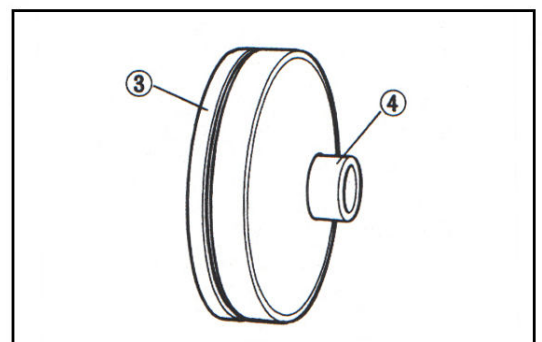

- Insert the spacer④
- Position the movable drive face subassembly on the crankshaft as shown in illustration.

NOTE:

Thoroughly clean the belt contact to be free from oil.

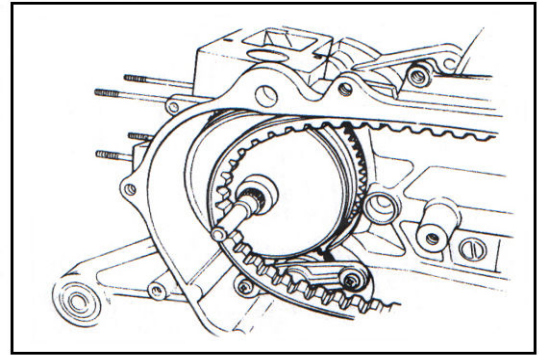


- Install the fixed drive fan①.
- tighten the nut to the specified torque with special tool.

Connecting rod fixer


Tightening torque: 40-60N.M

(4.0-6.0kg-m, 29.0-43.5lb-ft)

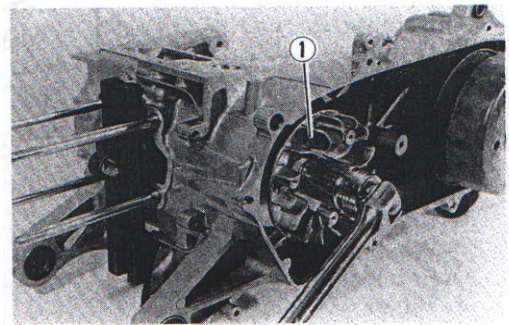

- fill grease in the groove provided inside sliding surface of the kick driven gear and install ② on the end of the crankshaft. Wipe pff excess grease.

QIANJIANG super grease

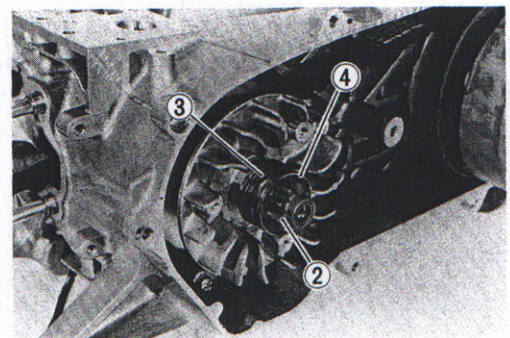


Install washer③ and spring④.


NOTE:

When Installing washer③, face the resin surface of washer to outside.

- install the retainer⑤.

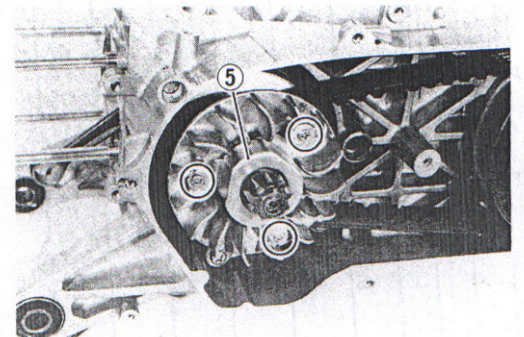

- continue turning the fixed drive face⑥ by hand until the belt is seated in and both the drive and driven faces⑦ will move together smoothly with slip.
-

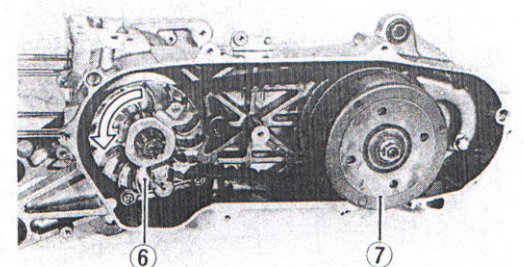


- fill the final gear box with engine oil up to the level hole.

Oil capacity: 90ml

- tighten the oil level bolt to the specified torque.

Tightening torque: 9-15M.M

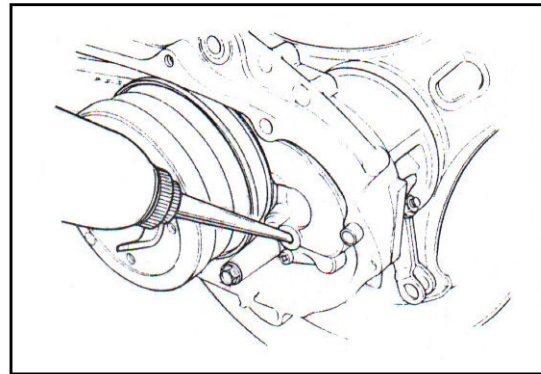


Starter assy.


- Inject lubrication into start bearing and lubrication in the end of starter shaft

QIANJIANG SPECIAL LUBRICATION


- Tighten starter shaft gasket

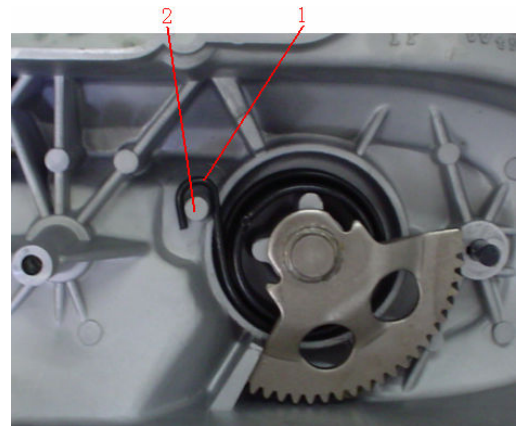


Install starter ratchet wheel and circlip

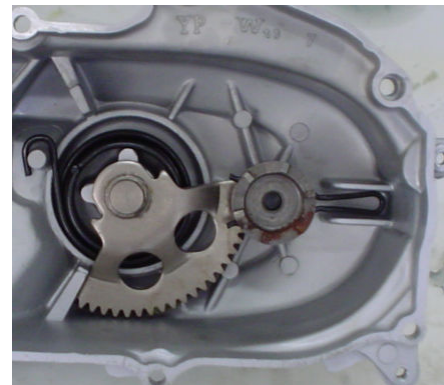

- Install the dowel pins①
- install the new gaskets(② and ③)

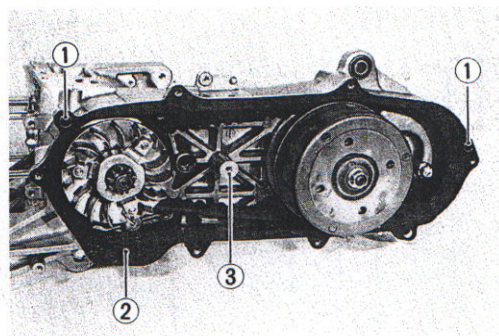

- apply QIANJIANG bond no. 1215 to the clutch cover as shown in the illustration.
QIANJIANG bond no. 1215

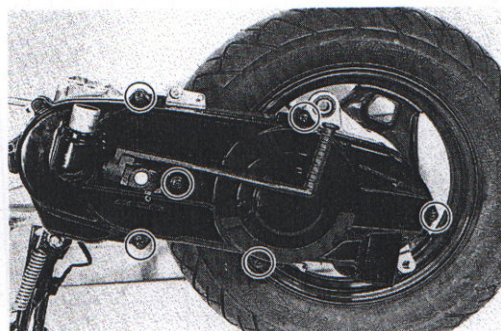

NOTE: INSTALL the kick starter lever as shown in the illustration.


Tightening torque: 8-12N.M
(0.8-1.2kg-m, 6.0-8.5lb-ft)

PISTON



- install the piston rings on the piston.
The first and the second ring: keystone ring.

NOTE:

Position the ring so that the marking is on upside.

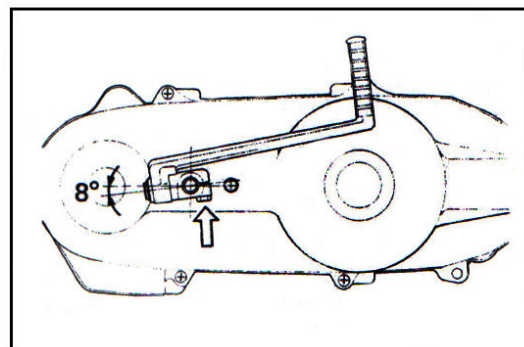

- It is extremely important that, when the piston is fed into the cylinder, each ring in place should be so positioned as to hug the locating pin as shown in illustration.

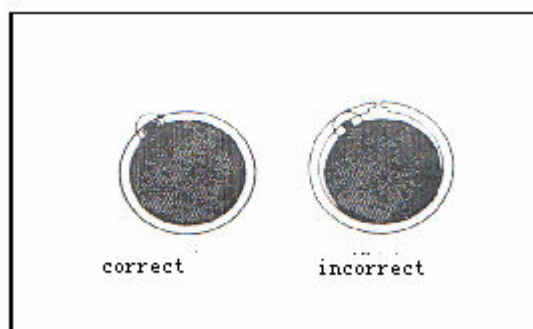
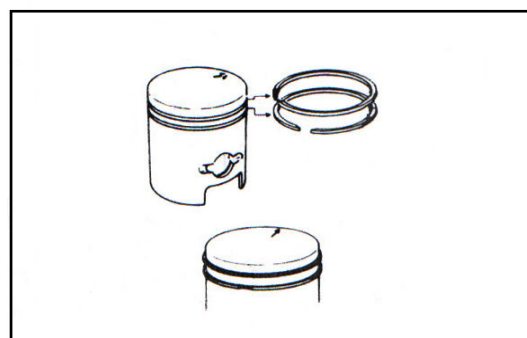


- apply oil for the piston and install the piston to the connecting rod.

NOTE:


The arrow mark ① on the piston head should point the exhaust side.

- The circlip should be mounted in such a position that the mating ends of the circlip do not coincide with the groove portion of the piston.
- apply oil on the position and cylinder wall surfaces and install the cylinder over the piston carefully.

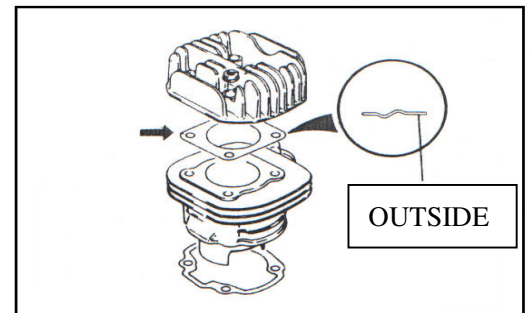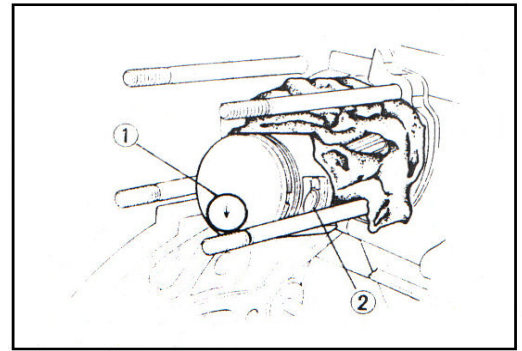

- tighten the cylinder head nut to the specification.

tightening torque: 18-28N.m

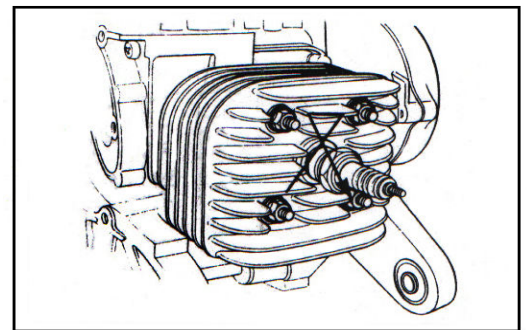

- install right crankcase oil seal press board


- install worm, and lubricate it with QIANJIANG special lubrication.

Oil pump

- install oil pump into crankcase

torque: 3-5N.m



(0.3-0.5kg-m, 2.3-3.7lb-ft)

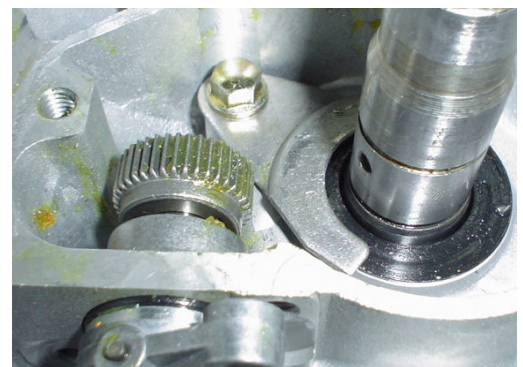

螺丝


Reed valve

- install reed valve paper gasket.
- Install reed valve
- Install oil hose

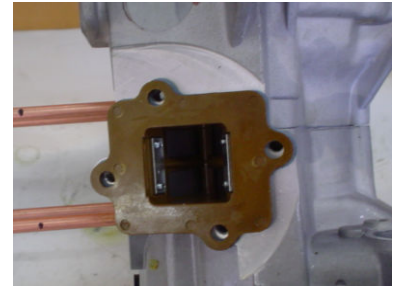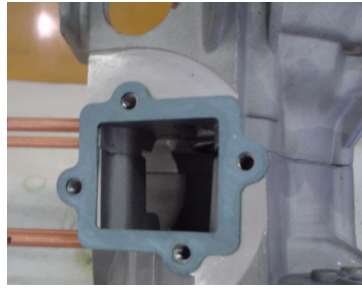


Intake pipe

- install intake pipe

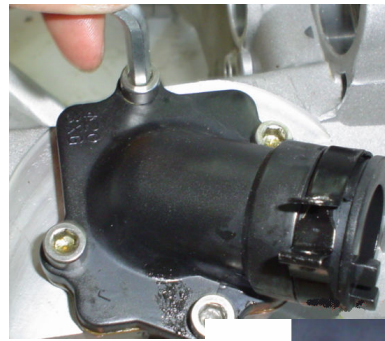


Magneto

- clear crankshaft and magneto rotor
- install half circle key
- install paper gasket and stator coil, and then fix them

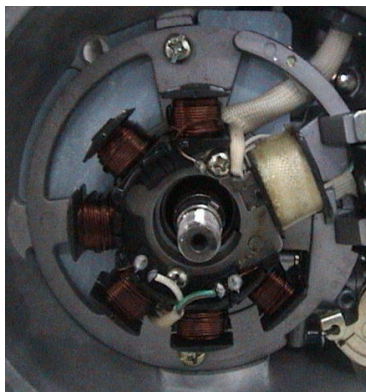


半圆键

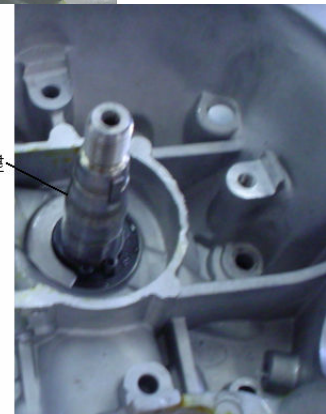


- tighten to specified torque with special tool

specified torque: 35-45N.m
(3.5-4.5kg.m, 25.5-31.0lb-ft)

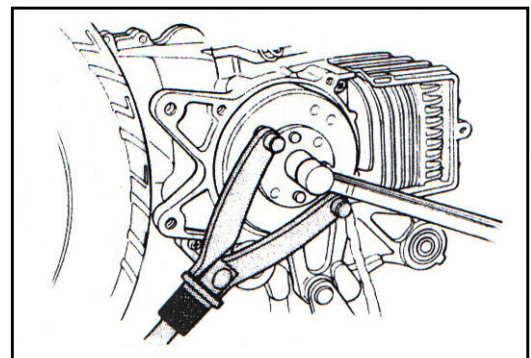

- install cooling fan

- install guiding cover

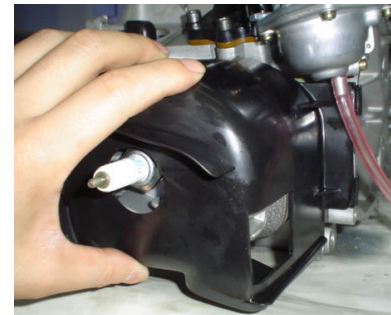


- install fan guiding cover



- install pipe screw ① and screw for tightening muffler to their specified torque.

①: 8-12N.m(0.8-1.2kg.m,6.0-8.5lb-ft)

②: 18-28N.m(1.8-2.8kg.m,13.0-20.0lb-ft)

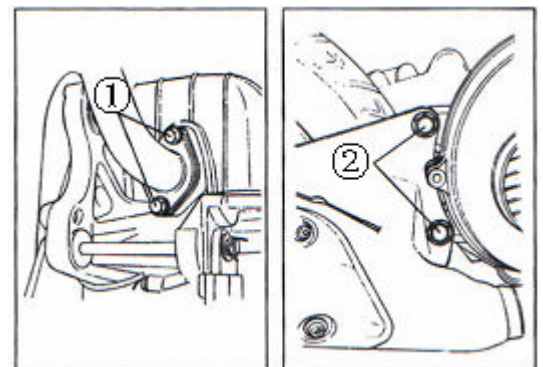

- lubricate brake cam shaft with QIJIANG SPECIAL grease.

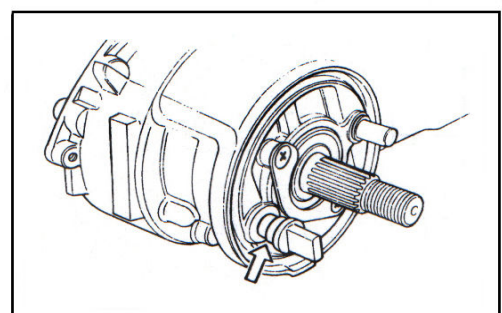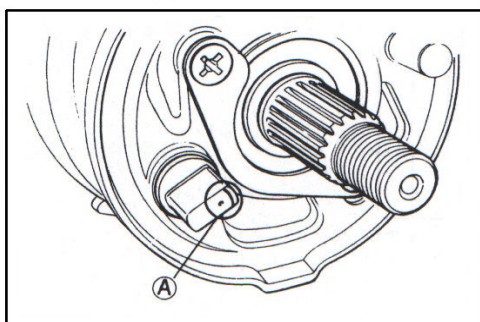

CHAPTER 4 FUEL AND LUBRICATION SYSTEM

CONTENTS

FUEL SWITCH

CARBURETOR

OIL PUMP

FUEL SWITCH


When the engine has started, a negative pressure(vacuum) is generated at the intake port. The negative pressure acts upon the diaphragm of the fuel switch and ti pressed down the spring which supports the diaphragm so that the fuel passageway is opened and fuel is fed to the carburetor.

When the engine has stopped, the spring presses the valve, the fuel passagewayos closed, and no fuel flows to the engine.



Fuel switch

CARBURETOR


 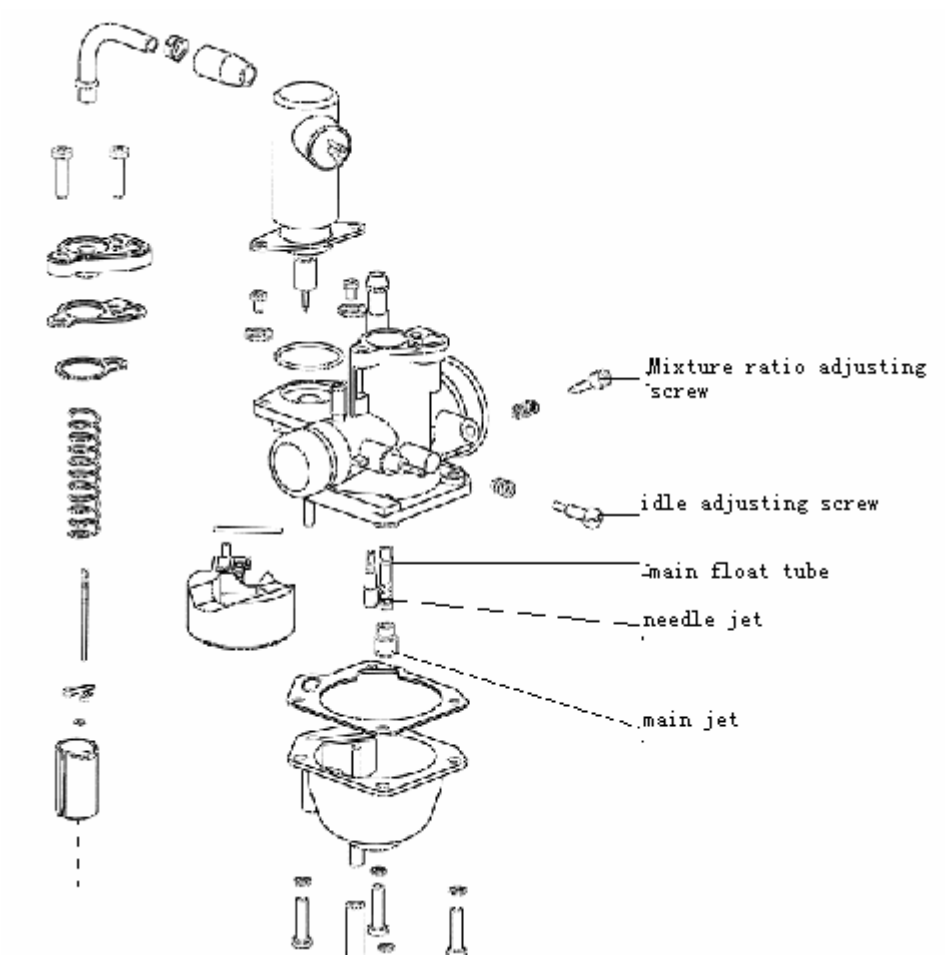

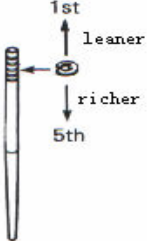




<p>CARBURETOR</p>	<p>Carburetor manufacturer/type Identification code Throat tube diameter Main jet size Idle needle jet size Oil needle clamp position Idle air adjusting screw Float height</p>	<p>QIANJIANG-WENLING-CHINA, equal vacuum PZ19JB 19mm #80 #57.5 3rd groove extrude $1\frac{1}{2} \pm \frac{1}{2}$ turnout 13 ± 1mm</p>
-------------------	---	--

CARBURETION

Proper carburetion is determined according to the results of various tests, mainly concerning engine power, fuel consumption and cooling effect of fuel on engine, and jet settings are made so as to satisfy and balance all of these conditions. Therefore, the jet should not be replaced with a size other than the original. And the positions of adjustable parts should not be changed except when compensation for the mixture ratio due to altitude differences or other climatic conditions. When adjustment is necessary, refer to the following.

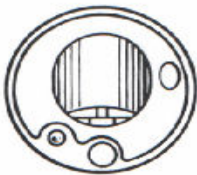fuel-air mixture ratio can be changed as follows:

throttle opening	means of changing ratio	standard setting
 <p>slight</p>	<p>pilot jet</p>  <p>larger number ; richer mixture smaller number ; leaner mixture</p>	#57.5
 <p>medium</p>	<p>jet needle</p>  <p>1st ↑ leaner ↓ richer 5th</p>	3rd groove
 <p>height</p>	<p>main jet</p>  <p>larger number ; richer mixture ; smaller number ; lean mixture</p>	#80

OIL PUMP

OIL LEAKAGE throughout

Whenever evidence is noted of some air having leaked into the oil pipe from the oil tank in a machine brought in for servicing, be sure to carry out an air bleeding operation with the oil pump in place before returning the machine to the user. To bleed air, hold the machine in standstill condition.

CHAPTER 5 ELECTRICAL SYSTEM

CONTENS

IGNITION SYSTEM

CHARGING AND LIGHTING SYSTEM

STARTER SYSTEM

FUEL GAUGE

 
OIL LEVEL CHECK LIGHT AND TURN SIGNAL INDICATOR

SWITCHS

BARTERY


Electrical system - I

Disassembling of the generator



Removing the stator

 Use a flywheel puller




Charging coil and light coil

Light coil: Measure the resistance between green/red wire and the black wire

Normal size: 1,0 +/- 0,4 Ohm

Charging coil: Measure the resistance between white and the black wire

 Normal size: 1,0 +/- 0,4 Ohm



Light resistor

Measure the resistance between wire and ground

Normal size: About 6.6 Ohm

 


Electrical system - II

Check the pick-up coil

Check the connector of the white/blue cable and against ground


Normal size: 460 - 560 Ohm



Check the ignition point

Check the ignition point with a timing light

 
Normal size: 13 degrees at 2000 rpm



Checkup the ignition coil

Check the primary coil
Between the two connectors

 
Normal size: 0,3 - 0,5 Ohm



Checkup the ignition coil

Check the secondary coil
Between connector and ignition cable
without spark plug cap

 Normal size: 1,4 Kohm +/- 10%



Electrical system - III

Battery check

Check up the voltage of battery

Full charged: 13,0 V - 13,2 V

Discharged: Lower than 12 V

Charging voltage

Normal 14 V \pm 0,5 V



 
Charging the battery

Use maintenance free YTX5L-BS

Use only battery charger of type
impulse type

Charging current: 0,4 A/0,3 A

Charging type: 5 hours \pm 30 min.



Check up the starter engine

Connect a full charged battery

Normal size: 20 Amp



Check the starting relays

Connect the two wires to battery

Measurement the two bolts on relays

OK= 12 V



BATTERY


SPECIFICATIONS

Type designation	YB4L-B
Capacity	12V 4Ah
Standard electrolyte	1.28 (20°C)

INITIAL CHARGING

FILLING ELECTROLYTE

- Remove the aluminum tape ① sealing the battery electrolyte filler holes.

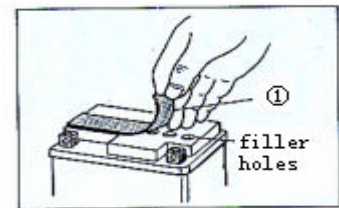


- Remove the caps ②.


NOTE:

*After filling the electrolyte completely, use the removed cap ② as the sealed caps of battery-filler holes.

*Do not remove or pierce the sealed areas ③ of the electrolyte container.

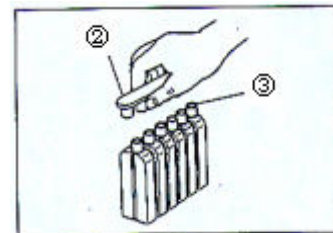

- Insert the nozzles of the electrolyte container into the battery's electrolyte filler holes, holding the container firmly so that it does not fall. Take precaution not to allow any of the fluid to spill.

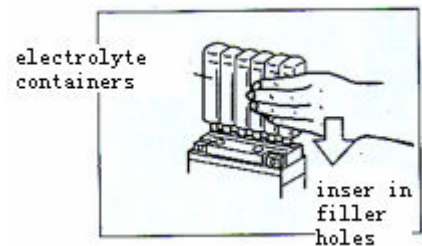

- Make sure air bubbles are coming up each electrolyte container, and leave in the position for about more than 20 minutes.

RECHARGEING OPERATION

- Apply multimeter to measure the voltage of battery. If the reading is below 12.0V, it should be recharged.


NOTE:

When recharging, remove the battery form the vehicle.

NOTE:


When recharging, don't remove the sealing cap off battery top.

Recharging time: 0.4A or for 5 hours or 4.0A for 1 hour.

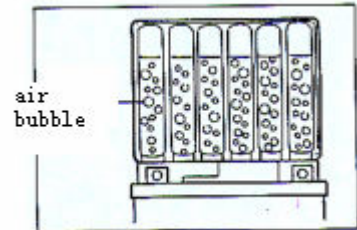

NOTE:

The current should be not more than 4A at any time.

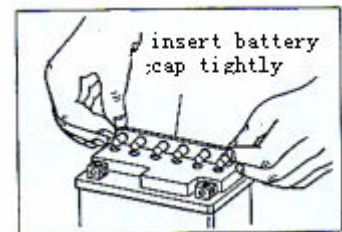

- After recharging, wait for more than 30 minutes and apply multimeter to measure the battery voltage.
- if the battery voltage is less than 12.5V, please recharge the battery again.
- if battery voltage is still less than 12.5V, please replace the battery with a new one.
- when the battery is left for a long term without using, it is subject to discharge. When th scooter is not used for more than 1 month (especially dring the winter season), recharge the battery once a month at least.



CHAPTER 6 CHASSIS

CONTENTS




LEG SHIELD AND FRAME SIDE COVERS	
LEG SHIELD REMOVAL	
LEG SHIELD REMOUNTING	
FRAME SIDE COVER REMOVAL	
FRAME SIDE COVER REMOUNTING	
HANDLEBAR COVERS	
REMOVAL	
REMOUNTING	
FRONT WHEEL	
REMOVAL	
INSPECTION AND DISASSEMBLY	
REASSEMBLY AND REMOUNTING	
FRONT BRAKE	
BRAKE PAD REPLACEMENT	
CALIPER REMOVAL AND DISASSEMBLY	
CALIPER AND DISC INSPECTION	
CALIPER REASSEMBLY	
MASTER CYLINDER REMOVAL AND DISASSEMBLY	
MASTER CYLINDER INSPECTION	
MASTER CYLINDER REASSEMBLY AND REMOUNTING	
STEERING STEM AND FRONT SUSPENSION	
REMOVAL AND DISASSEMBLY	
INSPECTION	
REASSEMBLY AND REMOUNTING	
IGNITION SWITCH	
REAR WHEEL AND BRAKE	
REMOVAL AND DISASSEMBLY	
INSPECTION	
REASSEMBLY AND REMOUNTING	

Side cover removal

1. remove seat and helmet barrel by opening seat and loosening tightening screw①.
2. loose hexad screw③ and remove decorating cap②, rear carrier and oil tank lock④, remove side cover ⑥ by loosening side cover screw⑤⑦;

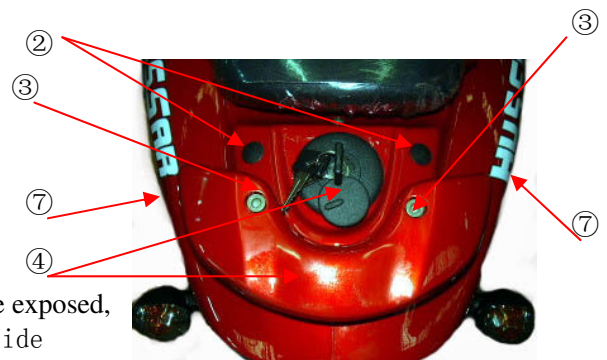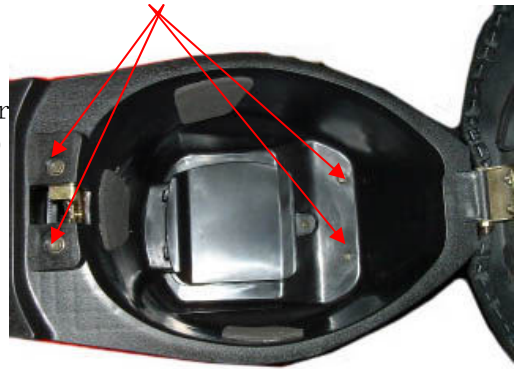

3. unlock oil pump cap and remove it, two tapping screw are exposed, remove them; remove tapping screw⑨; then remove side cover⑩

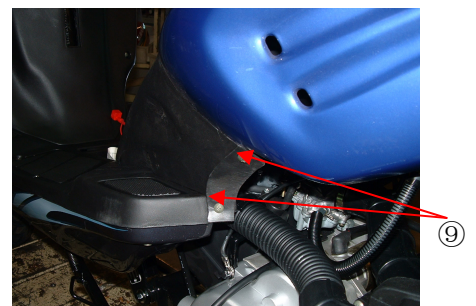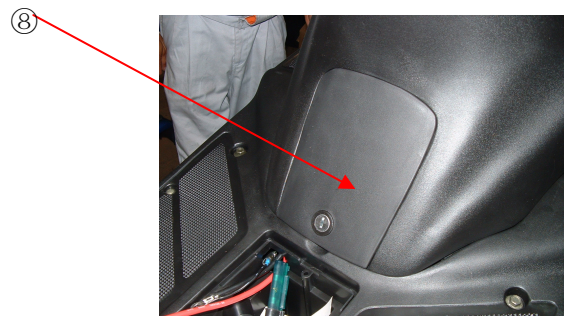
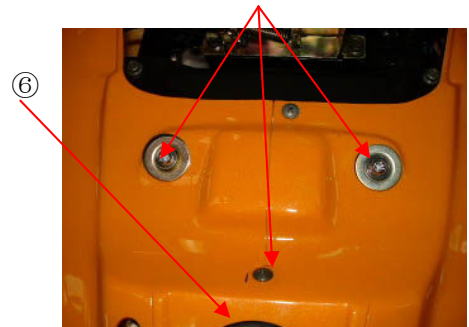


side installation

4. the sequence of installation is the reverse of removal.

under cover removal

1. unscrew screw② and bolt①
2. removing under cover by loosening the left and right tapping screws④;

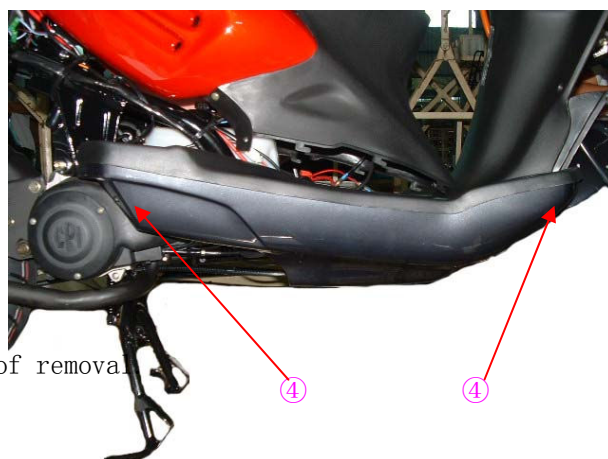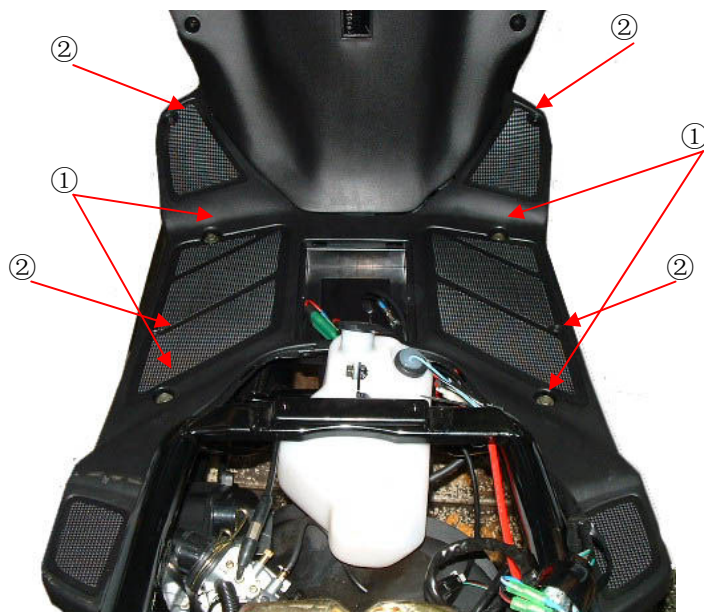

under cover installation

3. The sequence if installation is ther reverse of removal.



front cover removal

1. Unscrew tapping screw①, and remove front cover③ by removing front cover screw②

LEGSIELD AND PEDAL REMOVAL

1. Remove power lock housing ② by unscrewing bolt①.



3. remove legshield and pedal by unscrewing the four bolts③




Legshield and pedal installation

4. the sequence of legshield and pedal is the reverse of removal;

HANDLE COVER REMOVAL


1. Remove front handle cover ② by unscrewing the Tapping screws①

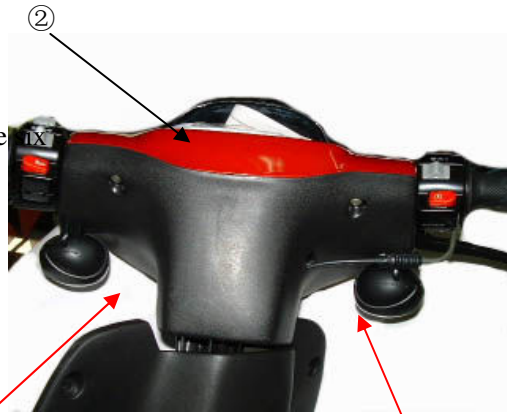


2. Remove master cylinder by removing the bolt③;



3. Disconnect throttle cable③ and oil pump cable④

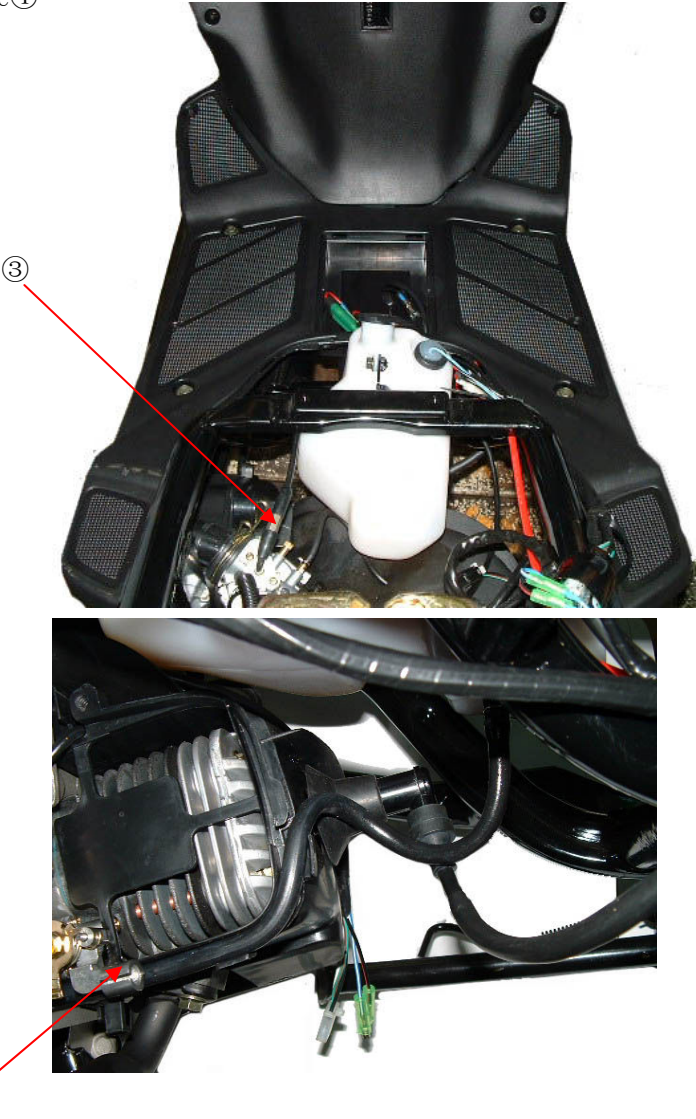


4. Remove rear brake cable adjusting nut⑤

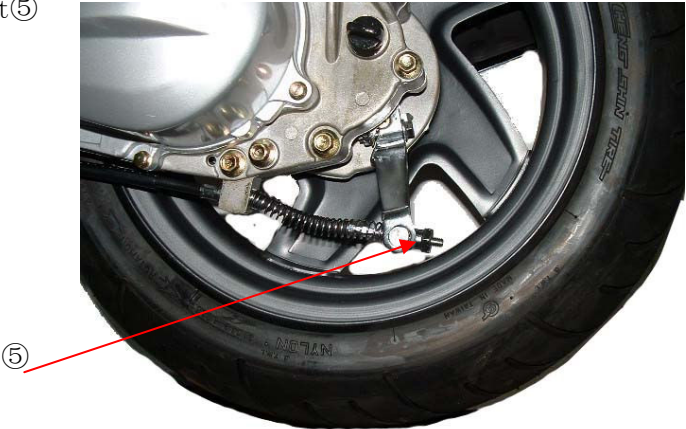


Handle cover removal

5. remove all cables;

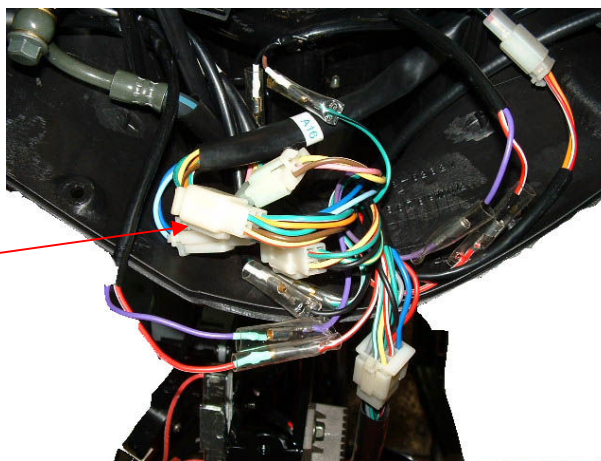


6. Remove handle cover by unscrewing bolt⑥

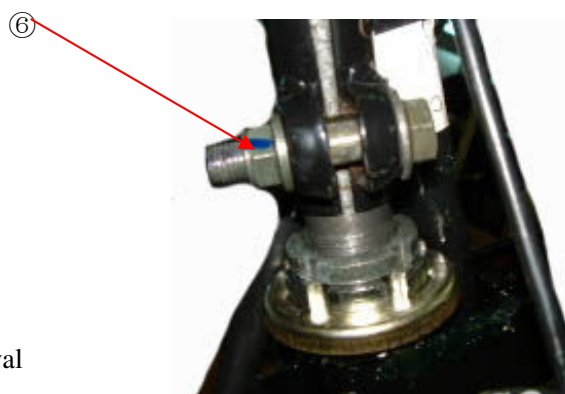


Handle cover unstallation

7. The sequence of removal is the reverse of reomval

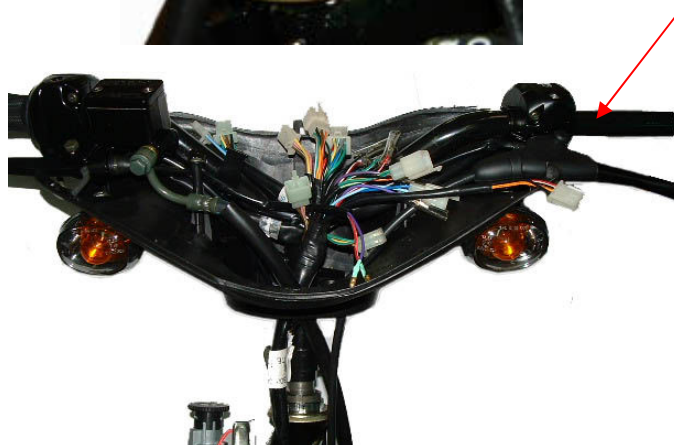


Front wheel

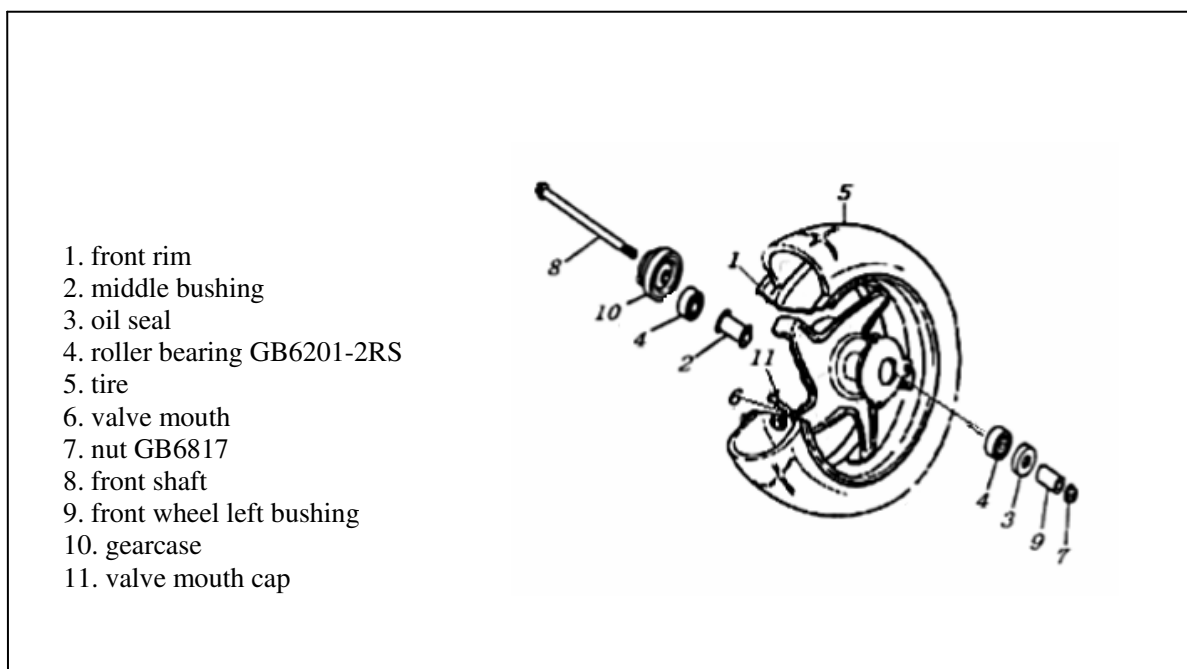

remove


- Remove the front brake caliper① by removing the mounting bolts.

NOTE: Do not operate the front brake lever while dismounting caliper

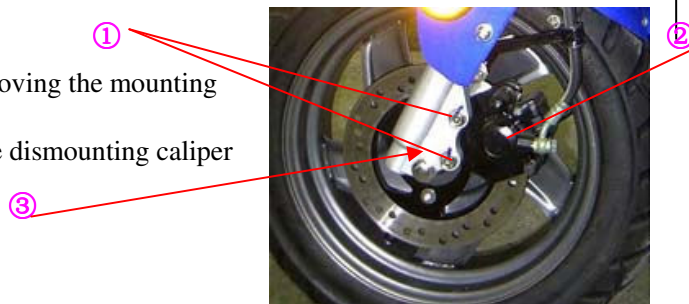

- remove mounting bolt③

- remove the left decorating cover④ and right one⑤.

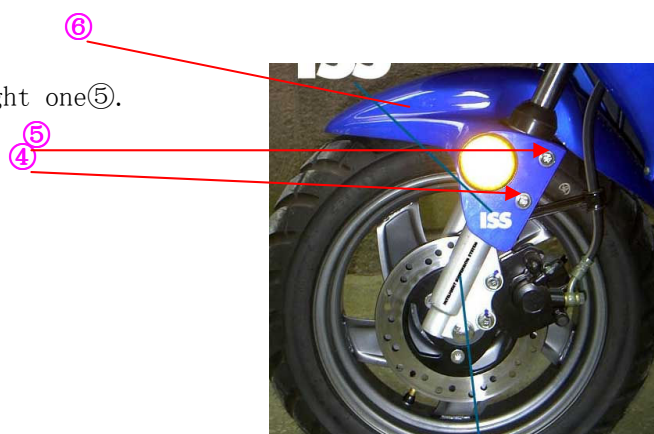

- remove under front fender⑥

- support the scooter by jack or wood shelf.

- Remove front wheel by removing front axle shaft.

INSPECTION AND DISASSEMBLY

WHEEL BEARING

Inspect the play of bearing inner ring by hand while mounted in the wheel.



Rotate the inner ring by hand to inspect if any abnormal noise occurs or rotating smoothly,

Replace the bearing if there is anything unusual.

- Remove the dust seal.

CAUTION:


The removed dust seal and bearing should be replaced with new ones.

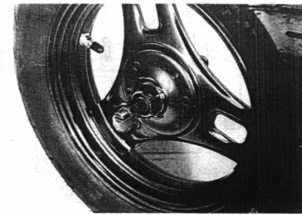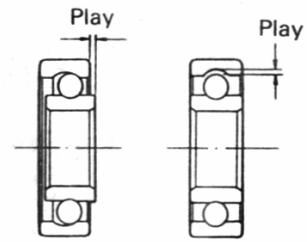

AXLE SHAFT

Check the axle shaft runout with a micrometer and replace it if the runout exceeds the limit.

Service limit: 0.25mm (0.010in)


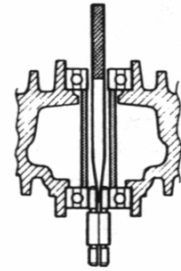


WHEEL RIM

Make sure that the wheel rim runout does not exceed the service limit when checked as shown.

An excessive runout is usually due to worn or loose wheel bearings and can be reduced by replacing the bearings. If bearing replacement fails to reduce the runout, replace the wheel.

Service Limit: 2.0mm (0.08in)

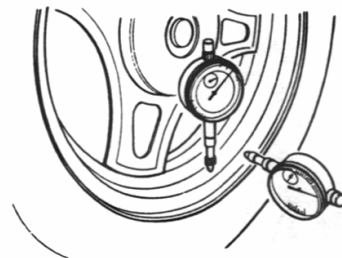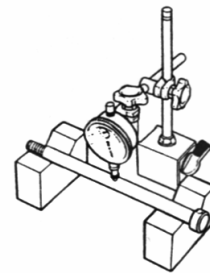

Reassembly and remounting

Reassemble and remount this front wheel in the reverse order of removal, and also carry out the following steps:

- install this wheel bearing with the special tools as shown in this illustration.

CAUTION: Install this wheel bearing for left side..



Install the brake disc as shown in photo.




When installing this speedometer gear box, align the two driving pawls with the two recesses of the wheel hub.

Tighten the nut with special tool.

FRONT BRAKE SYSTEM

1. disc brake assy.
2. disc brake handle lever
3. tightening bolt
4. nut M6
5. master cylinder
6. tightening seat
7. bolt M6X23
8. brake hose assy.
9. brake caliper
10. connecting board tightening bolt
11. hose mounting bolt
12. seal gasket
13. front gasket
14. rear gasket
15. brake pad 1
16. brake pad 2
17. master cylinder rubber bushing
18. front brake switch

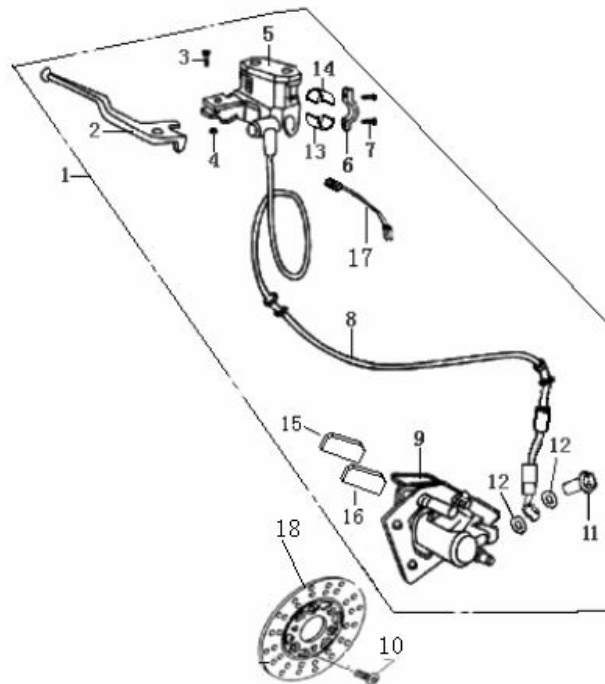


BRAKE PAD REPLACEMENT

Remove the calliper by removing the mounting bolts ① .

NOTE:

Do not operate the front brake lever while dismounting the calliper.

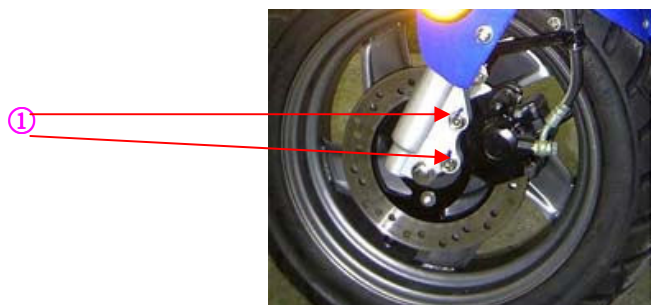

- Remove the brake pads.

CAUTION:

Replace the brake pads as a set, otherwise braking performance will be adversely affected.

Reassemble and remount the calliper.

CALIPER REMOVAL AND DISASSEMBLY

Remove the brake hose and catch the brake fluid in a suitable receptacle.

CAUTION:




Never re-use the brake fluid left over from the last servicing and stored for long periods.

- Remove the calliper.
- Remove the brake pads.
- Remove the spring and pad holder.

- Place a rag over the piston to prevent popping up. Force out the piston with an air gun.

CAUTION:

Do not use high pressure air to prevent piston damage.

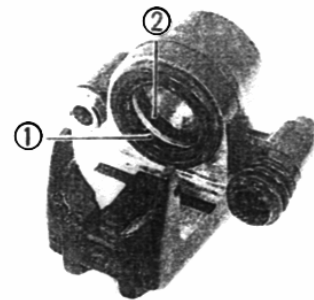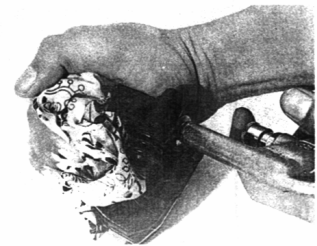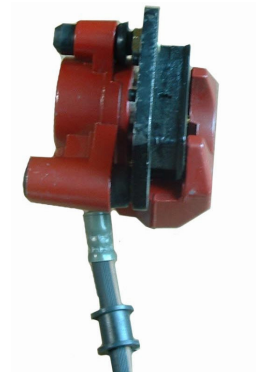


- Remove the dust seal ① and piston seal ②.

CALIPER AND DISC INSPECTION

Inspect the caliper cylinder bore wall for nicks, scratches or other damage.

Inspect piston for damage and wear.

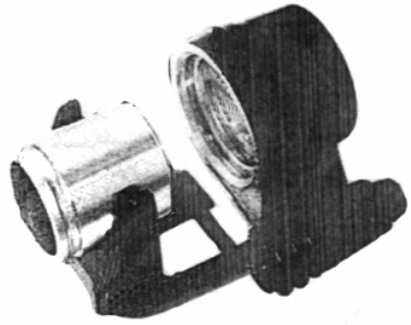


Inspect each rubber part for damage and wear.



Check the disc for wear with a micrometer. Its thickness can be checked with disc and wheel in place. Replace the disc if the thickness exceeds the service limit.


Service Limit: 3.5 mm (0.14 in)

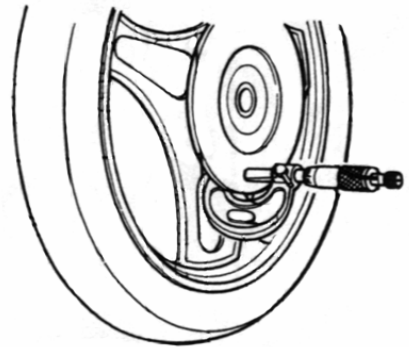

With the disc mounted on the wheel, check the disc for face runout with a dial gauge as shown.

Replace the disc if the runout exceeds the service limit.

Service Limit: 0.3 mm (0.012 in)

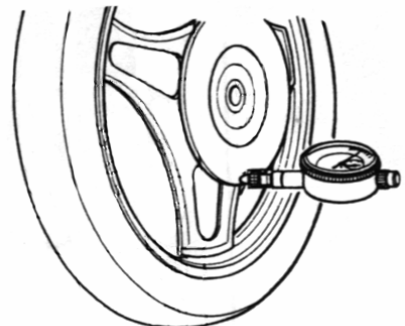

BRAKE CALIPER REASSEMBLY

Reassemble and remount the calliper in the reverse order of removal and disassembly, and also carry out the following steps.


CAUTION:

Wash the calliper components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to wash them. Apply brake fluid to the calliper bore and piston to be inserted into the bore.

Reassemble and remount the calliper. (refer to preceding bove pages)

WARNING:


Bleed air after remounting the calliper. (refer to above pages)

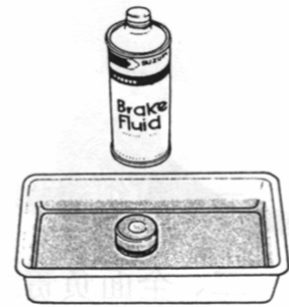

MASTER CYLINDER REMOVAL AND DISASSEMBLY

Remove the handlebar cover. (Refer to above page)

Disconnect the front brake light switch lead wires.

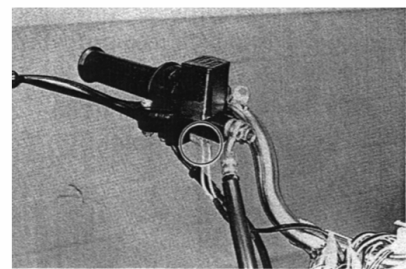


Place a cloth underneath the union bolt on the master cylinder to catch spilled drops of brake fluid. Unscrew the union bolt and disconnect the brake hose master cylinder joint.

CAUTION:


Completely wipe off any brake fluid adhering to any part of motorcycle. The fluid reacts chemically with paint, plastics, rubber materials, etc.




Remove the master cylinder.

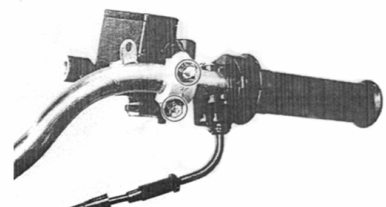


Remove the brake lever and brake switch.

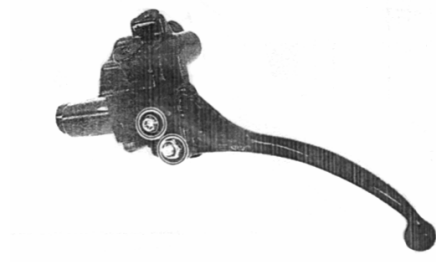

Remove the dust boot.

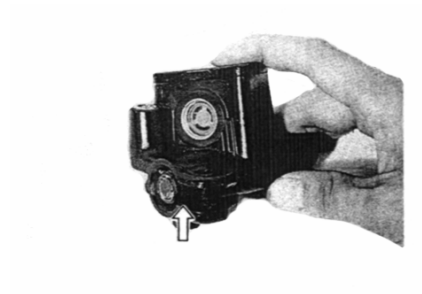

Remove the circlip with the special tool.

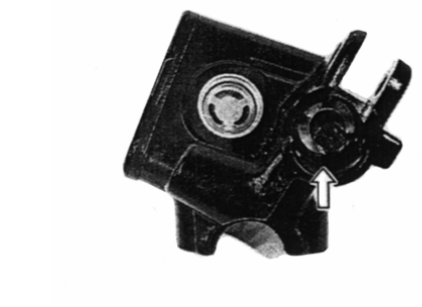


Remove the piston/primary cup with return spring.
Remove the reservoir cap and diaphragm.
Drain brake fluid.



MASTER CYLINDER INSPECTION

Inspect the master cylinder bore for any scratches or other damage.

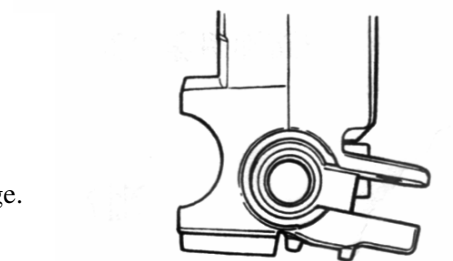

Inspect the piston surface for scratches or other damage.
Inspect the primary cup and dust boot for wear or damage.



MASTER CYLINDER REASSEMBLY AND REMOUNTING
Reassemble and remount the master cylinder in the reverse order of Removal and disassembly, and also carry out the following steps.

CAUTION:


Wash the master cylinder components with fresh brake fluid before reassembly. Never use cleaning solvent or gasoline to wash them. Apply brake fluid to the cylinder bore and all the internals to be inserted into the bore.



Reassemble and remount the master cylinder,
When remounting the master cylinder on the handlebar, first tighten the clamp bolt for upside.


CAUTION:

Bleed air after remounting the master cylinder.

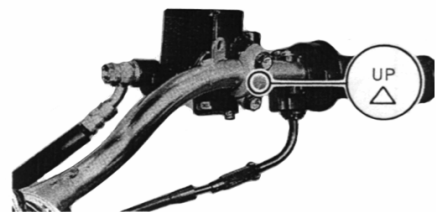

STEERING STEM AND FRONT SUSPENSION


1. handle jointing assy.
2. bolt GB5789 M10X1.25X45
3. nut GB6187 M10X1.25
4. left handlebar
5. throttle grip assy.
6. screw GB818 M5X10
7. rear brake cable assy.
8. throttle cable assy.
9. left switch comp.
10. right switch comp.
11. anti-dust cover
12. steel ball $\varnothing 5$
13. lower outer steel bowl
14. connecting steel bowl
15. under connecting borad assy.
16. lower inner steel bowl
17. bolt GB5789 M10X1.25X30
18. locknut

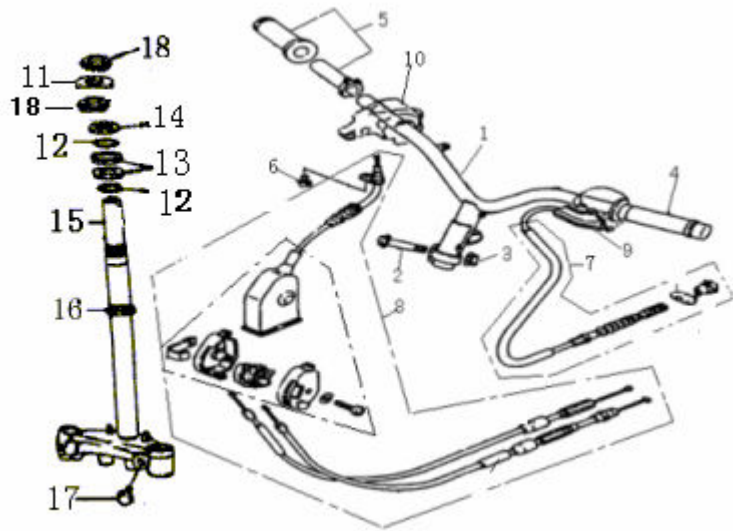

REMOVAL AND DISASSEMBLY

(Refer to preceding page)

- ☐ remove the handle cover (refer to preceding page)
- ☐ remove under decorating cover (refer to the preceding page)
- ☐ remove legshield (refer to preceding page)
- ☐ remove front wheel (refer to preceding page)
- ☐ disconnect the front and rear brake light switch lead wires①.
- ☐ Remove the rear brake cable②.

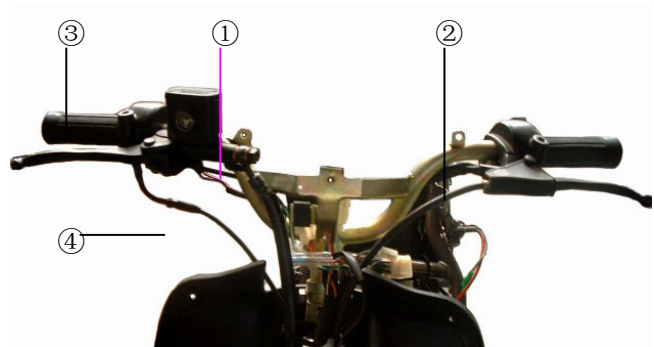

- ☐ Remove throttle grip case③.
- ☐ Remove throttle cable ④.

- ☐ remove disc brake system by unscrewing tightening bolt.



- ☐ remove handle by removing tightening bolt




- ☐ unscrew locknut with special tool

- ☐ remove front fork assy. by removing upper outer steel bowl

NOTE:

Not drop the steering stem balls.

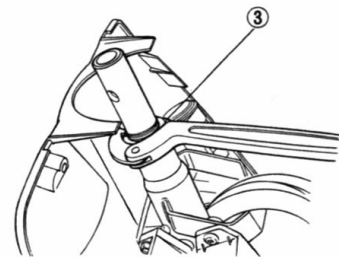

- ☐ remove front fork

- ☐ remove bearing lower race by chisel.


- ☐ Remove steel balls.

Number of steel balls:

Upper: 21


lower: 21

- ☐ remove the upper and lower bearing inner races with a appropriate bar

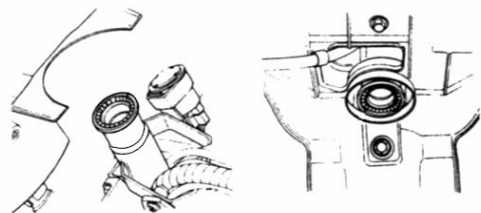


INSPECTION

- ☐ inspect the removed parts for the following abnormalities.
 - ◆ bearing race wear and brinelling.
 - ◆ Worn and damaged steel balls
 - ◆ Distortion of steering stem or handlebar.

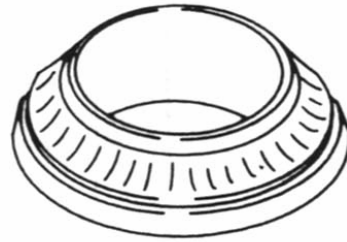

- ☐ Inspect the suspension for damage

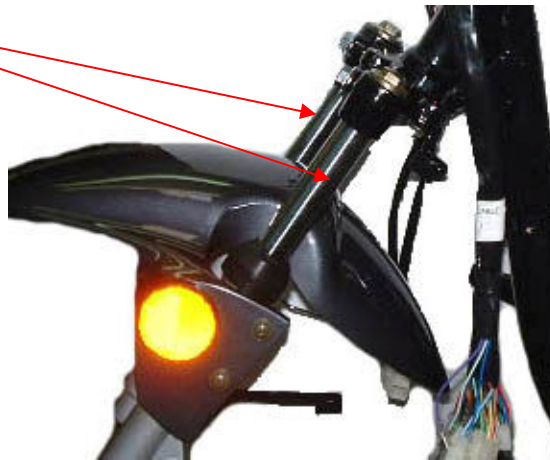

Reassembly and remounting

reassemble and remount the steering stem, handlebar and front fork in the reverse order of disassembly and removal, and also carry out the following steps.

Install the right left suspension arms.



Steel ball


Apply grease when installing the upper and lower steel balls.

QTY: upper : 21


lower : 21

Tighten the steering outer race with special tool, then extrude it 1/8-1/4round.


NOTE: adjustment will vary from scooter to scooter. Be sure that right.

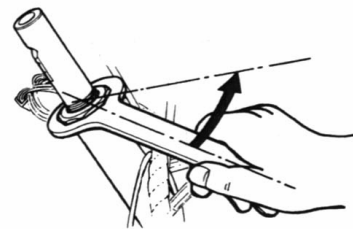

- ☐ install a locknut by installing locknut and anti-dust cover

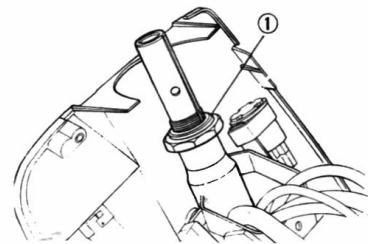


- ☐ screw locknut with special tool, and adjust front fork bearing to get smooth turning.

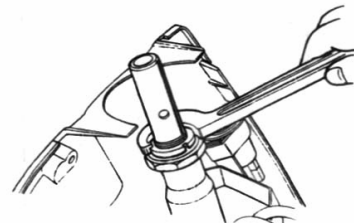

install handlebar and tighten the screw①

to the specified torque: 37-44N.M

①

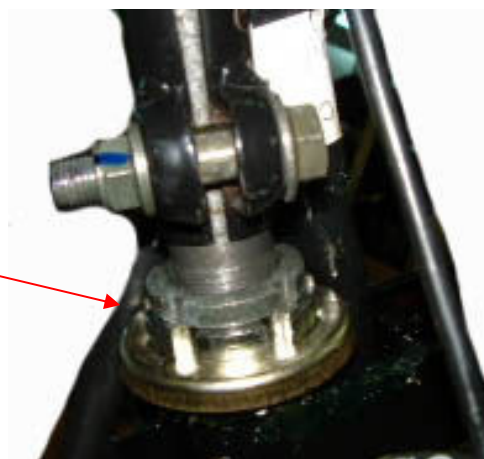


NOTE:

After performing the adjustment and installing the handlebar, Rock the front wheel forward and backward to ensure that there is no play and that the procedure is accomplished correctly. If play is noticeable, readjust the steering outer race nut.





REAR WHEEL AND BRAKE

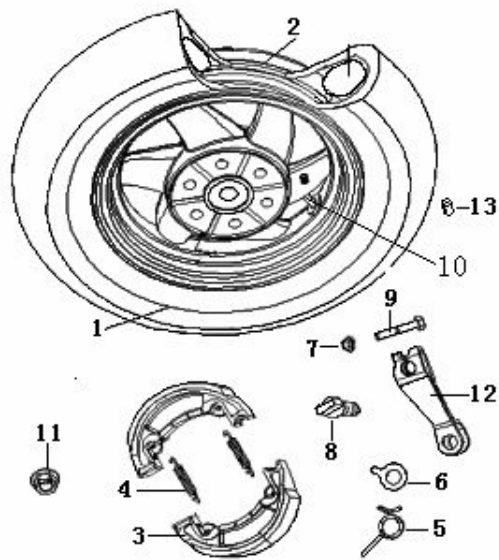

1. Tire 130/70-12
2. rear rim assy.
3. brake pad kit
assy.
4. brake pad kit
spring
5. rear brake
tension
6. rear indicator
7. anti-dust cover
8. rear brake
camshaft
9. bolt M6 X 30
10. valve
11. nut M16 X 1.5
12. rear brake arm
13. valve cap

REMOVE

- ☐ Place the scooter on level ground.
- ☐ Remove muffler.
- ☐ Remove rear small fender.
- ☐ Remove locknut and rear wheel.
- ☐ Remove brake shoes.

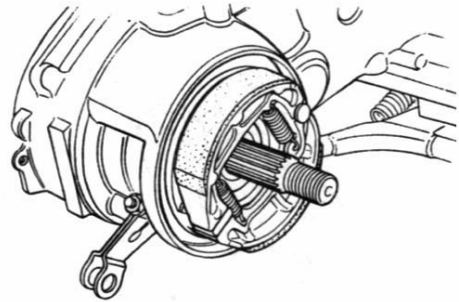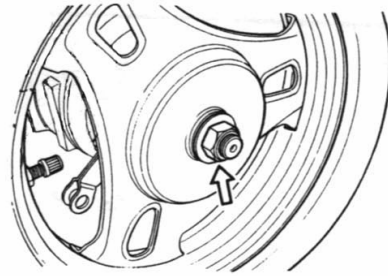

INSPECTION

REAR RIM


Measure inner diameter of rear rim hub with micrometer, if measured diameter exceeds 110.7, replace it with a new one.



Brake shoes

Check the brake shoe and decide whether it should be replaced or not from the thickness of the brake shoe lining.


Service limit: 2.5mm(0.09in)

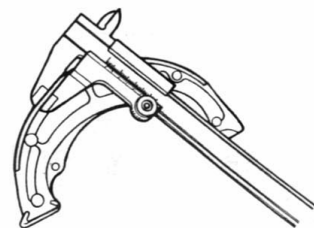


REASSEMBLY AND REMOUNTING

Reassemble and remount the rear wheel and brake in the reverse of removal, and also carry out the following steps:


- ☐ Turn the punched mark ① on the camshaft to the Rear axle shaft side.

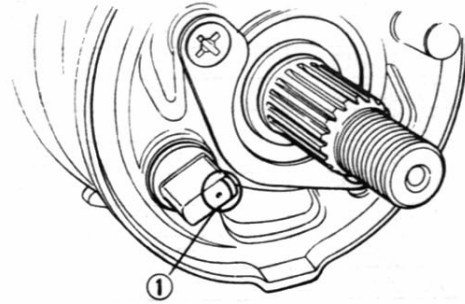


- ☐ Install the protrusion ② of indicator plate to the groove ③ of Camshaft.

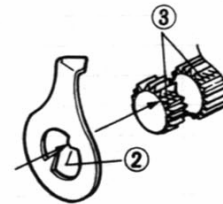

- ☐ When installing the brake cam shaft, align the groove ④ of camshaft With the slit ⑤ of on cam shaft.

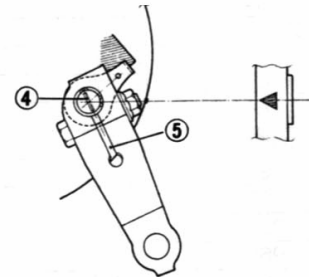

- ☐ When installing brake shoes, be sure to daub camshaft with Adequate grease.

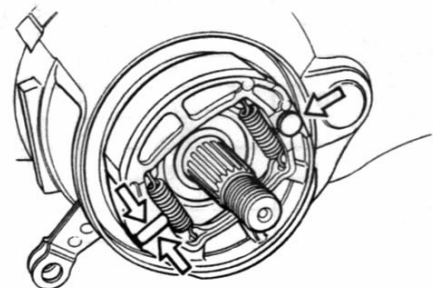

CAUTION:

Be careful not to daub the camshaft with too much grease. If grease gets on the lining, brake effectiveness will be lost.

SERVICING INFORMATION

CONTENTS

Troubleshooting

Battery

Vehicle

Wiring diagram

Wire, cable and brake hose routing

Special tools

Thread parts tightening torque

Service data

TROUBLESHOOTING

ENGINE

Complaint	Symptom and possible causes	Remedy
Engine does not start, or is hard to start.	Compression too low <ol style="list-style-type: none"> Excessively worn cylinder or piston rings. Stiff piston ring in place. Gas leaks from the joint in crankcase, cylinder or cylinder head. Damaged reed valve. Spark plug too loose. Broken, cracked or otherwise failed piston. Plug not sparking <ol style="list-style-type: none"> Damaged spark plug or spark plug cap. Dirty or wet spark plug. Defective CDI & ignition coil unit or stator coil. Open or short n high-tension cord. Defective ignition switch. No fuel reaching the carburetor <ol style="list-style-type: none"> Clogged hole in the fuel tank cap. Clogged or defective fuel cock. Defective carburetor float valve. Clogged fuel hose or defective vacuum hose. 	Replace. Repair or replace. Repair or replace. Replace. Tighten Replace. Replace. Clean and dry. Replace. Replace. Replace. Clean. Clean or replace. Replace. Clean or replace.
Engine stalls easily.	<ol style="list-style-type: none"> Carbon deposited on the spark plug. Defective CDI & ignition coil unit. Clogged fuel hose. Clogged jets in carburetor. Clogged exhaust pipe. 	Clean. Replace. Clean. Clean. Clean.
Noisy engine.	Noise appears to come from piston <ol style="list-style-type: none"> Piston or cylinder worn down. Combustion chamber fouled with carbon. Piston pin, bearing or piston pin bore worn. Piston rings or ring grooves worn. Noise seems to come from crankshaft <ol style="list-style-type: none"> Worn or burnt crankshaft bearings. Worn or burnt conrod big-end bearings. Noise seems to come from final gear box <ol style="list-style-type: none"> Gears worn or rubbing. Badly worn splines. Worn or damaged bearing of drive shaft or rear axle shaft. 	Replace. Clean. Replace. Replace. Replace. Replace. Replace. Replace. Replace.
Slipping clutch	<ol style="list-style-type: none"> Worn or damaged clutch shoes. Worn clutch drum. 	Replace. Replace.
Engine idles poorly.	<ol style="list-style-type: none"> Excessively worn cylinder or piston rings. Stiff piston ring in place. Gas leaks from crankshaft oil seal. Spark plug gaps too wide. Defective CDI & ignition coil unit. Defective magneto stator coil. Float-chamber fuel level out of adjustment in carburetor. Clogged jets in carburetor. Broken or damaged reed valve. 	Replace. Replace. Replace. Adjust or replace. Replace. Replace. Replace. Clean or adjust. Replace.

Complaint	Symptom and possible causes	Remedy
Engine runs poorly in high-speed range.	<ol style="list-style-type: none"> Excessively worn cylinder or piston rings. Stiff piston ring in place. Spark plug gaps too narrow. Ignition not advanced sufficiently due to poorly working CDI & ignition coil unit. Defective magneto stator coil. Float-chamber fuel level too low. Clogged air cleaner element. Clogged fuel hose, resulting in inadequate fuel supply to carburetor. Clogged fuel cock vacuum pipe. 	Replace. Replace. Adjust. Replace. Replace. Adjust or replace. Clean. Clean and prime. Clean.
Dirty or heavy exhaust smoke.	<ol style="list-style-type: none"> Too much engine oil to the engine. Use of incorrect engine oil. 	Check oil pump. Change.
Engine lacks power.	<ol style="list-style-type: none"> Excessively worn cylinder or piston rings. Stiff piston rings in place. Gas leaks from crankshaft oil seal. Spark plug gaps incorrect. Clogged air cleaner element. Float-chamber fuel level out of adjustment. Clogged air cleaner element. Fouled spark plug, Sucking air from intake pipe. Slipping or worn V-belt. Damaged/worn rollers in the movable drive face. Weakened movable driven face spring. Too rich fuel/air mixture due to defective starter system. 	Replace. Replace. Replace. Adjust or replace. Clean. Adjust or replace. Clean. Clean or replace. Retighten or replace. Replace. Replace. Replace. Replace. Replace.
Engine overheats.	<ol style="list-style-type: none"> Heavy carbon deposit on piston crown. Defective oil pump or clogged oil circuit. Fuel level too low in float chamber. Air leakage from intake pipe. Use of incorrect engine oil. Use of improper spark plug. Clogged exhaust pipe/muffler. 	Clean. Replace and clean. Adjust or replace. Retighten or replace. Change. Change. Clean or replace.

CARBURETOR

Complaint	Symptom and possible causes	Remedy
Trouble with starting.	<ol style="list-style-type: none"> Starter jet is clogged. Air leaking from a joint between starter body and carburetor. Air leaking from carburetor's joint or vacuum hose joint. Starter plunger is not operating properly. 	Clean. Check starter body and carburetor for tightness, and replace gasket. Check and replace. Check and replace.
Idling or low-speed troubles.	<ol style="list-style-type: none"> Pilot jet, pilot air jet are clogged or loose. Air leaking from carburetor's joint, vacuum pipe joint, or starter. Pilot outlet is clogged. Starter plunger is not fully close. 	Check and clean. Check and replace. Check and clean. Check and replace.

Complaint	Symptom and possible causes	Remedy
Medium- or high-speed trouble.	1. Main jet or main air jet is clogged. 2. Needle jet is clogged. 3. Fuel level is improperly set. 4. Throttle valve is not operating properly. 5. Fuel filter is clogged.	Check and clean. Check and clean. Check and replace. Check throttle valve for operation. Check and clean.
Overflow and fuel level fluctuations.	1. Needle valve is worn or damaged. 2. Spring in needle valve is broken. 3. Float is not working properly. 4. Foreign matter has adhered to needle valve. 5. Fuel level is too high or low.	Replace. Replace. Check and adjust. Clean. Adjust and replace.

ELECTRICAL

Complaint	Symptom and possible causes	Remedy
No sparking or poor sparking.	1. Defective CDI & ignition coil unit. 2. Defective spark plug. 3. Defective magneto stator coil. 4. Loose connection of lead wire.	Replace. Replace. Replace. Connect/tighten.
Spark plug soon becomes fouled with carbon.	1. Mixture too rich. 2. Idling speed set too high. 3. Incorrect gasoline. 4. Dirty element in air cleaner. 5. Spark plug loose. 6. Incorrect engine oil.	Adjust carburetor. Adjust carburetor. Change. Clean. Replace by hot type plug. Replace.
Spark plug electrodes overheat or burn.	1. Spark plug too hot. 2. The engine overheats. 3. Spark plug loose. 4. Mixture too lean. 5. Not enough engine oil.	Replace by cold type plug, Tune up. Retighten. Adjust carburetor. Check oil pump.
Magneto does not charge.	1. Open or short in lead wires, or loose lead connections. 2. Shorted, grounded or open magneto coil. 3. Shorted or open regulator/rectifier.	Repair or retighten. Replace. Replace.
Magneto charge, but charging rate is below the specifications.	1. Lead wires tend to get shorted or open-circuited or loosely connected at terminal. 2. Grounded or open-circuited stator coils of magneto. 3. Defective regulator/rectifier. 4. Defective cell plates in the battery,	Repair or retighten. Replace. Replace. Replace the battery.
Magneto overcharges.	1. Internal short-circuit in the battery. 2. Resistor element in the regulator/rectifier damaged or defective. 3. Regulator/rectifier unit poorly grounded.	Replace the battery. Replace. Clean and tighten ground connection.

Complaint	Symptom and possible causes	Remedy
Unstable charging.	1. Defective regulator/rectifier. 2. Lead wire insulation frayed due to vibration, resulting in intermittent shorting. 3. Magneto coil internally shorted.	Repair or replace. Replace. Replace.

Starter button is not effective.	<ol style="list-style-type: none"> 1. Battery run down. 2. Defective switch contacts. 3. Brushes not seating properly on commutator in starter motor. 4. Defective starter relay. 5. Defective starter pinion gears 6. Defective front or rear brake light switch circuit. 	Recharge and replace. Replace. Repair or replace. Replace. Replace. Repair or replace.
---	--	---

BATTERY

Complaint	Symptom and possible causes	Remedy
Battery runs down quickly.	<ol style="list-style-type: none"> 1. The charging method is not correct. 2. Cell plates have lost much of their active material as a result of over-charging. 3. A short-circuit condition exists within the battery due to excessive accumulation of sediments caused by the incorrect electrolyte. 4. Battery is too old. 	Check the magneto and regulator/rectifier circuit connections, and make necessary adjustments to obtain specified charging operation. Replace the battery, and correct the charging system. Replace the battery. Replace the battery.
Reversed battery polarity.	<ol style="list-style-type: none"> 1. The battery has been connected the wrong way round in the system, so that it is being charged in the reverse direction. 	Replace the battery and be sure to connect the battery properly.
Battery discharges too rapidly.	<ol style="list-style-type: none"> 1. Dirty container top and sides. 2. Battery is too old. 	Clean. Replace.

CHASSIS


Complaint	Symptom and possible causes	Remedy
Handling feels too heavy.	<ol style="list-style-type: none"> 1. Steering stem nut overtightened. 2. Broken bearing/race in steering stem. 3. Distorted steering stem. 4. Not enough pressure in tires. 	Adjust. Replace. Replace. Adjust.
Wobbly handle.	<ol style="list-style-type: none"> 1. Loss of balance between right and left front suspension. 2. Distorted front axle or crooked tire. 	Replace. Replace.
Wobbly front wheel.	<ol style="list-style-type: none"> 1. Distorted wheel rim. 2. Worn front wheel bearings. 3. Defective or incorrect tire. 4. Loose nut on axle. 5. Loose nuts on the rear shock. 6. Worn engine mounting bushing. 7. Loose nuts or bolts for engine mounting. 	Replace. Replace. Replace. Retighten. Retighten. Replace. Tighten.
Front suspension too soft.	<ol style="list-style-type: none"> 1. Weakened springs. 2. Oil leakage of shock absorber, 	Replace. Replace.
Front suspension too stiff.	<ol style="list-style-type: none"> 1. Not enough grease, 2. Worn suspension arm spacer 	Refill. Replace.

Noisy front suspension.	<ol style="list-style-type: none"> 1. Not enough grease. 2. Loose nuts on suspension. 	Refill. Retighten.
Wobbly rear wheel.	<ol style="list-style-type: none"> 1. Distorted wheel rim. 2. Defective or incorrect tire. 3. Loose nuts on the rear shock absorber. 4. Worn engine mounting bushing. 5. Loose nuts or bolts for engine mounting. 	Replace. Replace. Replace. Replace. Retighten.
Rear suspension too soft.	<ol style="list-style-type: none"> 1. Weakened spring. 2. Oil leakage of rear shock absorber. 	Replace. Add lubrication
Noisy rear suspension.	<ol style="list-style-type: none"> 1. Loose nuts on shock absorber, 2. lubrication leakage. 	Adjust Add lubrication.

BRAKES


Complaint	Symptom and possible causes	Remedy
Insufficient brake power.	<ol style="list-style-type: none"> 1. Leakage of brake fluid from hydraulic system. 2. Worn pad. 3. Oil adhesion on engaging surface of pad. 4. Worn disc. 5. Air entered into hydraulic system. 6. Worn shoe. 7. Friction surfaces of shoes are dirty with oil. 8. Excessively worn drum. 9. Too much brake lever play. 	Repair or replace. Replace. Clean disc and pads. Replace. Bleed air. Replace. Replace. Replace. Replace. Adjust.
Brake squeaking.	<ol style="list-style-type: none"> 1. Carbon adhesion on pad surface. 2. Tilted pad. 3. Damaged wheel bearing. 4. Worn pad. 5. Foreign substance entered into brake fluid. 6. Clogged return port of master cylinder. 7. Brake shoe surface glazed. 8. Loose front-wheel axle or rear-wheel axle nut. 9. Worn shoe. 	Repair surface with sandpaper. Modify and fitting. Replace. Replace. Replace brake fluid. Disassemble and clean master cylinder. Repair surface with sandpaper, Tighten to specified torque. Replace.
Excessive brake lever stroke.	<ol style="list-style-type: none"> 1. Air entered into hydraulic system. 2. Insufficient brake fluid. 3. Improper quality of brake fluid. 4. Worn brake cam lever. 5. Excessively worn shoes and/or drum. 	Adjust Refill Replace Replace Replace
Leakage of brake fluid.	<ol style="list-style-type: none"> 1. Insufficient tightening of connection joints. 2. Cracked hose. 3. Worn piston seal. 	Replace or repair Replace. Replace.
Brake drags.	<ol style="list-style-type: none"> 1. Rusty moving parts. 	replace



B08 50cc USA 电气原理图



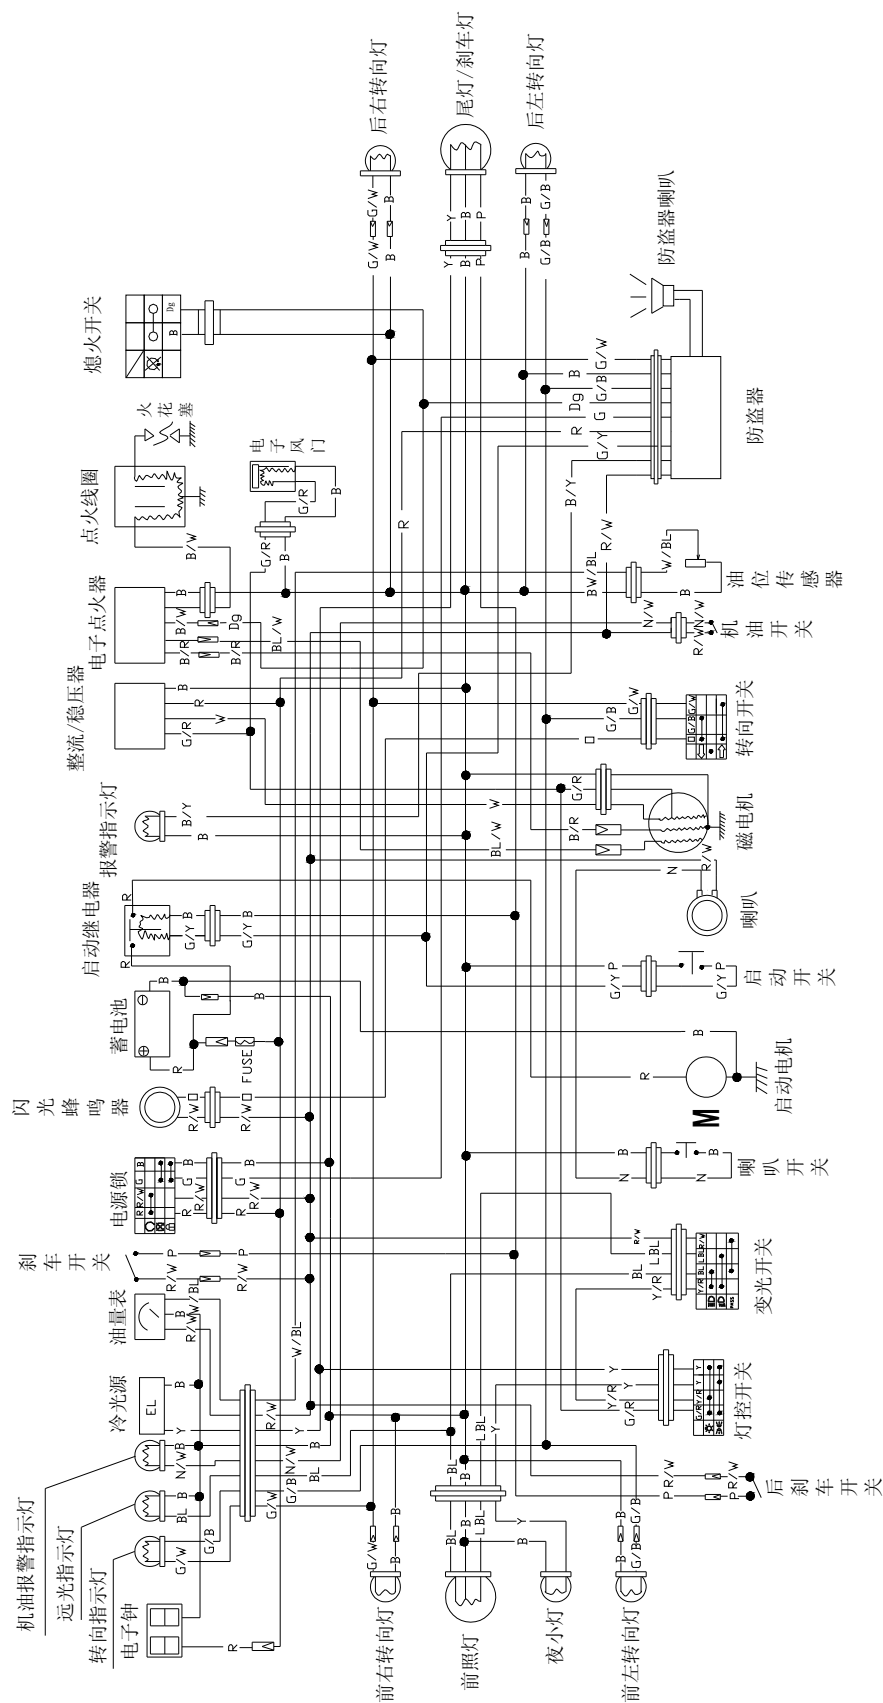


	B	NBL	Dg	LR	G/R	G/W	G/B	G/Y	R/W
红	黑	棕	蓝	粉	绿	绿	绿	绿	红
黄	紫	白	橙	黄	黑	棕	蓝	黑	红

WIRE, CABLE AND BRAKE HOSE ROUTING

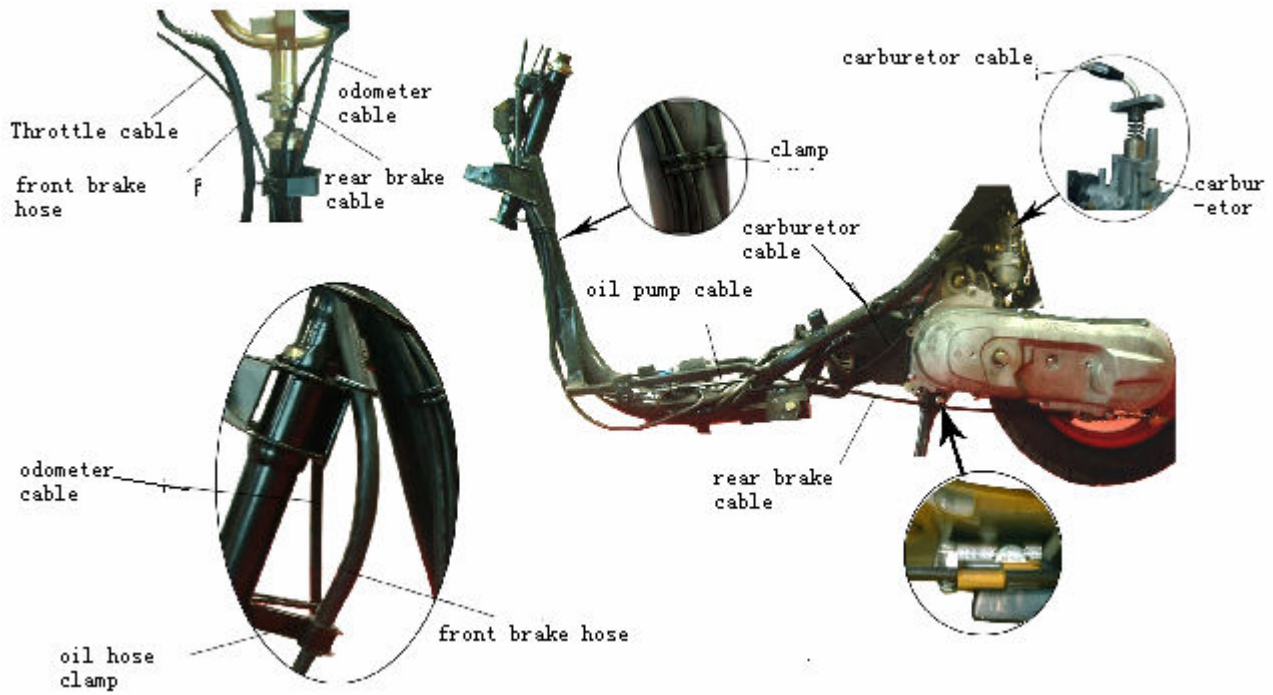

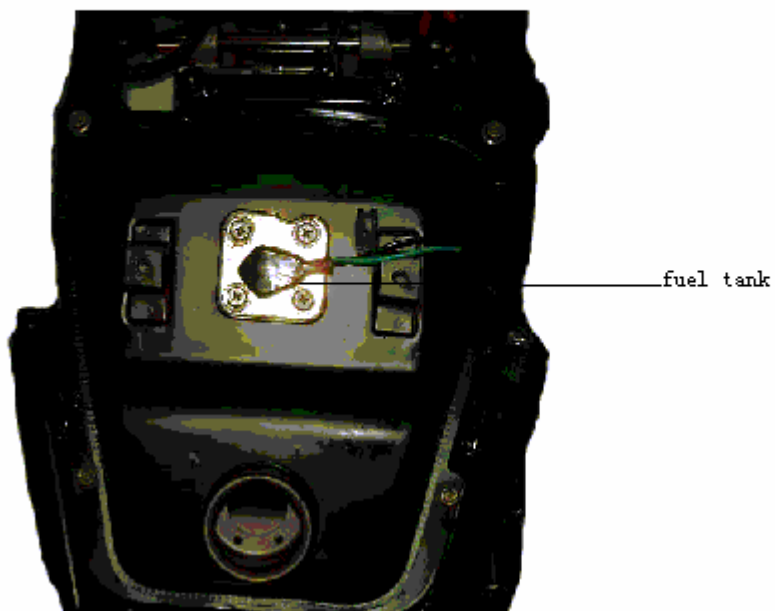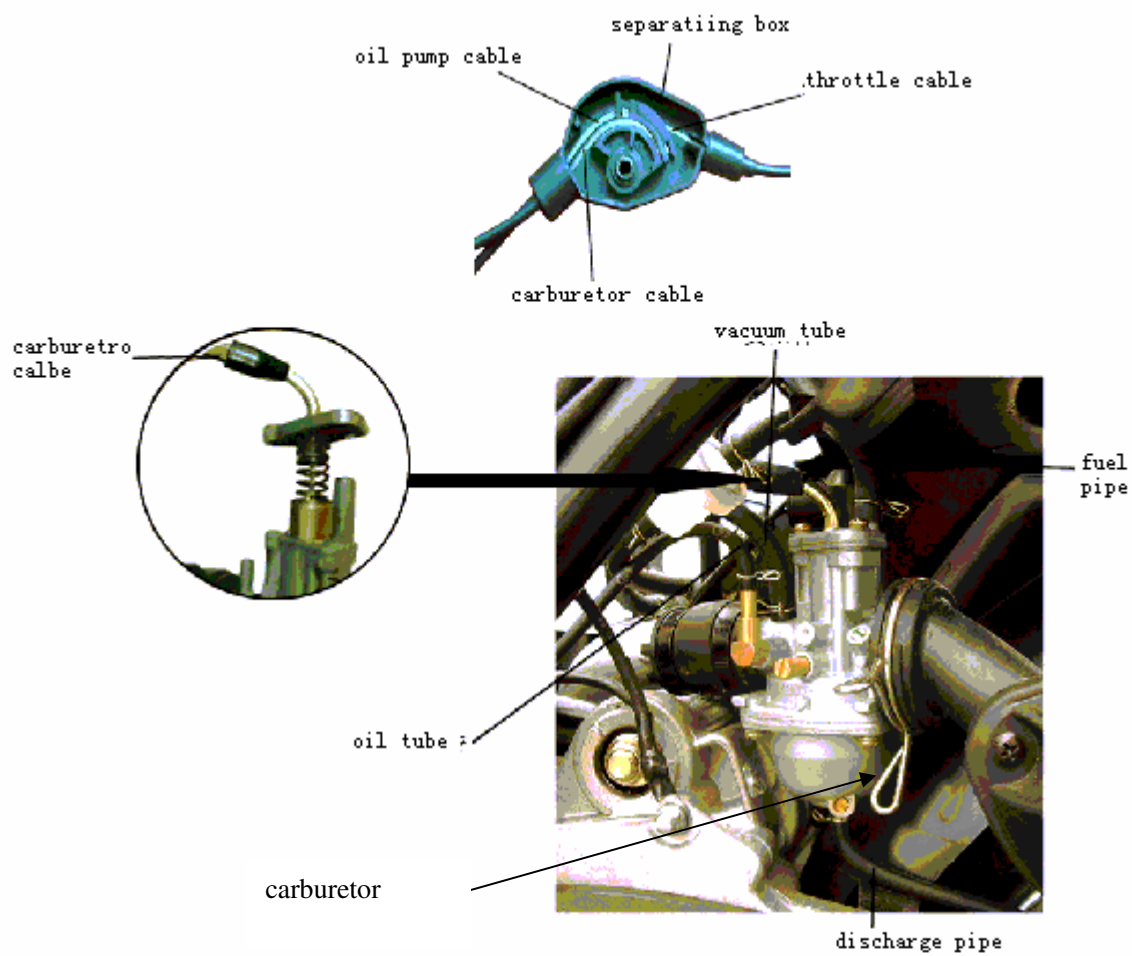


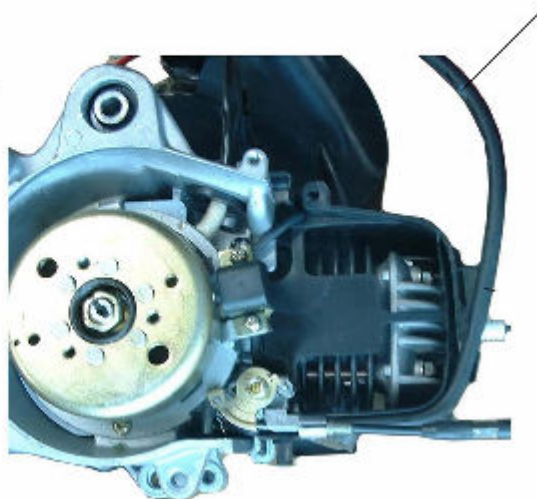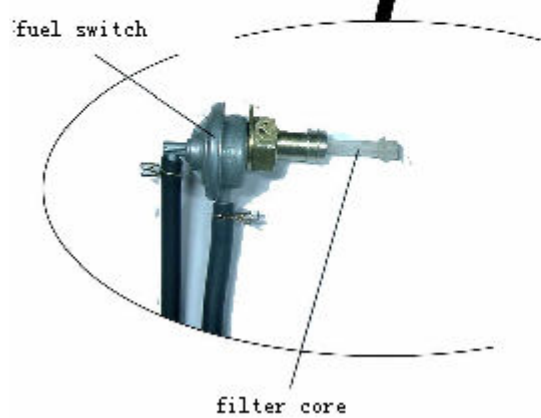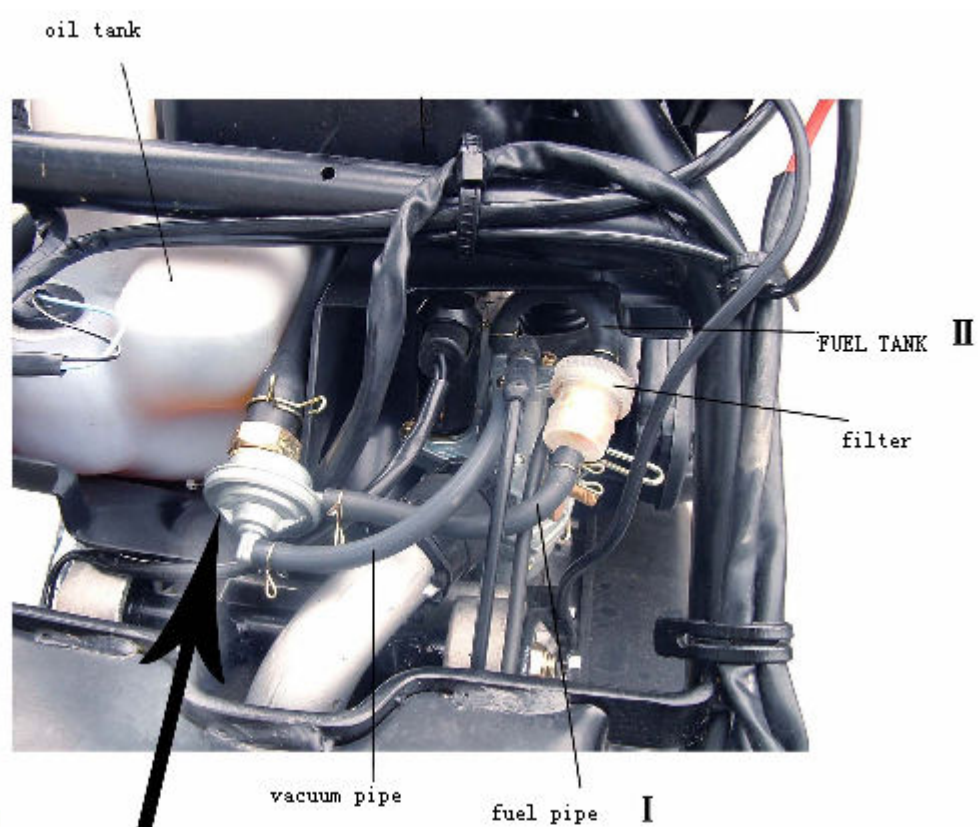

Starting relay



Ignition coil

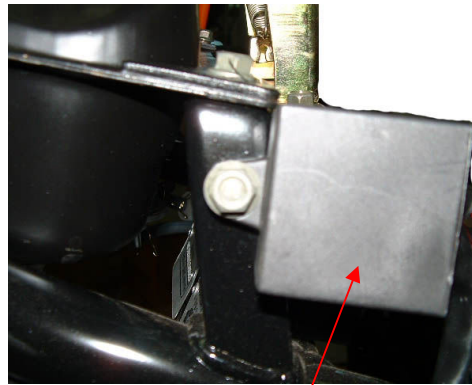

CDI




HORN


POWER SWITCH



SPECIAL TOOLS LISTED BELOW FOR REMOVAL AND REINSTALLATION

NO.	TOOL NUMBER	DESCRIPTION
1	T01	“T” shape of sleeve
2	T02	sleeve tools (7mm,8mm,10mm,12mm,13mm)
3	T03	flywheel remover
4	T04	sleeve (18mm,24mm)
5	T05	screw remover
6	T07	cylinder pressure gauge
7	T08	piston pin remover
8	T09	spark plug remover
9	T10	flywheel lockbolt remover
10		clutch clamp

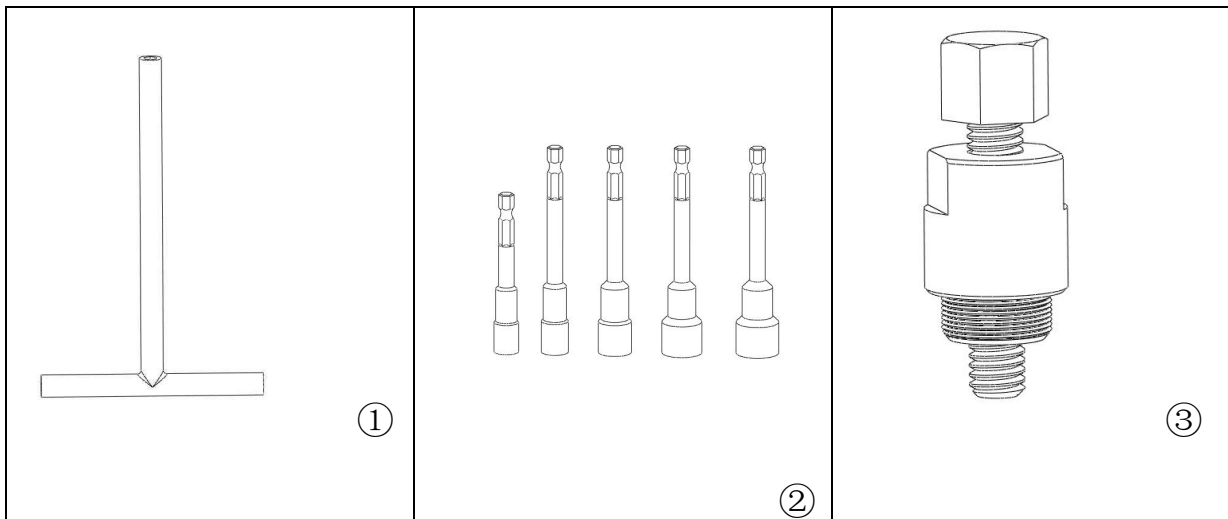

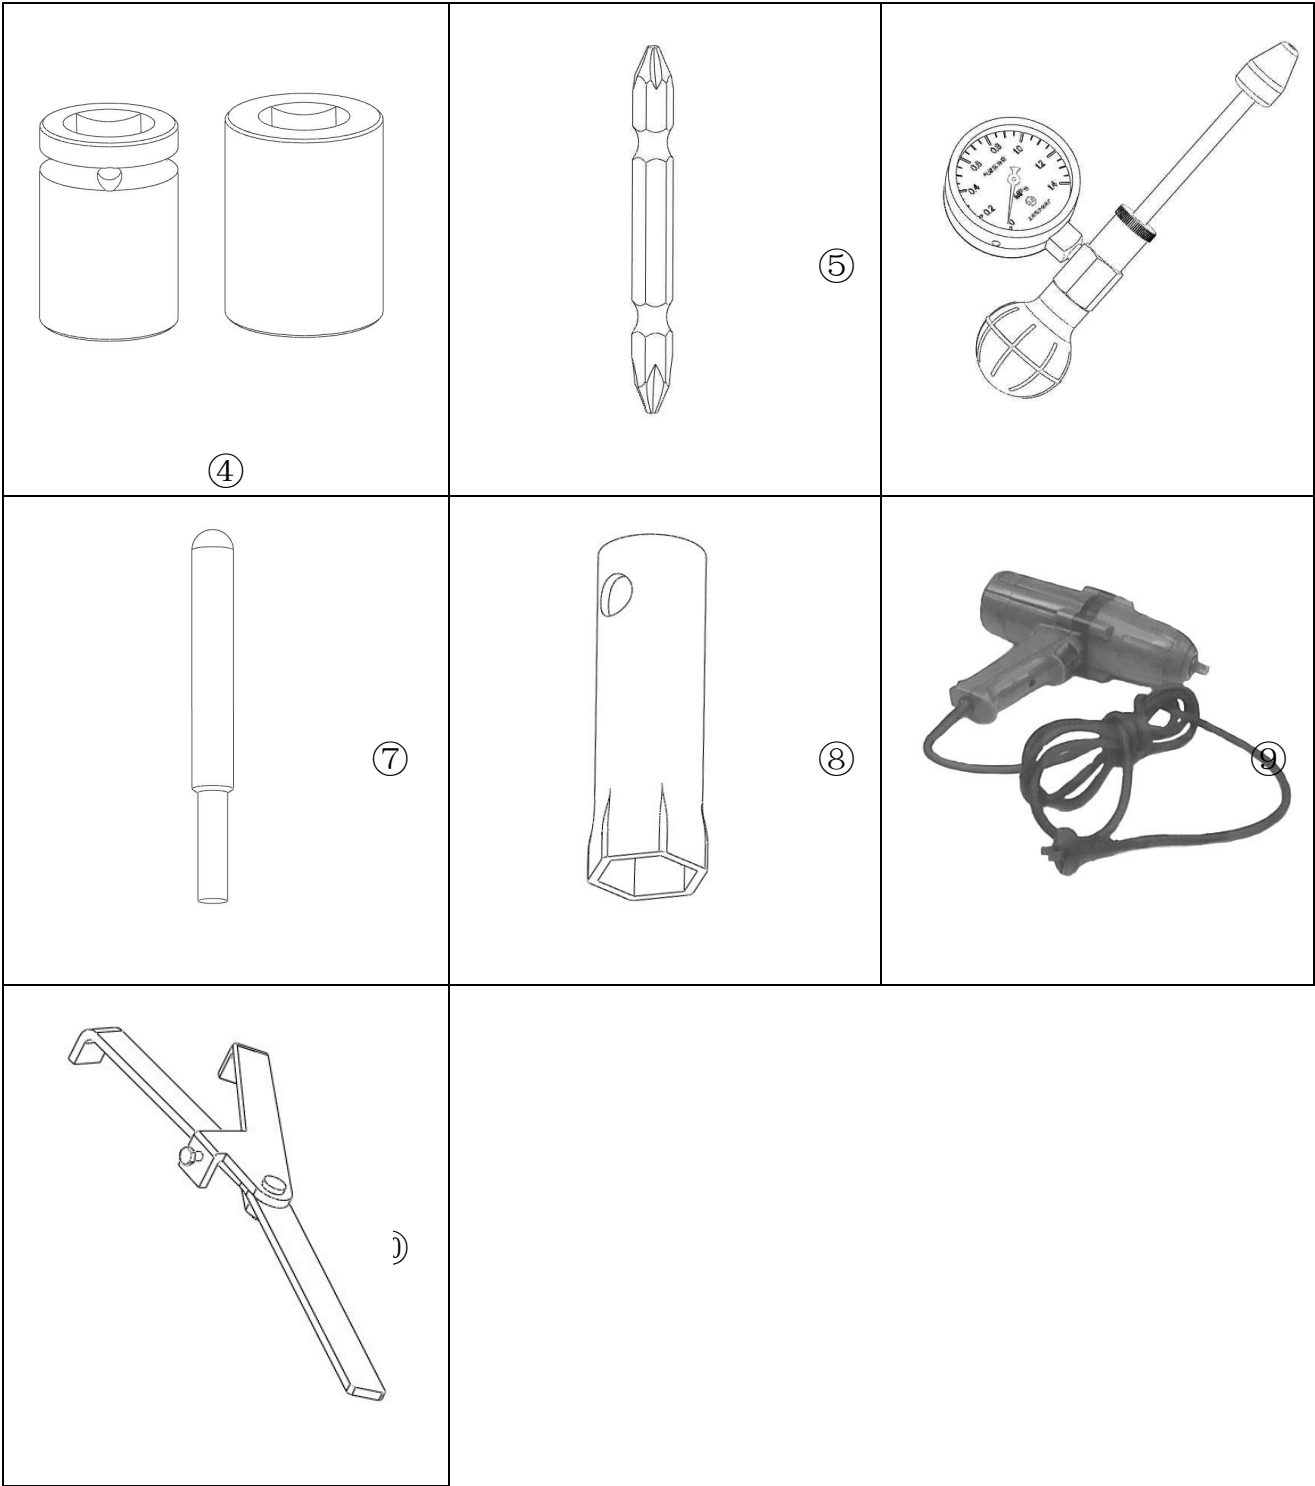

TIGHTENING TORQUE OF SCREW THREAD PARTS

ENGINE

ITEM	N. M
Cylinder guide cover tapping screw	1-4
Fan guide cover lock bolt	10-12
Cylinder cover locknut	15-18
Spark plug	15-18
Inlet pipe lock bolt	10-12
Cooling fan impeller lock screw	10-12
Flywheel lock bolt	45-50
Magneto stator coil lock screw	10-12
Magneto exciting lock screw	3-5
Oil pump lock screw	5-9
Right crankcase lock bolt	10-12
Bearing press board lock bolt	10-12
Cylinder double head bolt	15-18
Motor tightening bolt	10-12
Left crankcase cover lock screw	10-12
Left crankcase cover lock bolt	10-12
Main drive wheel face locknut	35-38
Driven wheel face locknut	35-38
Driven wheel face clutch locknut	55-60
Exceeding clutch outside lock screw	10-12
Electrical start idle press board screw	10-12
Gearcase lock bolt	10-12
Left crankcase discharging oil hole lock bolt	22-25
Left crankcase positioning pin shaft locknut	18-22

SERVICE DATA

CYLINDER+PISTON+PISTON RING

Unit: mm(in)

ITEM	STANDARD		TOLERANCE
Piston to cylinder clearance	0.06-0.07 (0.0024-0.0028)		0.120 (0.0047)
Cylinder bore	40.005-40.020 (1.5750-1.5756)		40.075 (1.5778)
Cylinder diameter	39.94-39.955 (1.5724-1.5746)		39.885 (1.5703)
Cylinder distortion	_____		0.04 (0.0016)
Cylinder head distortion	_____		0.04 (0.0016)
Piston ring free cotter end clearance	1 st ring	0.02~0.06mm	_____
	2en ring	0.02~0.06mm	_____
Piston ring close end clearance	0.15-0.35 (0.0059-0.0138)		0.8 (0.0315)
Piston ring to groove clearance	1 st ring	0.02~0.06(0.0008~0.0024)	
	2en ring	0.02~0.06(0.0008~0.0024)	
Piston pin bore	10.002-10.008 (0.3938-0.3940)		10.030 (0.3949)
Piston pin outside diameter	9.994-10.000 (0.3935-0.3937)		9.98 (0.3929)

CONNECTING ROD+CRANKSHAFT

ITEM	STANDARD	LIMIT
Conrod small end	13.995-14.006(0.5510-0.5514)	14.040(0.5528)
Conrod deflection	_____	3.0(0.12)
Conrod web to web width	38-38.1(1.496-1.500)	_____
Crankshaft runout	_____	0.05(0.002)

OIL PUMP

ITEM	SPECIFICATION
Pump reduction ratio	30.000(30/1)
CCI pump discharge ratio(full open)	1.1-1.3ml/5min(working pressure is 0.06Mpa and rotating speed 118r/min)

CLUTCH

Unit: mm(in)

ITEM	STANDARD	LIMIT
Clutch wheel inner diameter	112.00-112.15(4.410-4.415)	112.5(4.429)
Clutch shoe thickness	1.8(0.071)	1.2(0.005)
Clutch engagement	3000 ± 300r/min	
Clutch closedown	6000 ± 300r/min	

TRANSMISSION SYSTEM+DRIVING CHAIN

UNIT: mm(in) EXCEPT RATIO

ITEM	STANDARD	TOLERANCE
Final reduction ratio	/	/
Gear reduction ratio	/	/
Drive belt width	16.8-17.2(0.6614-0.6772)	16.4(0.6457)
Driven face spring free distance	69(2.72)	64.5(2.54)

CARBURETOR

Manufacturer and type	SANGUO, flat inhale stopper type
Identification code	PZ19JB
Throat tube diameter	19mm
Main jet size	#80
Pilot jet size	#57.5
Oil needle clamp position	3rd groove
Idle air adjusting screw	Extrude $1\frac{1}{2} \pm \frac{1}{2}$ turnout
Float height	13 ± 1mm

ELECTRICAL

UNIT: mm(in)

ITEM	SPECIFICATION		NOTE
Ignition timing	15° AT 1500RPM		
Spark plug	TYPE	E7RTC(NANJING)	
	GAP	0.5~0.7mm (0.020~0.028)	
Spark performance	Over 8 (0.3) at 1 atm		
Ignition coil resistance	Primary /secondary	0.2Ω ~0.3Ω /7KΩ ~10KΩ	Plug cap-ground

ITEM	SPECIFICATION		NOTE
Magneto coil resistance	Lighting	<2 Ω	Gree/Red—GROUND
	Charging	<2 Ω	White —Ground
	Exciting	200 ± 20 Ω at 20°C	Blure / White or Gree / White—Ground
Generator no-load voltage	More than 52v at 5000r/min		
Regulated voltage	More than 12-14V at 5000r/min		

WATTAGE

ITEM	SPECIFICATION
Headlight high beam/	12V 35W/35W
Dipped headlight	12V 35W
Taillight	12V 21W/5W
Front turn light	12V 10W
Rear turn light	12V 10W
Turning signal indicator light	12V 3W
High beam indicator light	12V 1.7 W
Meter indicator light	12V 1.7 W
Alarm indicator light	Light diode

Brake and rim

Item	Specification		Tolerance
Brake lever play	Rear	15-20mm	/
Hub diameter	Rear	φ 110 mm	φ 110.7 mm
Brake shoe thickness	Rear	4mm	2.5 mm
Brake disc thickness	front	4.0±0.2	3 mm
Tire size	Front/rear	120/70-12 130/70-12	/
Tire surface thickness	front/rear	120/130	/

SUSPENSION

Front shock absorber stroke	88 mm	Rear shock absorber stroke	45 mm
-----------------------------	-------	----------------------------	-------

Tire air pressure

Front tire air pressure	175kpa	Rear tire air pressure	196kpa
-------------------------	--------	------------------------	--------

Fuel +engine oil

Item	Specification	Remark
Fuel type	Gasoline applied should be graded 90 or high octane number, unleaded gasoline is recommended.	
Fuel tank capacity	5.2L	
Gear oil	SAE90	
Gear oil tank capacity	0.1L	
Brake fluid type	DOT3 or DOT4	